INSTRUCTIONS AND WARRANTY

MODEL SWT30

SEASHELL WET TUNES™ SHOWER RADIO


Congratulations! You are the proud owner of the Salton Seashell Wet Tunes™ Shower Radio. To obtain maximum satisfaction and enjoyment, please follow these simple guidelines.

1. Do not submerse the radio in water. It is water resistant, not waterproof.

2. **SIGNAL RECEPTION:** Turn on the radio and move it around to various locations and positions on the wall to determine a suitable location that provides good reception. Avoid locations that lie directly in the path of the shower stream.

WALL MOUNTING

- a. Select a spot on the wall that is as smooth as possible such as smooth ceramic tile. Thoroughly clean the spot of all soap, oil or other films using a household cleaning solvent such as Acetone or nail polish remover. **DO NOT USE TILE CLEANER OR OTHER WAX BASED SUBSTANCES.** Allow area to dry completely. Room temperature should be at 60 to 70 degrees Fahrenheit.
- b. For best results, hold adhesive tube (supplied in package) at a 45-degree angle and apply sealant to mounting plate approximately 1/8" bead and 1/4" from edges. Use entire content.
- c. Place mounting plate against cleaned wall surface, using enough pressure to displace air, but not adhesive

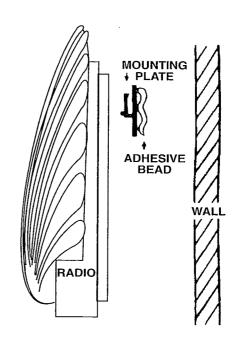

WARRANTY

Wet Tunes™ Seashell Shower radio is warranted to be free from manufacturing defects for one (1) year from date of purchase. This does not cover damage caused by accident or misuse. If your radio becomes defective during the warranty period, please return the product, prepaid, with proof of purchase and reason for return to the address listed below. Please include \$6.00 check or money order for postage and handling. Send the radio to:

Salton Maxim Housewares Inc. 550 Business Center Drive Mt. Prospect, IL 60056