


OWNER'S MANUAL  
Model No. JC7

# *LIVING COLOR*® **Citrus Juicer**

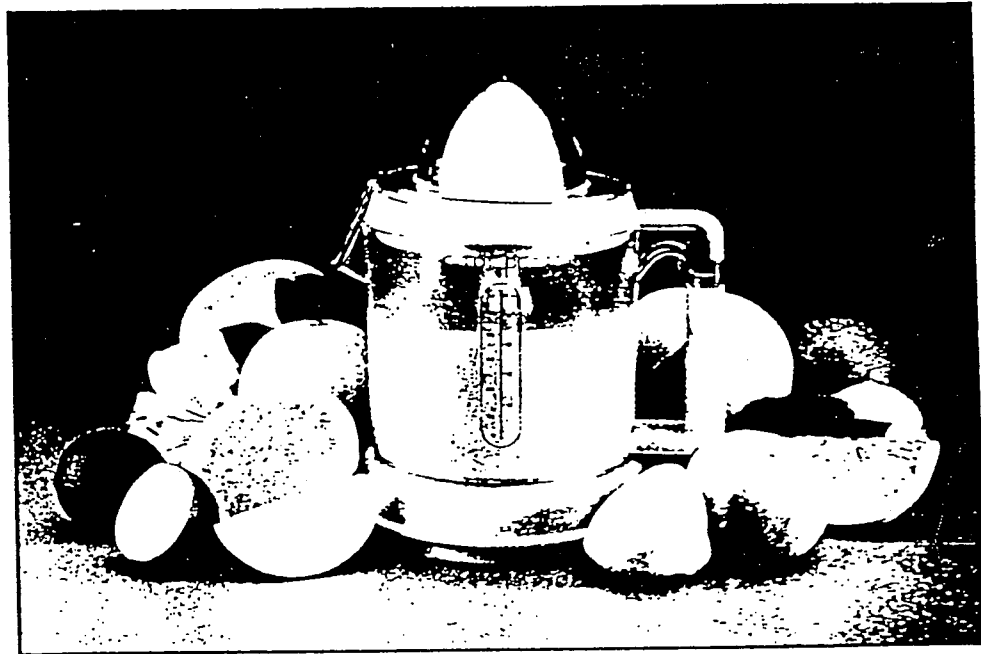

**salton**®

# Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using your Citrus Juicer.
2. To protect against risk of electrical shock, do not put the base of your Citrus Juicer in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to the nearest Salton/MAXIM Service Center for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by Salton/MAXIM Housewares, Inc. may cause fire, electrical shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter.
10. Do not let cord contact hot surfaces, including the stove.
11. Be sure unit is completely assembled before using.

**THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY**

## Save These Instructions

Servicing should be performed by an authorized service representative.

## Polarized Plug

This appliance has a **polarized plug** (one blade is wider than the other): To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.


## Short Cord Instructions

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

If a longer detachable power-supply cord or extension cord is used, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and (2) the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

# Getting To Know Your Salton® JC7 Citrus Juicer

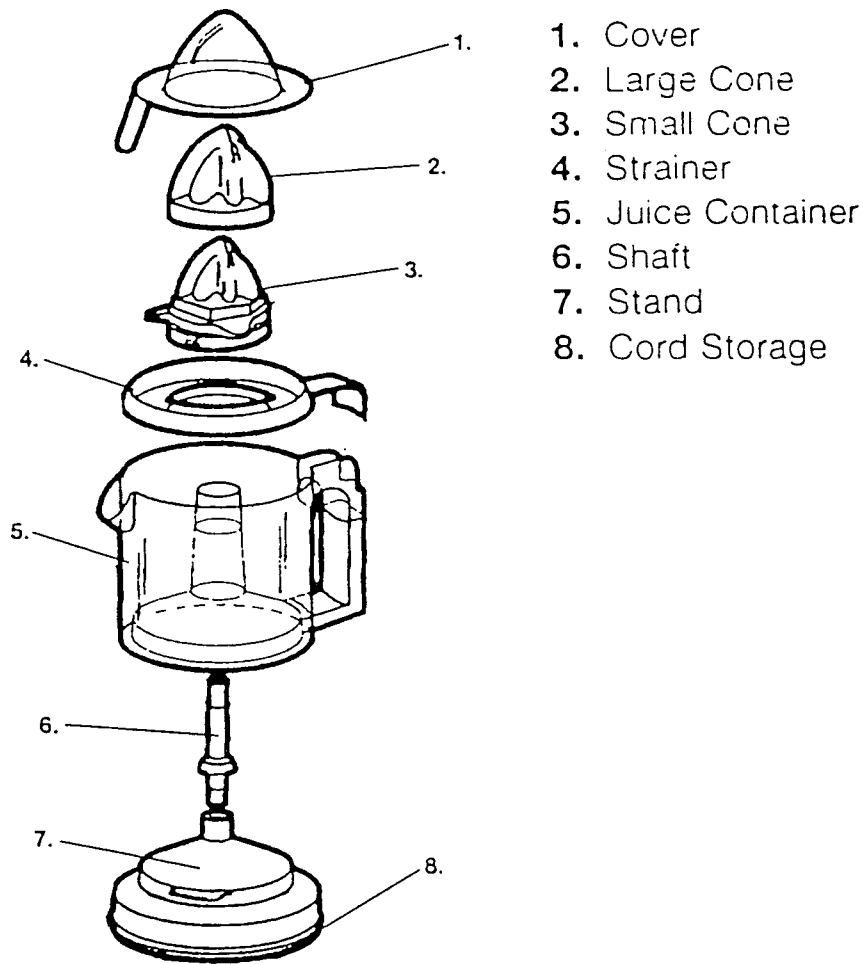

## How To Use Your Citrus Juicer

1. Before using the Citrus Juicer, wash the Juice Container, Strainer, Large and Small Cones and Cover. Position the Juice Container on the motor section and secure tightly.
2. Place the Strainer and the Squeezer Cone in position.
3. Unwind the required length of cord from the Citrus Juicer to the 120V electrical outlet and plug in.

## How To Use Your Citrus Juicer *(continued)*

4. The appliance will switch itself on automatically (running either clockwise or counter-clockwise) as soon as pressure is applied to the squeezer cone.
5. There are two different size cones which are designed for extracting complete juice from different sizes/shapes of citrus fruit. Use the small cone for juicing limes and lemons; the large is for oranges and grapefruits.
6. The amount of fruit pulp in the juice can be continuously adjusted by turning the container to the appropriate position.

***To adjust the fruit pulp contents in your freshly squeezed juice:***

- Turn the container to the **LEFT**, the fruit pulp content is lower.
  - Turn the container to the **RIGHT**, the fruit pulp content is higher.
7. To serve the juice, remove the squeezer cone and strainer before removing from the motor section.

## Cleaning Your Citrus Juicer

**CAUTION: DO NOT IMMERSE THE BODY OF THE UNIT INTO WATER OR ANY OTHER LIQUID.**

1. Before cleaning, always unplug from outlet and then totally disassemble.
2. With the exception of the motor section, all parts are suitable for top-rack dishwasher cleaning.
3. The motor section must be cleaned with a damp cloth **ONLY**.

### IMPORTANT NOTICE

*If any parts are missing or defective,*

**DO NOT** return this product.

*Please call our Customer Service Department for assistance.*

**800-233-9054** Monday - Friday 9am - 5pm CST

*Thank You*

## ONE-YEAR LIMITED WARRANTY

This Salton/MAXIM product warranty extends to the original consumer purchaser of the product.

**Warranty Duration:** This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

**Warranty Coverage:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton/MAXIM Housewares, Inc., or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**Warranty Disclaimers:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for Salton/MAXIM Housewares, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

**Warranty Performance:** During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at Salton/MAXIM's option) when the product is returned to the Salton/MAXIM facility. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

### Service and Repair

Should the appliance malfunction, you should first call toll-free 1-800-233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CUSTOMER SERVICE stating that you are a consumer with a problem.

**In-Warranty Service (USA)** for an appliance covered under the warranty period, no charge is made for service or postage. Call for pre-paid return mailing label. (U.S. Customers Only)

**In-Warranty Service (Canada)** for an appliance covered under the warranty period, no charge is made for service or postage. Please return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the address listed below. Customs duty/brokerage fee, if any, must be paid by the consumer.

**Out-of-Warranty Service:** A flat rate charge by model is made for out-of-warranty service. Include \$6.00 (U.S.) for return shipping and handling.

Salton/MAXIM cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem; your full return address and daytime phone number; a note describing the problem you experienced; a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

Return the appliance to:

ATTN: Repair Department, Salton/Maxim Housewares, Inc.  
550 Business Center Drive, Mt. Prospect, Illinois 60056

**For more information on Salton/MAXIM products:**

visit our website: URL <http://www.salton-maxim.com> or  
E-mail us at SALTON 550 @ aol.com

Printed in China

© 1997 Salton/MAXIM Housewares, Inc.