


**WELBILT®**

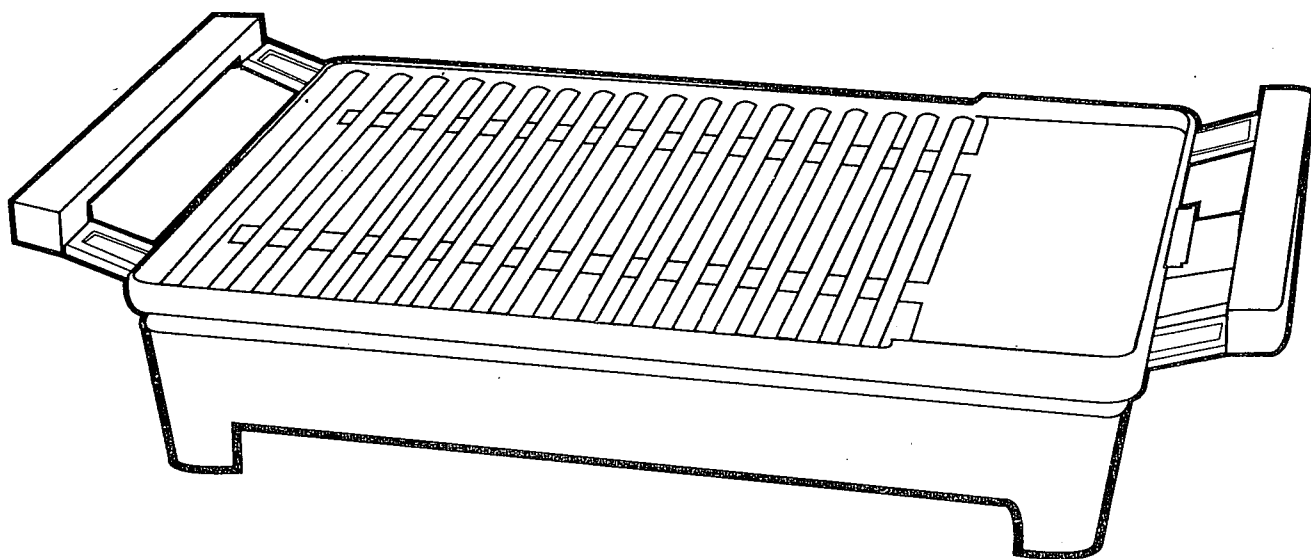

---

**SIZZLIN® INDOOR GRILL**

**SG2000**

**Instruction Manual**

# **IMPORTANT SAFEGUARDS**

---

**When using electrical appliances, basic safety precautions should always be followed, including the following:**

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not immerse cord or plug in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not let cord hang over edge of table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
11. Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, remove plug from wall outlet.
12. Do not use outdoors.
13. Use only with plug provided.
14. Do not use appliance for other than intended use.

## **SAVE THESE INSTRUCTIONS**

### **GROUNDING INSTRUCTIONS**

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

**WARNING:** Improper use of the grounding can result in a risk of electric shock.


Consult a qualified electrician or service center if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

## **HOUSEHOLD USE ONLY**

This unit has a short power-supply cord to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if you are careful in its use:

1. The extension cord must be a 3-wire extension cord that has a 3-blade grounding plug, and a 3-slot receptacle that will accept the plug on the appliance.
2. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
3. An extension cord with the power cord must be arranged so that it will not drape over the counter or tabletop where it can be pulled on by children or tripped over accidentally.

# **YOUR WELBILT SIZZLIN' GRILL**

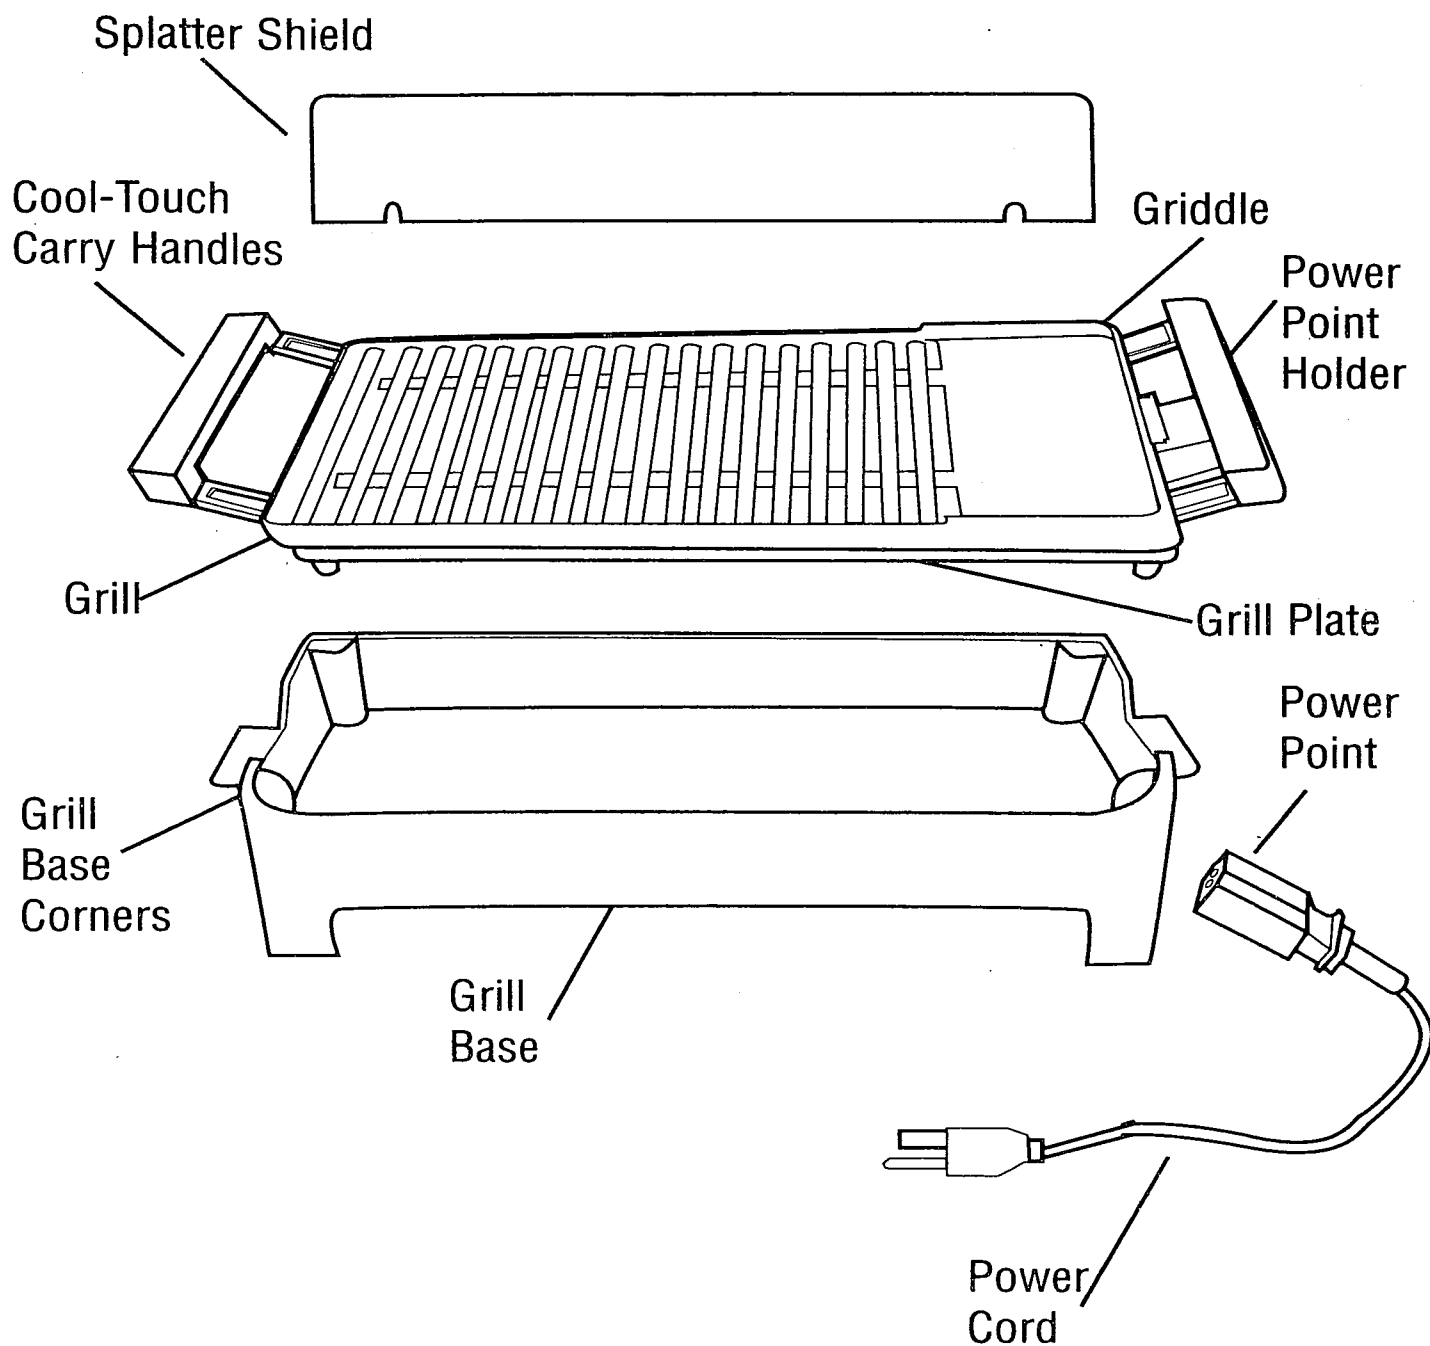

# **BEFORE YOUR FIRST USE**

---

The Sizzlin' Grill is designed for indoor use only. It is a stand-alone barbecue grill. Do not use charcoal, lighter fluids or gases in combination with this grill.

Carefully unpack the Sizzlin' Grill and remove all packaging materials. Wipe the surface of the grill with a clean, damp cloth or sponge, then dry with another cloth. This will remove any dust that may have settled during packaging.

**Caution:** Do not immerse cord in water or any other liquid.

**Caution:** Use only with the plug provided.

Set the Sizzlin' Grill on a clean, dry counter or sturdy table away from an open flame or hot burners.

# USING YOUR SIZZLIN' GRILL

---

1. Place the grill on a flat, level surface, such as a countertop or table.
2. Place the Grill Plate onto the Grill Base. Be sure the Grill Plate Feet are firmly located on the corners of the Grill Base. Attach the Splatter Guard by aligning the slots at the bottom of the guard with the the back of the grill plate and slide the guard downward.

Aluminum foil may be used to line the Grill Base. This will catch the grease from the food, making the base easy to clean. Cut the foil so that it only covers the bottom of the base interior, not the sides.

**Caution:** When lining the Grill Base, it is very important not to allow the foil to hang over the sides. This will stop air circulation and could cause fire.

3. Insert Power Point into the Power Point Holder on the Grill Plate. Plug the cord into a 120 volt 60 Hz AC only outlet. When the grill is switched on, the red "on" light will come on. This light is located on the Power Point of the cord.

**Caution:** Be sure that this is the only appliance on the electrical circuit.

4. Allow the Sizzlin' Grill to preheat for approximately 10 minutes.

## CARE AND CLEANING

---

Before cleaning, be sure to unplug the cord from the outlet, then remove the Power Point from the Grill Plate. If necessary, wipe the cord with a damp cloth.

**Caution:** Do not immerse the cord in water or other liquid.

Remove and dispose of foil, if used. Wash the Grill Plate, Grill Base and Splatter Guard either by hand or in the dishwasher. If by hand, wash in hot, soapy water, rinse and dry.

Do not use scouring pads or harsh cleaners on either the Grill Plate or Grill Base. If necessary, use a nylon bristle brush.

Do not let the Grill Plate, Grill Base or Splatter Guard soak overnight. This could damage the nonstick coating.

# GRILLING GUIDE

---

Use the following easy guidelines for successful grilling:

1. Heat the Sizzlin' Grill for 10 minutes.
2. Marinate meats before grilling for extra flavor and tenderness, if desired.  
(Marinades with added sugar will cause meats to brown more quickly.)
3. Before grilling, partially cook ribs and uncooked smoked or fresh sausages for best results. If not partially cooked, these meats may become overbrowned on the outside before the center is done.
4. Turn food once during grilling unless otherwise directed.
5. If desired, brush with barbecue or other sauce during last 5 to 10 minutes of grilling.

Food	Grilling Time (In Minutes)
Whole Fish	8-10
Fish Fillets	5-7
Fish Steaks	15-20
Shrimp	3-6
Boneless, skinless chicken breasts	15-20
Chicken Drumsticks	25-30
Chicken Wings	10-15
<u>Beef Steaks</u>	
1-inch thick	10-15
3/4-inch thick	8-12
<u>Pork Chops</u>	
1/2-inch thick	10-12
3/4-inch thick	12-15
Kabobs	10-12
Hot Dogs	7-9
Vegetables	5-10
Sausages	12-15
Bacon	4-6
Pork Ribs	20-25

# GRILLING TIPS

---

- When grilling fish, use a large flat spatula or turner to turn the fish.
- When grilling kabobs, soak bamboo skewers in water at least 30 minutes before using to prevent burning.
- Always use the Splatter Guard when grilling meat containing fat, such as beef, pork, sausages and chicken with skin.
- Use separate utensils and platters for raw and cooked meat or wash platter used for raw meat before placing cooked meat on it.
- Tender meat cuts, such as sirloin and tenderloin, are generally more suitable for grilling than less-tender meat cuts, such as round or rump. Marinate less-tender meat cuts in meat tenderizer before grilling.
- Always marinate in a tightly covered nonmetal dish, and turn the food occasionally. Be sure to refrigerate all meats while marinating. Heavy plastic bags are also convenient for marinating - add the food and marinade, then tightly seal the bag. Turn the bag now and then to redistribute the marinade.
- If leftover wet marinade is to be used as a sauce with the cooked food, be sure to place it in a small pan and heat it to a rolling boil before serving to eliminate any bacterial growth.
- When grilling kabobs, turn and brush with marinade frequently until meat and vegetables are done. Leave a little space between foods threaded on skewer for more even cooking.



# LIMITED WARRANTY

---

## **What is covered and for how long?**

This warranty covers all defects in workmanship or materials in the mechanical and electrical parts contained in this Welbilt® product for a period of 12 months from the date of purchase as long as you are able to provide a valid proof-of-purchase.

## **YOU MUST KEEP YOUR ORIGINAL SALES SLIP OR OTHER PROOF-OF-PURCHASE PROOF OF THE DATE OF PURCHASE IN ORDER TO OBTAIN WARRANTY SERVICE**

## **Who is covered?**

The original retail purchaser of this Welbilt® product.

## **What will be done?**

We will repair or replace, at our discretion, any mechanical or electrical part which proves defective in normal household use during the applicable warranty period.

## **How can I get service?**

Contact the Welbilt Customer Center at (800) 872-1656 for the mailing address of the Welbilt® authorized Factory Repair Center.

## **DO NOT RETURN THE PRODUCT TO WELBILT.**

All services must be performed by a Welbilt® authorized Service Depot or by Welbilt Service Department. A copy of a valid proof-of-purchase will have to be submitted to obtain warranty service. In the event service is required:

- a. the unit must be shipped prepaid via U.P.S. or Parcel Post insured to the Welbilt® authorized Factory Repair Center.
- b. along with your machine, include a check or money order for \$9.95 made payable to Welbilt® for return handling and postage charges.

## **THIS LIMITED WARRANTY COVERS UNITS WITHIN THE CONTINENTAL UNITED STATES AND DOES NOT COVER**

- Damages from improper installation
- Damages in shipping
- Defects other than manufacturing defects
- Damages from misuse, abuse, accident, alteration, lack of proper care and maintenance or incorrect current or voltage
- Damages from other than household use
- Damage from service by other than an authorized dealer or service center
- Labor, transportation and shipping charges for removal of a defective part and installation of any replacement parts
- Any transportation and shipping charges

## **THIS LIMITED WARRANTY IS GIVEN IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.**

The remedy provided in this warranty is exclusive and is granted in lieu of all other remedies. This warranty does not cover incidental or consequential damages. Some states do not allow the exclusion of incidental or consequential damages, so the above limitation may not apply to you. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

## **IMPORTANT NOTICE**

---

***PLEASE DO NOT RETURN TO STORE,***

If you have any problems with unit contact the  
**Welbilt Customer Satisfaction Center** for assistance.

**PHONE: 1-800-872-1656**

Please read operating instructions before using this product.

Model # SG2000

Made in China

Power Requirement: 120V, 60Hz

Power Consumption: 1500 Watts

# ***WELBILT®***

---

APPLIANCE CORP. OF AMERICA

P.O.Box 220709 • 175 Community Drive  
Great Neck, New York 11021