 


Model No. MMHM2S

# Spa Therapy™

## HYDRO MASSAGER

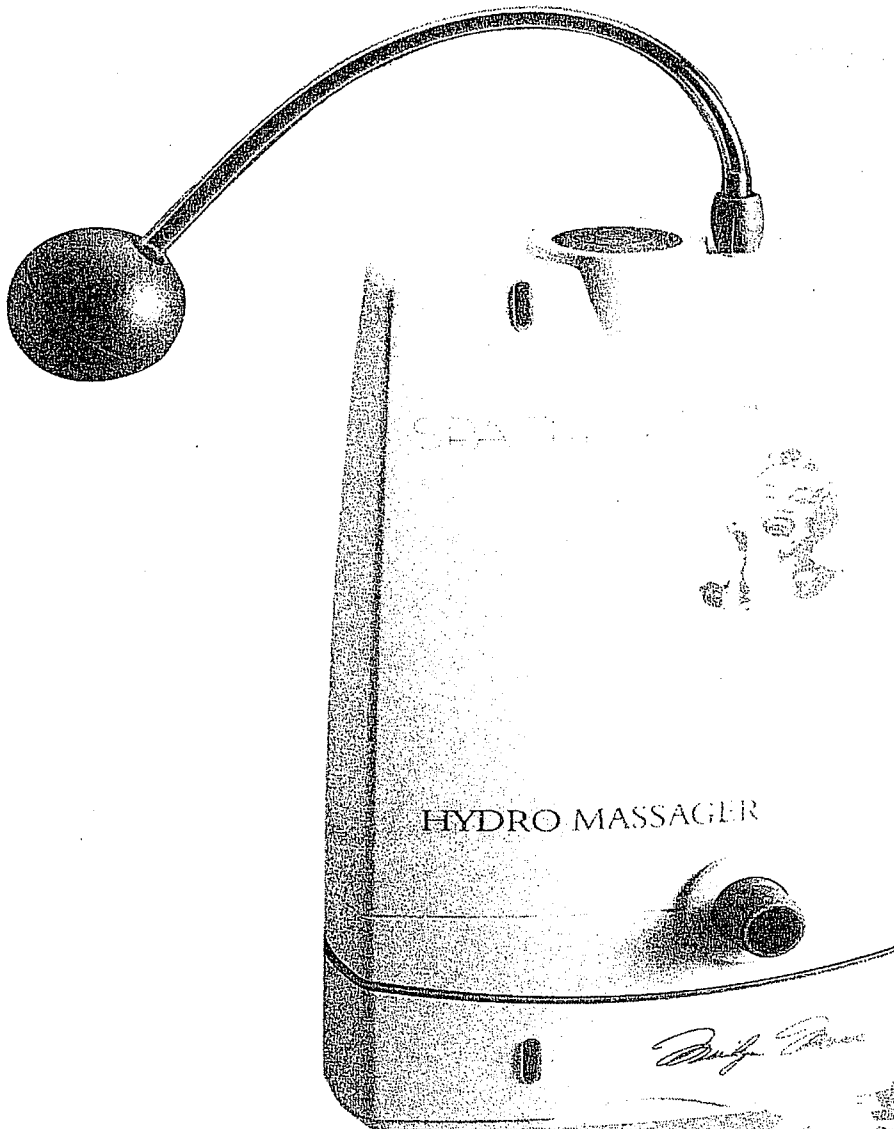 


**salton®**

# The Archives of Milton H. Greene, L.L.C.

*Buffy Sainte-Marie*™



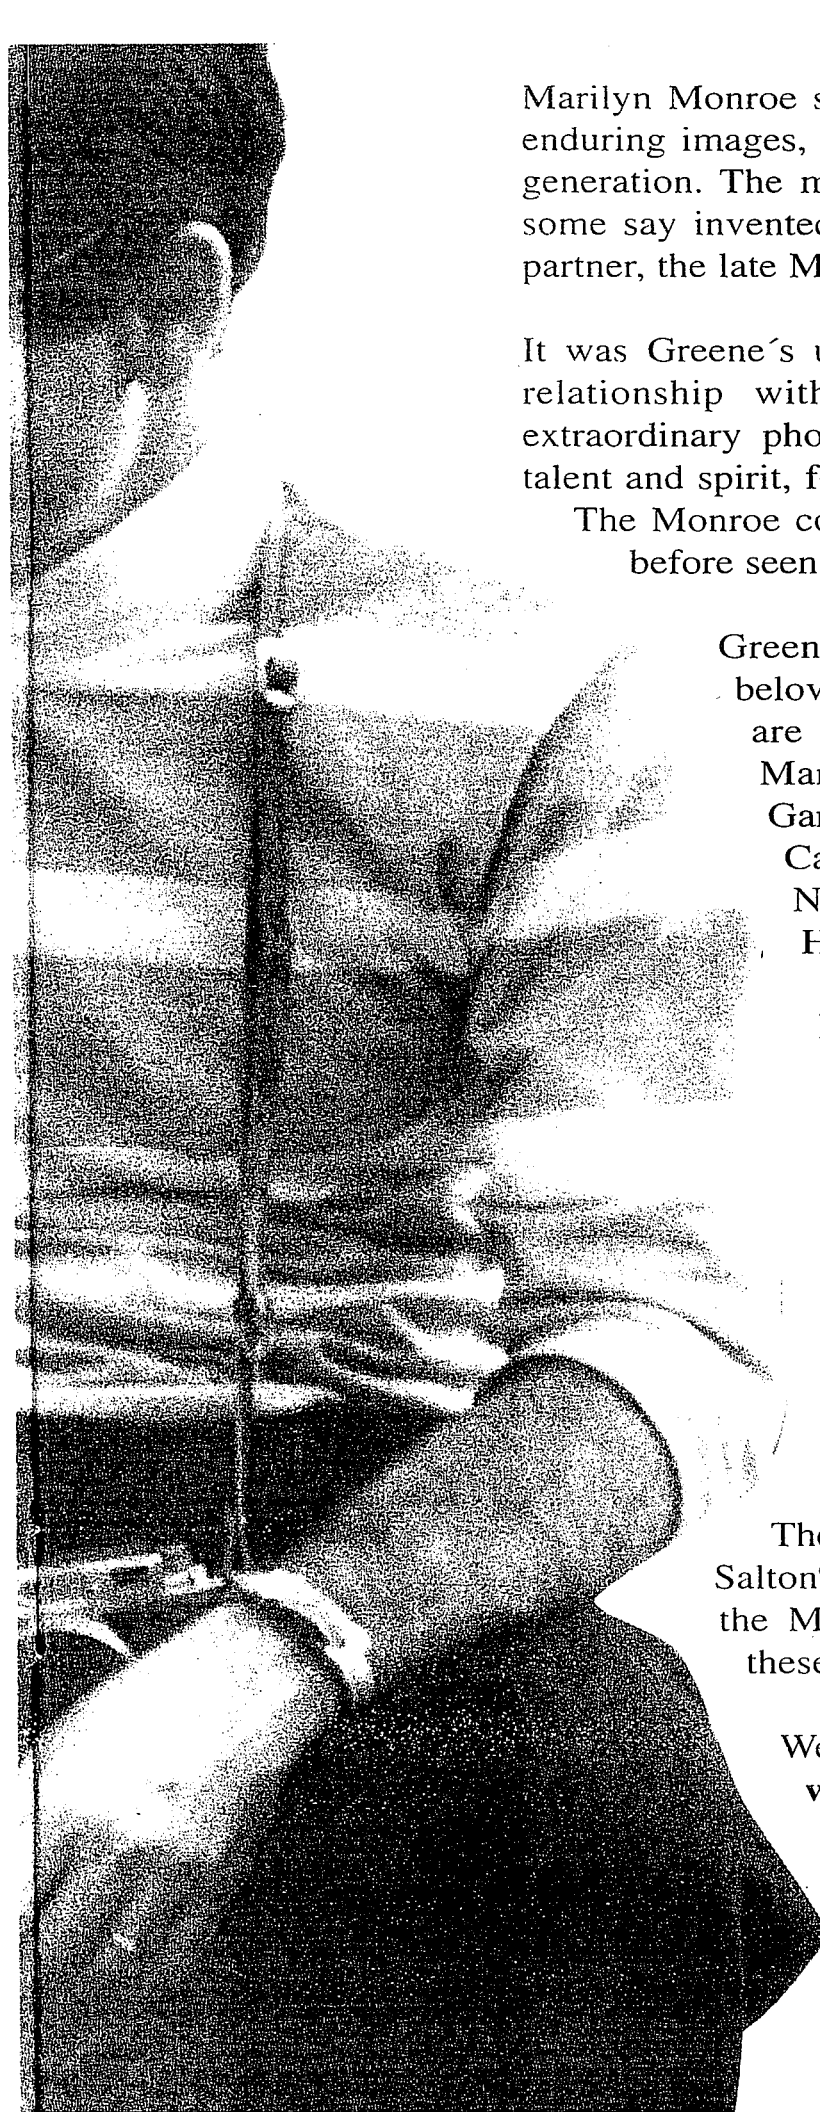

Marilyn Monroe stands as one of the 20th century's most enduring images, an icon reborn, it seems, with each new generation. The man who best understood and captured - some say invented - this phenomenon was her friend and partner, the late Milton H. Greene.

It was Greene's unique personal friendship and business relationship with Marilyn Monroe that allowed the extraordinary photographs, recording her moods, beauty, talent and spirit, for which he is most widely remembered.

The Monroe collection contains more than 2,000 never before seen photographs of the screen legend.

Greene's remarkable portraits of our most beloved artists, musicians, and personalities are legendary. Some of his subjects are Marlene Dietrich, Frank Sinatra, Judy Garland, Sammy Davis Jr., Ava Gardner, Cary Grant, Bette Davis, Tony Curtis, Paul Newman, Steve McQueen, Audrey Hepburn, Gene Kelly and Sophia Loren.

In a return to an era of lost elegance, The Archives, headed by Milton's eldest son Joshua, is preserving the vision and timeless works of the celebrated photographer. The Archives is dedicated to the restoration, license and sale of an unprecedented wealth of fine photography for use in traditional and interactive marketing, mass media, merchandising, exhibition and private collections.

The Archives, working in conjunction with Salton®, specifically restored and made available the Monroe images used in the packaging of these products.

We invite you to visit our website at [www.archivesmhg.com](http://www.archivesmhg.com) or feel free to contact us.

The Archives of  
Milton H. Greene, LLC  
278 Maple Street Suite E  
Florence, OR 97439  
541-997-4970 fax: 541-997-5795

# IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

## READ ALL INSTRUCTIONS

### **DANGER - *To reduce the risk of electrocution:***

1. Do not place or store Recharging Unit where it can fall or be pulled into a tub or sink.
2. Do not place or drop Recharging Unit into water or any other liquid.
3. If the Recharging Unit falls into water, unplug it immediately. Do not reach into the water.

 
### **WARNING - *To reduce the risk of burns, electrocution, fire, or injury to persons:***

1. Close supervision is necessary when this appliance is used by or near children or invalids.
2. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Do not operate appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped in any manner. Return appliance to the nearest authorized service facility for examination and repair.
4. Keep the cord away from heated surfaces.
5. Never block the air openings of the appliance or place it on a soft surface, such as a bed, pillow or couch, where the air openings may be blocked. Keep the air openings free of lint, hair or dust.
6. Never use while drowsy.
7. Never drop or insert any object into any opening or hose.
8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.


**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

# GETTING TO KNOW YOUR Salton *Hydro Massager*

1. Air Intake Hose with Float
2. Air Regulator
3. Power Button
4. Indicator Light (green/red)
5. Swiveling Nozzle
6. Recharging Unit Indicator Light (green)
7. Water Collector
8. Recharging Unit

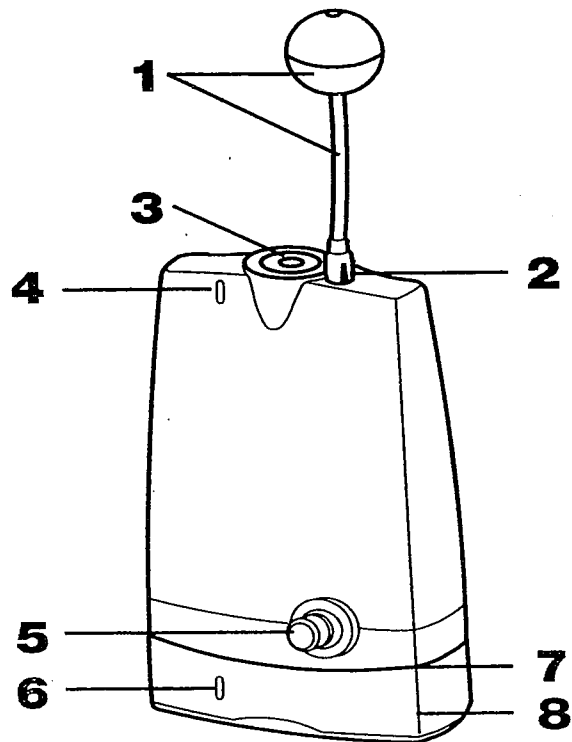

 9. Suction Cup Attachment
10. Wall Bracket
11. Rubber Feet
12. Power Cord output
13. Rating Label
14. Handgrip Attachment

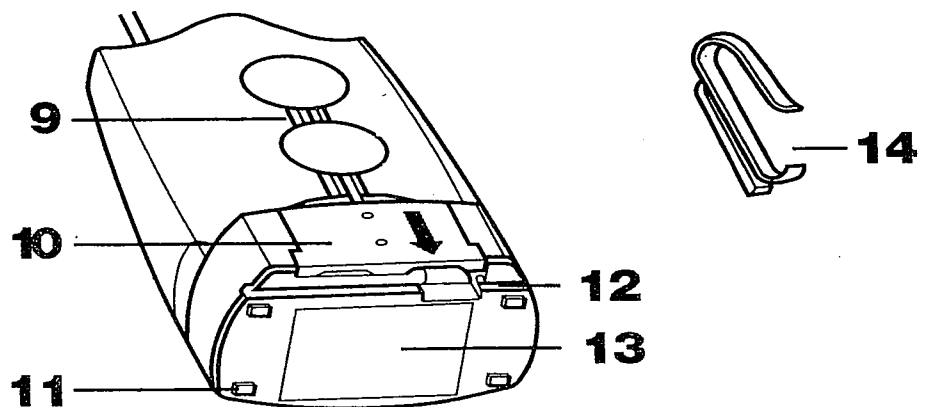

# **SPECIFICATIONS FOR YOUR SALTON *Hydro Massager***

**Voltage:** 120V, 60HZ

**Capacity:** Approximately 30 l/min. at max. speed

**Weight:** Approximately 2lbs. (900 g)

**Dimensions:** Approximately 9" x 5" x 4" (23 x 13 x 10cm)

**Operating time:** Maximum speed - 12 to 15 minutes when fully charged  
Slow speed - 20 to 25 minutes when fully charged

 
**Charging time:** Maximum charging time after complete discharge-  
12 hours

**Indicator lights:** Yes

**Inductive charging**

# WALL MOUNTING INSTRUCTIONS

The Recharging Unit can be mounted to the wall by using the Wall Bracket. Make sure to choose a stable location to install the Unit. Simply slide the Wall Bracket out from the back of the Recharging Unit, place it in a suitable position on the wall, then mark and drill the holes. Insert a dowel plug into each of the drilled holes and secure the Wall Bracket with both screws. Slide the Recharging Unit onto the secured Wall Bracket.

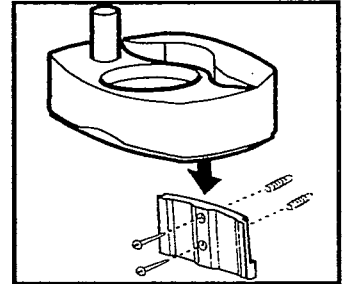

## WARNING:

- Do not install Recharging Unit in the bathtub, shower or above a sink.
- Do not install Recharging Unit directly below wall outlets.
- Do not install Recharging Unit near hot or heated surfaces.
- Always install Recharging Unit in such a way that it cannot fall into water or any other liquid.

# INDICATOR LIGHTS

## **Recharging Unit:**

The green Indicator Light constantly illuminates after the unit has been plugged into any 120 V AC outlet.

## **Hydro Massager:**

The green Indicator Light constantly illuminates during recharging. The constant green Light will begin to flash once charging capacity is reached. It is not possible to overcharge the batteries. The red Indicator Light will begin to flash after 12-15 minutes of use at Maximum speed, and 20-25 minutes of use at Slow speed, to inform you that the batteries will soon be drained. The appliance automatically switches itself off after an additional 3-5 minutes. The red Indicator Light will continuously illuminate when the battery power has been depleted. The Hydro Massager can no longer be switched on at this point in order to protect the batteries against total discharge. The Hydro Massager can be used again only after the batteries have been recharged.

 
 
 
 
## USING THE HYDRO MASSAGER FOR THE FIRST TIME

In order to achieve maximum capacity from the batteries, the Hydro Massager must be fully charged before it is used for the first time (charging time: approximately 12 hours). Place the Hydro Massager on the Recharging Unit and plug into a 120 V AC outlet. A green Indicator Light will illuminate on the Recharging Unit and the Massager after the unit has been plugged in. The green Indicator Light on the Massager will begin to flash once it is fully charged, indicating the Massager is ready for use.



# INSTRUCTIONS FOR USE

1. The Hydro Massager has (2) attachments for easy use in the bathtub. To use the **Suction Cup Attachment**, simply slide it into the back of the Massager, then press the unit onto the inside of the bathtub. To use the **Handgrip Attachment**, simply slide it into the back of the unit until you hear an audible “click”, use your hand to support the unit, and apply the water flow directly to the parts of the body intended for massage. The water flow can be adjusted by moving the Swiveling Nozzle.

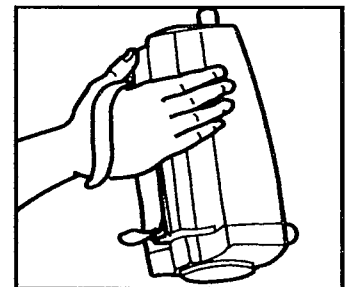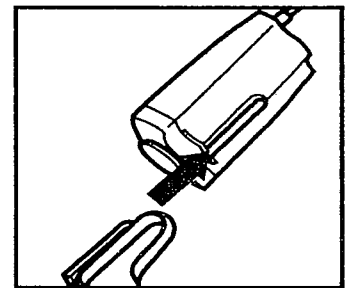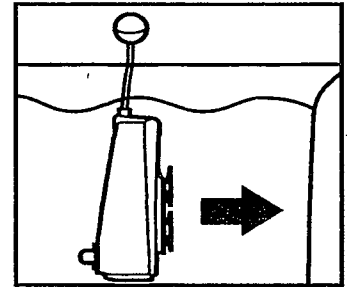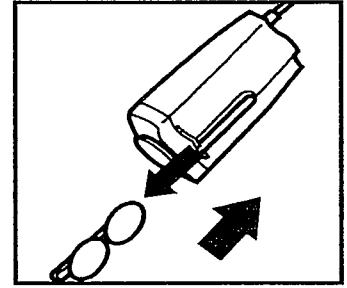



## Switching the unit On/Off:

- 1 press = Slow speed
- 2 presses = Maximum speed
- 3 presses = Off



**Note:** The unit slightly recoils when switched on. The Hydro Massager should never be operated out of water!

# INSTRUCTIONS FOR USE (cont.)

  2. The Hydro Massager can be fitted with the Air Intake Hose and Float. The air intake can be switched on or off via the Air Regulator. In position "0", no air is drawn in, and therefore the massage is carried out by water circulation only. In this position, the Air Intake Hose and Float need not be attached. In position "1", air is pumped in through the Air Intake Hose, so the massage is performed using both air and water circulation. In this position, make sure that the Air Intake Hose and Float remain above the surface of the water; if the Air Intake Hose and Float are submerged, no air will be drawn in.

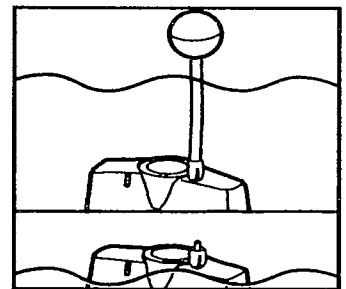
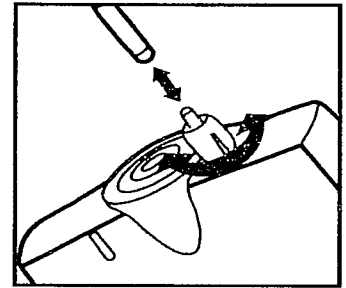


  3. In order to ensure that the Massager works flawlessly, the removable Filter Cover and fixed Mesh Filter must be checked regularly for accumulation of foreign matter. To clean the Filter Cover, turn it counterclockwise until the triangle indicator on the Filter Cover is facing the triangle indicator on the Massager, and remove. Extract any debris from the Filter, and then replace the Filter Cover by turning it clockwise until the triangle indicator on the Filter Cover is facing the circle indicator on the Massager. You will hear an audible "click" when the Filter Cover is properly secured.

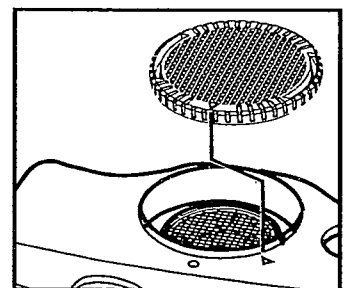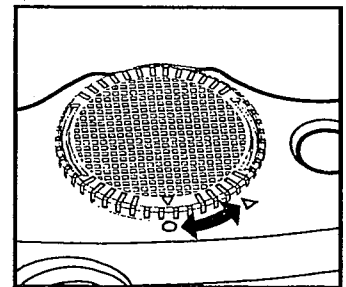

# INSTRUCTIONS FOR USE (cont.)

  4. Let the Hydro Massager drain briefly over the bathtub after use before replacing it on the Recharging Unit. Any remaining water will be collected in the removable Water Collector. To remove the Attachment, lift up on it gently and slide it out. Once the Hydro Massager has dried and properly drained, plug in the Recharging Unit to recharge the batteries for your next use. The Massager should always be kept connected to the Recharging Unit, unless you do not plan on using it for an extended period of time.

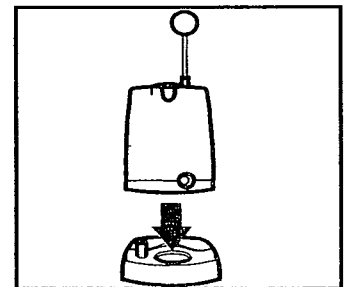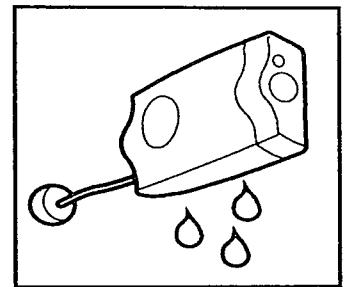

## USER MAINTENANCE INSTRUCTIONS

This appliance contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified service personnel if servicing is needed.

**To clean:** Pour out the excess water gathered in the Water Collector. Wipe the exterior of the Massager with a damp cloth or sponge. Do not use harsh, abrasive cleaners or utensils, as they may scratch the surface. Clean attachments in warm, soapy water and dry thoroughly.

**To store:** Store your Massager in its original box or in a clean, dry place. Make sure unit is unplugged after each use and before storing.

# ONE YEAR LIMITED WARRANTY

This Salton Product warranty extends to the original consumer of the product.

**Warranty Duration:** This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

**Warranty Coverage:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violations of written instructions furnished by Salton, Inc., or to units that have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**Warranty Disclaimers:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract, or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

**Warranty Performance:** During the above one-year limited warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at Salton, Inc.'s option), when the product is returned to the Salton, Inc. facility. The repaired or replacement product will be in warranty for the balance of the one year warranty period and an additional one month period. No charge will be made for such repair or replacement.

## Service and Repair

Should the appliance malfunction, you should first call toll-free 1-800-233-9054 between the hours of 9:00am and 5:00pm Central Standard Time and ask for Customer Service stating that you are a consumer with a problem.

**In-Warranty Service:** For an appliance covered under the warranty period, no charge is made for service or postage. Call for a pre-paid return mailing label (U.S. customers only).

**Out-of-Warranty Service:** A flat rate charge by model is made for out-of-warranty service. Include \$8.00 for return shipping and handling. Salton, Inc. cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem; your full return address and daytime phone number; a note describing the problem you experienced; a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

ATTN: Repair Department, Salton, Inc.  
550 Business Center Dr.  
Mt. Prospect, IL 60056



For more information on Salton/Maxim products:  
visit our website: <http://www.salton-maxim.com>  
or email us at: [salton@saltonusa.com](mailto:salton@saltonusa.com)