



Westinghouse



WST1600A Cord-Free Series Vacuum Cleaner

You can be sure...if it's Westinghouse™

IMPORTANT SAFETY INSTRUCTIONS

This electrical appliance must always be used according to the following safety instructions. Save these instructions as this manual contains important safety and operating information.

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS APPLIANCE

WARNING: To reduce the risk of fire, electric shock or injury:

1. See IMPORTANT SAFETY INSTRUCTIONS FOR THE BATTERY CHARGER on page 2 of this Owner's Manual.
2. Do not use the appliance outdoors, or on wet surfaces.
3. Do not use the appliance to pick up water or damp materials such as mud, tile grout, plaster filler or caulking.
4. Do not use the appliance to pick up flammable or combustible liquids such as gasoline. Do not use in areas where liquids may be present.
5. Do not use the appliance to pick up burning or smoking materials, such as cigarettes, matches or hot ashes. Do not pick up dry fireplace ashes.
6. Keep hair, loose clothing, and all parts of the body, especially fingers away from openings and moving parts.
7. Do not put any objects into appliance openings, Battery Charger openings, Battery Pack openings, between Battery Pack contacts, or use with any openings blocked or plugged.
8. Do not use this appliance to pick up hard or sharp objects or other large surface litter. Pick these up by hand before using the appliance.
9. Do not operate without the Collection Bin in place.
10. Use extra care when cleaning stairs. Always vacuum stairs with the appliance below you.
11. Do not let the Vacuum Cleaner, Battery Charger or Battery Packs be used as a toy. Close attention is necessary when used near children. Do not use the appliance near small children or infants.
12. Always use the Cleaning Wand/Hose (and attachments) to clean upholstery.
13. Remove the Battery Pack before cleaning or maintenance, such as cleaning the Rotary Brush or removing a blockage.
14. Use the appliance only for normal household use, as described in this manual. Only use with manufacturer's recommended attachments and accessories.
15. When cleaning the outside of the appliance, wipe with a damp cloth to reduce the static electricity on the outer surface.
16. If the appliance is not working as it should, call 1-800-616-8689 for instructions where to send for repair. Do not attempt to repair, as it will invalidate your warranty.
17. Do not use Battery Charger outdoors.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

THE BATTERY CHARGER (MODEL C1600)

IMPORTANT SAFETY INSTRUCTIONS

Before using the Charger, read all instructions and cautionary markings on the Battery Charger, the Battery Pack and the Vacuum Cleaner.

DANGER: Do not probe inside the Charger compartment with any conductive material. Danger of electric shock or electrocution. Do not put any objects into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce airflow.

WARNING: Do not allow any liquid to get inside the Battery Charger. Electric shock may result.

WARNING: Keep the Battery Charger Cover closed whenever the Battery Pack is not being charged.

CAUTION: To reduce the risk of injury, charge only Westinghouse Rechargeable Battery Packs (Model BP1600). Other types of batteries may burst, causing personal injury and damage.

1. Do not store or use the Battery Charger in locations where the temperature may reach or exceed 105°F (40°C). Sheds and metal buildings can easily reach this temperature during the summer.
2. To facilitate the cooling of the Battery Pack after use, do not place the Battery Charger or Battery Pack in a warm environment such as in a metal shed, or an uninsulated trailer.
3. Do not expose the Battery Charger to rain or snow. Do not expose Battery Charger to damp or wet conditions.
4. Use of an attachment not recommended or sold by Westinghouse may result in a risk of fire, electric shock, or injury to persons.
5. This Battery Charger is not intended for any use other than charging Westinghouse Battery Packs (Model BP1600). Any other use may result in risk of fire, electric shock or electrocution.
6. To reduce risk of damage to the electric plug and cord, pull the plug rather than cord when disconnecting the Battery Charger.
7. Make sure cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
8. An extension cord should never be used, as its use could result in risk of fire, electric shock, or electrocution.
9. The Charger is ventilated through slots in the housing. Do not place any objects so as to block the ventilation slots and result in excessive internal heat.
10. Place the Charger in a position away from any heat source, including direct sunlight.
11. Do not operate Charger with damaged cord or plug, return it to an Authorized Service Center for inspection or repair. Do not repair the appliance yourself, as this will invalidate your warranty. Contact Consumer Service for return authorization, examination, repair or adjustment.
12. Do not operate Charger if it has received a sharp blow, been dropped or otherwise damaged in any way; return it to an Authorized Service Center for inspection or repair. Do not repair the appliance yourself, as this will invalidate your warranty. Contact Consumer Service for return authorization, examination, repair or adjustment.
13. Under no circumstances should you disassemble the Charger as it may result in a fire and shock hazard. Call our Authorized Service Center for return instructions.
14. The Charger is designed to operate on standard 120V AC household electrical power. Do not attempt to use it with any other voltage.
15. To reduce risk of electric shock, unplug Battery Charger from outlet before attempting any cleaning. Removing the Battery Pack will not reduce this risk.
16. NEVER attempt to connect 2 Battery Chargers together.
17. Do not immerse Battery Charger in water or any other liquid.
18. Do not attempt to charge wet Battery Packs.
19. Do not handle appliance with wet hands.
20. Do not use Battery Charger outdoors.

SAVE THESE INSTRUCTIONS

THE BATTERY PACK (MODEL BP1600)

The batteries in your new Battery Pack are not fully charged! First read the safety instructions, then follow charging notes and procedures.

IMPORTANT SAFETY INSTRUCTIONS

Before using the Battery Pack, read all instructions and cautionary markings on the Battery Charger, the Battery Pack and the Vacuum Cleaner.

DANGER: If Battery Pack case is cracked or damaged, do not insert into Battery Charger. Danger of electric shock or electrocution.

DANGER: Never attempt to open the Battery Pack for any reason. If the plastic housing of the Battery Pack is cracked or broken, immediately discontinue use. Do not recharge. Return to our Authorized Service Center for recycling.

DANGER: If there is any small leakage from the Battery Pack Cells, **DISCONTINUE USE IMMEDIATELY. USE EXTREME CAUTION.** USE PROTECTIVE MITTS to ensure that you DO NOT get any leakage onto your skin. Use caution that the battery acid will not get into your eyes. DO NOT RECHARGE. Return to the Service Center for recycling.

WARNING: Do not store or use the Battery Pack in locations where the temperature may reach or exceed 105°F (40°C). Sheds and metal buildings can easily reach this temperature during the summer.

1. Do not carry extra "charged Battery Packs" in aprons, pockets, or toolboxes along with other metal objects. Battery Pack could be short-circuited causing damage to the Battery Pack and possibly causing severe burn or fire.
2. Charge Westinghouse Battery Packs (Model BP1600) with Westinghouse Battery Chargers (Model C1600) ONLY.
3. Do not incinerate the Battery Pack even if it severely damaged or is completely worn out. The Battery Pack can explode in a fire.

NOTE: Review and observe all of the "Important Charging Notes" in the CHARGING PROCEDURE section of this Owner's Manual.

NOTE: The batteries in this Battery Pack are the Nickel-Cadmium type. Cadmium is considered to be toxic material by the Environmental Protection Agency. Before disposing of damaged or worn out Nickel-Cadmium Battery Packs, check with your state Environmental Protection Agency to find out about special restrictions on the disposal of these Battery Packs or return them to the Salton Service Center for recycling.

4. DO NOT probe Battery Pack with conductive objects.
5. DO NOT splash or immerse in water or other liquids.
6. Maintain clean and open Ventilation Slots.
7. Do not put any objects into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce airflow.

SAVE THESE INSTRUCTIONS

WESTINGHOUSE UNPLUGGED® WST1600A CORD-FREE VACUUM CLEANER

Product may vary slightly from illustrations

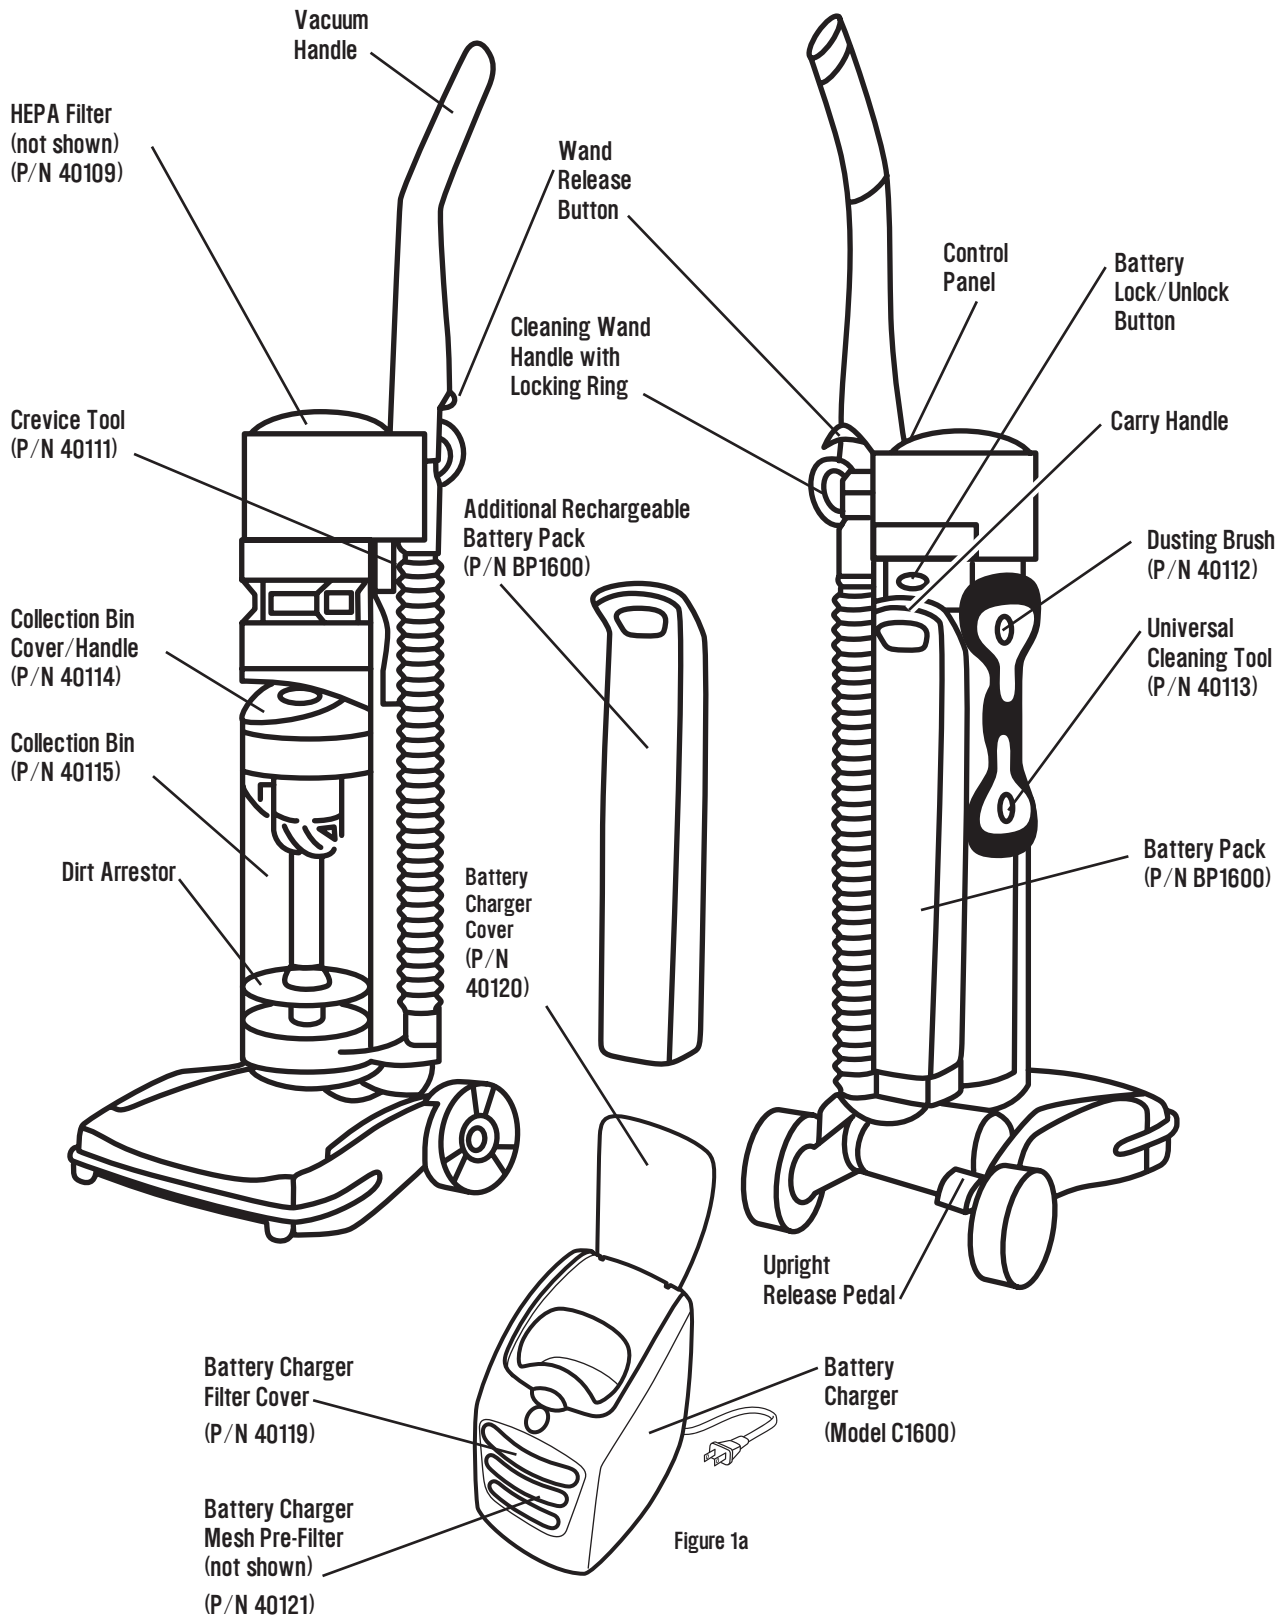


Figure 1a

BEFORE USING FOR THE FIRST TIME

In order to get the most out of your Westinghouse WST1600A Cord-Free Series Vacuum Cleaner, we suggest you read the easy step-by-step instructions thoroughly before starting to vacuum.

1. Attach the Handle to your Vacuum Cleaner by locking it into the Docking Bay. Follow the instructions outlined in the section entitled: ATTACHING THE HANDLE in this Owner's Manual.
2. Note that the Battery Charger is shipped with a Battery Pack inserted in it. Remove the Charger and the Charger Cover from all packing materials. Snap the Charger Cover onto the Battery Charger.
3. Fuses are shipped separately and must be inserted in the Battery Packs before they are used. The Fuse for each Battery Pack is packed in a plastic bag and taped to the Pack. Locate the new Fuse.
4. The Fuse Opening is located in the upper section of the Battery Pack, near the Vent Air Slots. Firmly press the Fuse into position. (See Figure 1b.)
5. **For the first charging of a Battery Pack, insert the Battery Pack into the Charger and engage the Conditioning Cycle by depressing the Conditioning Cycle Button.** The Conditioning Cycle will take approximately 24 hours and will prepare the Battery Pack for peak performance. If you have 2 Battery Packs, condition both of them.
Follow the BATTERY PACK CHARGING PROCEDURE / BATTERY CONDITIONING CYCLE instructions described in this Owner's Manual.
6. **A Battery Pack will slowly lose its charge when it is not seated in the Battery Charger.** Store 1 Battery Pack in the Battery Charger. The Charger may be left plugged in. The Battery Rapid Charging Light will glow solid and the Battery Charger will keep the Battery Pack fresh and fully charged.
7. Follow the OPERATING INSTRUCTIONS: INSERTING THE BATTERY PACK INTO THE VACUUM CLEANER section in this Owner's Manual, when you are ready to vacuum.

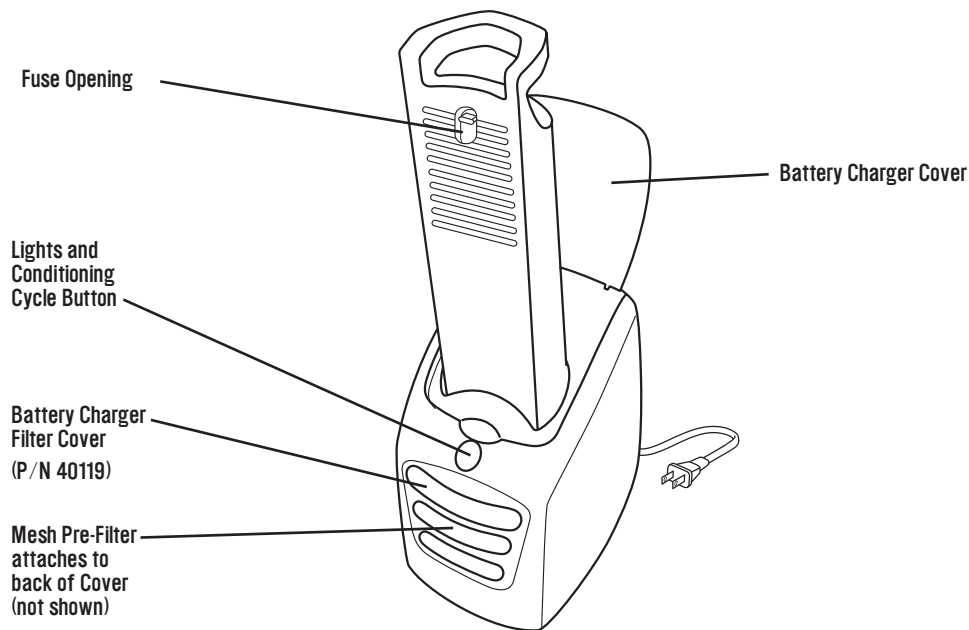


Figure 1b

BATTERY PACK CHARGING PROCEDURE

Remove the Battery Pack from the Vacuum Cleaner

1. Using your thumb, push the Lock Button upwards. The top of the Battery Pack will fall easily toward you.
2. Lift the Battery Charger Cover. Grasping the Battery Pack firmly by the Handle, insert the Battery Pack into the Charger Compartment. (See Figure 1b.)

Normal Charging Procedure

1. Plug the Battery Charger into an appropriate electrical outlet.
2. Place the Battery Pack into the Battery Charger.
3. Charging will begin once contact has been made. It takes 30 minutes (without conditioning) to fully charge a Battery Pack.
4. Be sure that the Battery Pack is fully seated in the Battery Charger. Various Light sequences will occur when you seat the Battery Pack.
5. When the Battery Pack is fully charged, the Green Rapid Charging Light will glow solid green.

IMPORTANT NOTES

- A fully charged Battery Pack will provide 20 to 30 minutes of vacuuming time when the Vacuum Cleaner is used in carpet/bare floor mode. Run time is reduced when the above-floor Cleaning Wand is used.
- **You may charge a partially used Battery Pack whenever you desire with no adverse effect on the Battery Pack.** If you charge the Battery Pack for 10 minutes, you should gain 7 to 10 minutes of carpet/bare floor vacuuming time.
- Your Westinghouse Battery Charger (Model C1600) is designed to use standard 120V AC, 60Hz power. Do not use DC or any other voltage.

Charging Light Sequences

ACTION DESCRIPTION	CONDITIONING LIGHT	RAPID CHARGING LIGHT
30-Minute Charging underway	.Off	.Flashing Green
Conditioning Charging underway	.Flashing Green	.Off
Charging Complete	.Off	.Green
Ambient Temp. too hot: >113°F/45°C or cold <50°F/10°C	.Alt flash 1 slow	.Alt flash 1 slow
Battery Temp. too hot: >112°F/44°C or cold <50°F/10°C	.Alt flash 2 slow	.Alt flash 2 slow
Low Battery Voltage: below 12V	.Alt flash 3 slow	.Alt flash 3 slow
Fuse Blown or Cell Damaged	.Alt flash 4 slow	.Alt flash 4 slow

This Battery Charger is designed to detect certain problems that can arise with Battery Packs. An abnormal condition will be indicated by the light sequence identified above. If the problem persists, try a different Battery Pack to determine if the Battery Charger is working properly. If the alternative Battery Pack charges correctly, then the original Battery Pack is defective and should be returned to our Authorized Service Center for recycling. If, on the other hand, the alternative Battery Pack indicates the same problem as the first Battery Pack, please have the Charger tested by our Authorized Service Center.

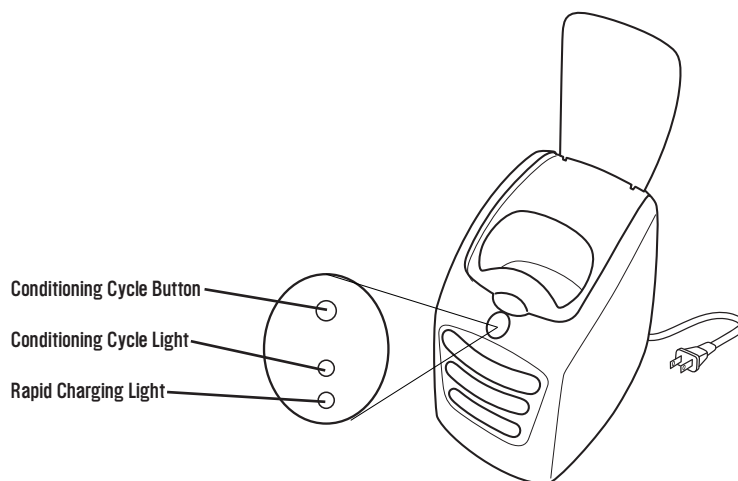


Figure 2b
Battery Conditioning Cycle Button
and Battery Charger Light Panel

Conditioning Cycle Procedure

The Battery Pack Conditioning Cycle will take the batteries through a series of events to balance the individual cells and give peak battery capacity and run time.


Battery Packs should be conditioned every 50-charge/discharge cycles.

IMPORTANT NOTES

Once the Conditioning Cycle Button is depressed, the Cycle may not be interrupted. To ensure proper Battery performance, please allow 24 hours to condition/charge your Battery Pack.

1. To condition your Battery Pack, seat the Battery Pack into the Battery Charger. Depress the Conditioning Cycle Button.
2. The Green Conditioning Cycle Light will begin to flash, indicating that the Conditioning Cycle has started. After 24 hours, the Rapid Charging Light will glow solid green and the Conditioning Cycle Light will shut OFF. **YOUR BATTERY PACK IS NOW CONDITIONED, FULLY CHARGED AND READY FOR USE.**

NOTE: A Battery Pack will slowly lose its charge when it is not seated in the Battery Charger. Store 1 Battery Pack in the Battery Charger. The Charger may be left plugged in. The Battery Rapid Charging Light will glow solid and the Battery Charger will keep the Battery Pack fresh and fully charged.

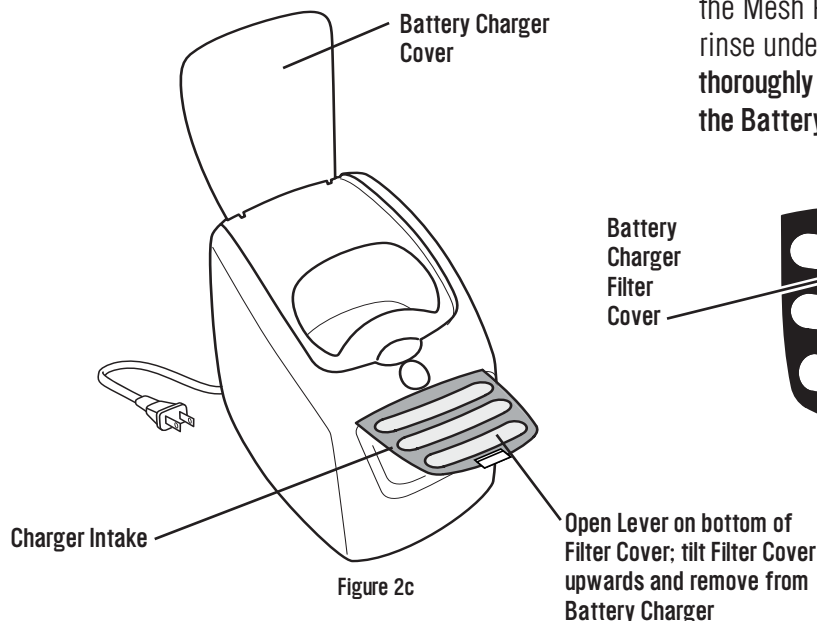

Cooling Fan

This Battery Charger is equipped with an internal Fan that provides rapid cooling of the Battery Pack. Fan operation is automatic and will turn ON and OFF as required during battery charging. After discharging a Battery Pack, it is best to place it in the Battery Charger Compartment immediately so that the Fan can cool it quickly and prolong the Battery Pack life.


NOTE: The Cooling Fan is provided with a Mesh Pre-Filter. To ensure maximum airflow, we recommend the Mesh Pre-Filter be cleaned every month. If the Battery Charger is kept in a dusty environment, you will find it necessary to clean the Mesh Pre-Filter more often. A dirty Pre-Filter will reduce the airflow through the Battery Pack and require more time to cool the Battery Pack.

WARNING: Never run the Battery Charger without the Mesh Pre-Filter in place. Without the Mesh Pre-Filter, the Fan may blow debris from vent areas into the Battery Pack and possibly out of the Battery Pack outlet. Keep your eyes away from vent areas.

Cleaning the Battery Charger Mesh Pre-Filter

The Mesh Pre-Filter is located on the back of the Battery Charger Cover. Lift the Lever on the base of the Filter Cover, then tilt the Filter Cover upwards until it falls away from the front of the Battery Charger body. (See Figure 2c.)

Turn the Filter Cover over; the Mesh Pre-Filter will be attached to the back of the Cover. Peel the Mesh Pre-Filter away from the Cover and rinse under running water to clean. **Dry thoroughly before re-attaching onto the back of the Battery Charger Cover.**

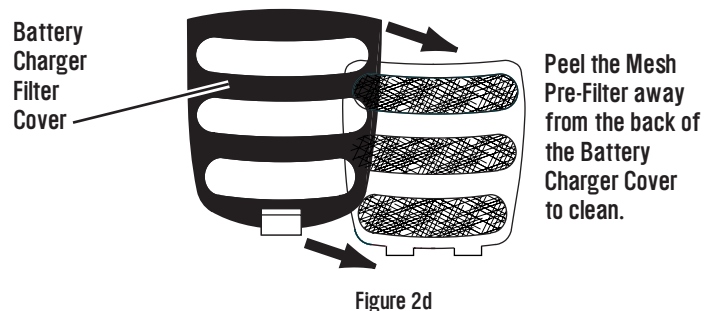

THE RBRC SEAL



The RBRC (Rechargeable Battery Recycling Corporation) Seal on the nickel-cadmium Battery Pack indicates that the costs to recycle the Battery


Pack at the end of its useful life have already been paid by Salton, Inc. In some areas, it is illegal to place spent nickel-cadmium batteries in the trash or municipal solid waste stream and the RBRC program provides an environmentally conscious alternative.

RBRC, in cooperation with Salton, Inc. and other battery users, has established programs in the United States to facilitate the collection of spent nickel-cadmium batteries.



Help protect our environment and conserve natural resources by returning the spent nickel-cadmium to an Authorized Salton Service Center. You may also contact your local recycling center for information on where to drop off the spent Battery Pack.



GETTING STARTED GUIDE

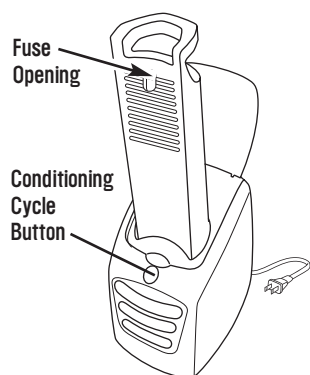

1. Unpack Vacuum Cleaner from Box.
2. Find Fuse taped to the back of the Battery. Place it into the Fuse opening.
3. Plug Charger into electrical outlet.
4. Put Battery into Charger and press the Conditioning Cycle Button.
5. After 24 hours, place Battery into Vacuum Cleaner.
6. Press the POWER Button to begin vacuuming.

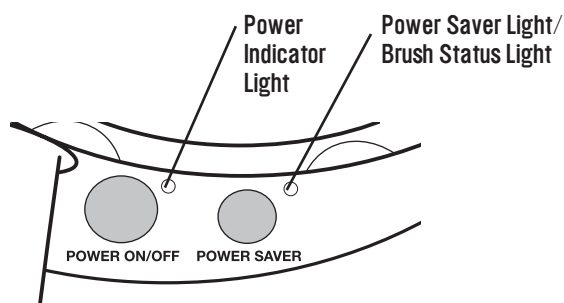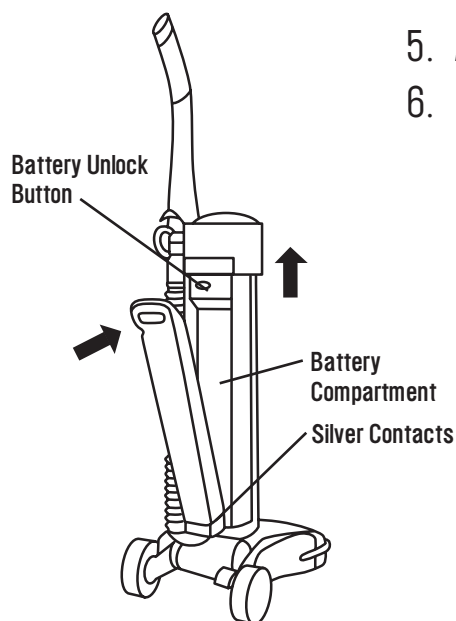

To ensure proper Battery performance, conditioning the Battery Packs is recommended. Please consult the BATTERY PACK CHARGING PROCEDURE described in this Owner's Manual for complete instructions.

IMPORTANT BATTERY PACK CHARGING NOTES

1. Charge when the air temperature is between 65-75°F (18-24°C) to assure longest Battery Pack life and best performance.
2. It takes approximately 30 minutes to fully charge a Battery Pack (other than when the Conditioning Cycle is engaged). This will provide approximately 20 to 30 minutes of vacuuming when the Vacuum Cleaner is used in carpet/bare floor mode. Run time is reduced when the above-floor Cleaning Wand is used.
3. The Battery Charger and Battery Pack may become warm to the touch while charging. This is a normal condition and does not indicate a problem.
4. If the Battery Pack does not charge normally:
 - Check power at receptacle by plugging in a lamp or other appliance.
 - Check to see if receptacle is connected to a light switch, which turns the power OFF when you turn OFF the lights.
 - Move Battery Charger and Battery Pack to a location where the surrounding air temperature is approximately 65°-75°F (18-24°C).
 - If charging problems persist, call the Service Center.
5. DO NOT CONTINUE use if there is insufficient power on jobs which were easily done previously. The Battery Pack should be recharged; follow the BATTERY PACK CHARGING PROCEDURE described in this Owner's Manual. **You may charge a partially used Battery Pack whenever you desire with no adverse effect on the Battery Pack.**
6. **WARNING:** To avoid Battery Charger malfunction, never clean with or allow exposed charging contacts to touch foreign materials of a conductive nature, such as: steel wool or aluminum foil. Metallic particles should be kept away from Battery Charger cavities.

7. **CAUTION:** To reduce the risk of foreign material entering the Battery Charger cavity, close the Battery Charger Cover when Battery Pack is not seated in the Battery Charger.
8. **CAUTION:** Always unplug the Battery Charger from the electric outlet when there is no Battery Pack in the cavity.
9. **CAUTION:** Unplug Battery Charger before attempting to clean.

IMPORTANT NOTES

- Other than cleaning the Mesh Pre-Filter as indicated on page 8, this Battery Charger is not user serviceable. There are no user serviceable parts inside the Battery Charger. Servicing by our Authorized Service Center is required to avoid damage to static-sensitive internal components.
- READ ALL INSTRUCTIONS IN THIS MANUAL BEFORE ATTEMPTING TO CHARGE THE BATTERY PACK.
- To ensure product SAFETY and RELIABILITY, repairs, maintenance and adjustments must be performed by our authorized Service Center.

OPERATING INSTRUCTIONS

Assemble Your Vacuum Cleaner

1. Remove the Westinghouse WST1600A Cord-Free Vacuum Cleaner from its box.
2. Carefully remove all plastic packing materials from the Vacuum Cleaner. Check to make sure you remove all the Tools and Accessories before throwing out the packing materials.

Accessory/Parts List

- Upper Handle
- Vacuum Cleaner Body
- Telescopic Cleaning Wand Assembly
- 2 Battery Packs (Model BP1600)
- 2 Fuses (25A)
- Battery Charger (Model C1600)

Cleaning Tools

- Crevice Tool
- Universal Cleaning Tool
- Dusting Brush

Attaching the Handle

1. Place the Vacuum Cleaner into the upright position. You will hear a click as the Vacuum Cleaner locks into place.
2. Align the Handle over the top of the Docking Bay and slide it down so it fits inside the Docking Bay. It will snap-lock into place. (See Figure 3a.)
3. Once properly assembled, the Handle cannot be removed from the Docking Bay.

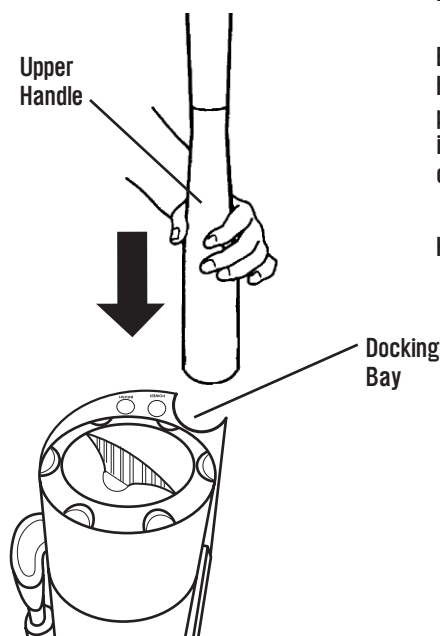


Figure 3a

Attaching the Telescopic Cleaning Wand and Hose

1. The Cleaning Wand is stored inside the Hose.
2. Grasping the Cleaning Wand Handle, guide it up into its storage position.
3. Push forward and upwards on the Handle until it snaps and locks into place in the channel at the back of the Vacuum Cleaner, under the Wand Release Button. (See Figure 3b.)

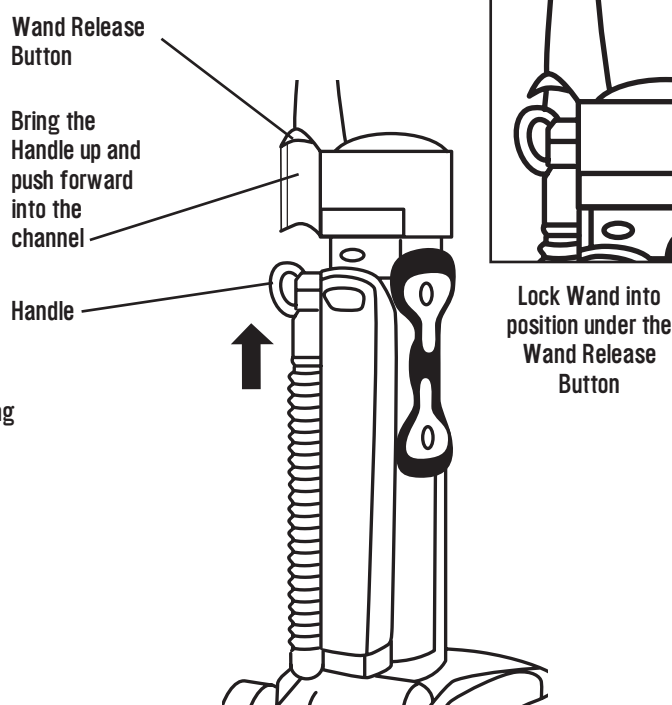


Figure 3b

Cleaning Tools

The Westinghouse WST1600A Cord-Free Series Vacuum Cleaner comes with 3 On-Board Cleaning Tools and Tool Holders.

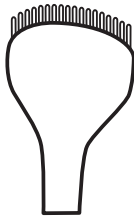


Figure 4a
Universal Cleaning Tool
(P/N 40113)



Figure 4b
Dusting Brush
(P/N 40112)



Figure 4c
Crevice Tool
(P/N 40111)

Universal Cleaning Tool

The Universal Cleaning Tool lets you remove pet hair, lint and fine dust particles. Use it to clean drapes, blinds and upholstered furniture.

Dusting Brush

The Dusting Brush has long, soft bristles. Use it to clean book shelves, table tops, and other above-floor surfaces.

Crevice Tool

The Crevice Tool is a long narrow tool with a rounded larger end and a flat tapered end. Use to reach and clean difficult nooks and crannies between furniture and appliances, along baseboards or under cabinets where cobwebs, lint and dust like to hide.

Cleaning Tools Storage

Each Tool has its own special storage spot on board the Vacuum Cleaner. Locate the Tool Storage Holders on either side of the Vacuum Cleaner.

Each Tool snaps easily into its Holder. When properly stored, the Tools will not fall off or get lost.

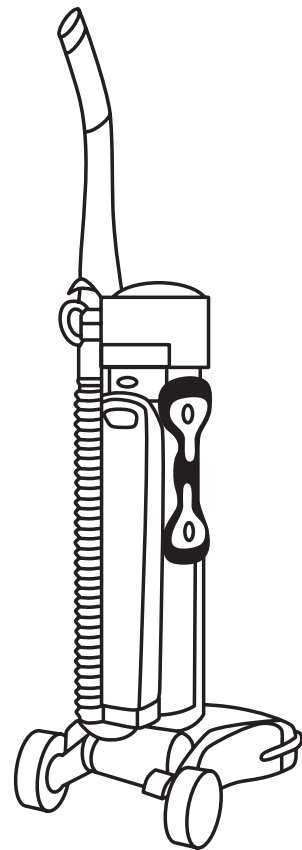


Figure 4d

Storing the Dusting Brush and Universal Cleaning Tool

1. Locate the Dusting Brush and Universal Cleaning Tool Holder on the right side of the Vacuum Cleaner. (See Figure 5a.)
2. Snap the Dusting Brush and Universal Cleaning Tool into either the top or the bottom Holder, mounting the curved side against the Vacuum Cleaner. Make sure Tools fit snugly so they won't fall off.

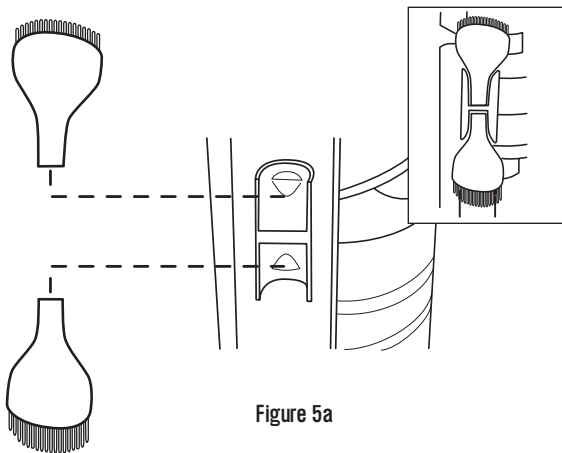


Figure 5a

Storing the Crevice Tool

1. Snap the round base of the Crevice Tool into its Holder on the left side of the Vacuum Cleaner.
2. Make sure the Tool fits snugly so it won't fall off.

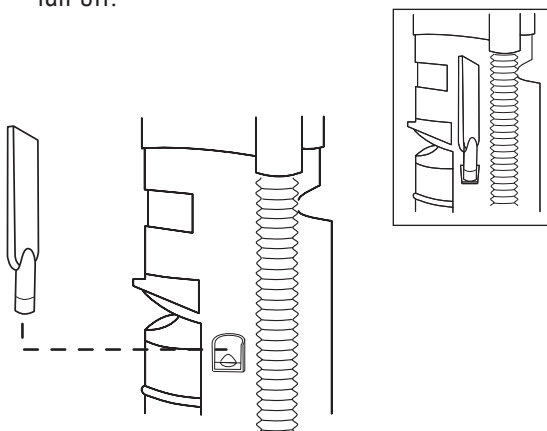


Figure 5b

Transporting Your Vacuum Cleaner

Use the convenient, easy-to-grip Carry Handle to transport your Vacuum Cleaner up and down the stairs.

1. Return the Westinghouse WST1600A Cord-Free Series Vacuum Cleaner to its upright position.
2. Locate the Carry Handle on the top of the Battery Pack at the back of the Vacuum Cleaner. (See Figure 6a.)
3. Secure your hand firmly under the Carry Handle.
4. Lift the Vacuum Cleaner up or down stairs.

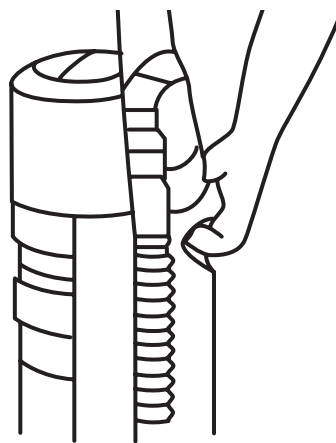


Figure 6a

Tools and Tips

Always use the Upper Handle or Carry Handle to pull your Vacuum Cleaner from room to room. Never pull your Vacuum Cleaner by the Hose. Doing so may damage the Vacuum Cleaner Hose.

Safety Tip

Make sure you turn your Vacuum Cleaner OFF whenever you make any adjustments or lift the Vacuum Cleaner up or remove any part.

Control Panel

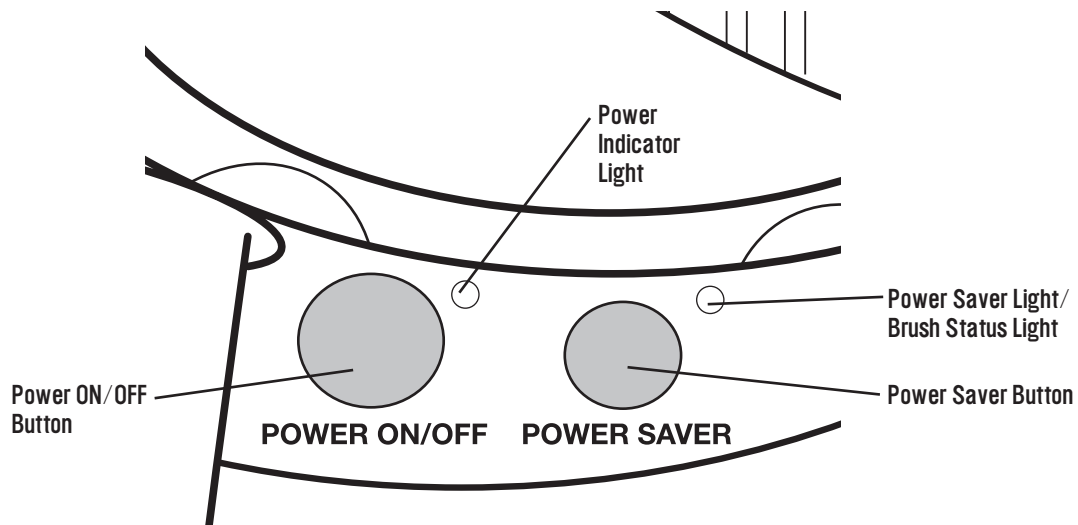


Figure 7a

Power ON/OFF Button

The Power ON/OFF Button activates the system. If the Vacuum Cleaner is in the upright locked position when the Power ON/OFF Button is activated, the machine will go into Sleep mode (see Sleep mode section below). If the Vacuum Cleaner is in the angled (working position) for cleaning carpets and bare floors when the Power ON/OFF Button is activated, then both the Suction and the Brush Motors will begin operation and a fully charged Battery will provide approximately 20 minutes of run time.

Power Indicator Light

When the Battery Pack is fully or close to fully charged, the Power Indicator Light will remain solid green when the Vacuum Cleaner is in operation. As the Battery Pack's energy is consumed, the Light will turn from solid green to flashing green. When the Battery Pack is nearly fully consumed (approximately 2 minutes remaining) the Light will flash amber.

Power Saver Button

The Power Saver Button reduces the power consumption in the Carpet/Bare Floor mode and extends the run time from approximately 20 minutes up to 30 minutes. The Power Saver mode is appropriate for cleaning bare floors, low pile and scatter rugs.

NOTE: The Power Saver mode is only active for carpet/bare floor cleaning and it cannot be activated when the above-floor Cleaning Wand is engaged.

Power Saver/Brush Status Light

The Power Saver/Brush Status Light will flash green whenever the Power Saver Button is depressed and the Vacuum Cleaner is in the upright locked position, indicating that the Vacuum is in the Power Saver mode. The Light will change to solid green when the Vacuum Cleaner is tilted for use in the working position. If the Brush is jammed, this Light will turn red to indicate that the Brush has stopped rotating.

Sleep Mode

If the Vacuum Cleaner remains in the upright position, or is rotated to the upright position when the Power Button is activated, the Vacuum Cleaner will place itself in Sleep Mode. Both the Suction and Brush Motors will turn OFF and remain on standby for 10 minutes and the Power Indicator Light will flash green. When the Vacuum Cleaner is tilted back to the working position or if the above-floor Cleaning Wand is activated, power is automatically restored. (When the Vacuum Cleaner is tilted back to the working position, it remembers if the Power Saver mode was activated during the last use.) After 10 minutes in Sleep mode with no activity, the Vacuum Cleaner will turn itself OFF and the flashing Light will turn OFF.

Preparing To Vacuum

IMPORTANT: Before you can use the Vacuum Cleaner, you must prepare the Battery Pack for use. Place the Battery Pack in the Battery Charger and follow the CHARGING PROCEDURES described in the beginning of this Owner's Manual.

Inserting the Battery Pack into the Vacuum Cleaner

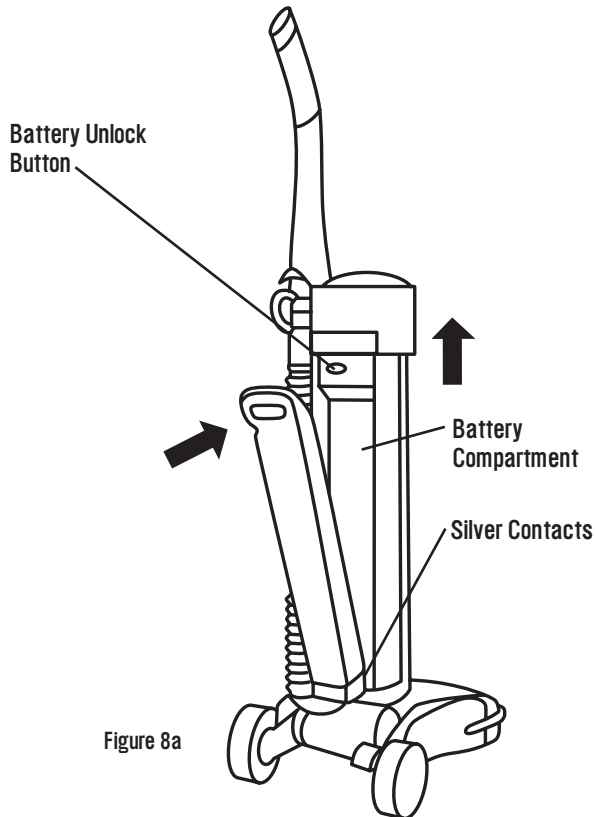


Figure 8a

1. Holding the Battery Pack firmly, place it into the bottom section of the Battery Compartment, inserting it into the 2 silver-colored contacts.
2. Swing the Battery Pack forward, towards the Vacuum Cleaner. (See Figure 8a.)
3. Lock the Battery Pack in place, making certain that the upper section of the Battery Pack is locked. The Lock Button on the Vacuum Cleaner should be in the down position. An audible "click" indicates that it has locked. Pull on the Handle of the Battery Pack to make sure it is locked securely and will not fall out during vacuum cleaning.

Cord-Free Vacuum Cleaning

Your Westinghouse WST1600A Cord-Free Series Vacuum Cleaner is designed to clean a variety of surfaces: carpets, bare floors and above floors. With the charged Battery Pack locked securely in position, you are ready to begin vacuuming.

1. The Power Button is located on the Control Panel. To turn the Vacuum Cleaner ON, depress the Power Button. The Power Indicator Light will flash green. (If the Power Saver Button is depressed, the Power Saver Light will also flash green.)
2. Locate the Upright Release Pedal on the bottom back side of your Vacuum Cleaner between the 2 wheels. (See Figure 9a.)
3. Grip the Upper Handle with 1 hand and press down on the Pedal with either foot.

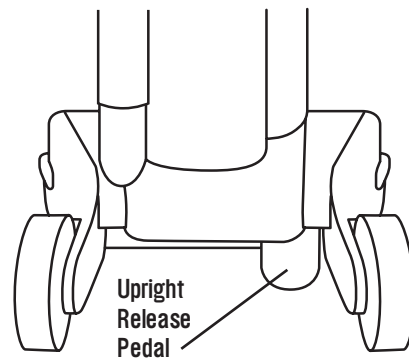


Figure 9a

4. Tilt the Vacuum Cleaner back into a comfortable working position. Both the Suction Motor and the Brush Motor will begin operating.

CAUTION: Be sure to keep fingers and toes away from the moving Rotary Brush.

Tools and Tips

To conserve valuable Battery energy and to prevent carpet damage by the Rotary Brush, when repositioning the Vacuum Cleaner or for brief periods of non-use, keep your Vacuum Cleaner in the upright position. (Sleep Mode).

Cleaning Carpets

1. Your Westinghouse WST1600A Cord-Free Series Vacuum Cleaner will self-adjust to any height of carpet. Steer the Vacuum Cleaner to the carpet you wish to clean.

Cleaning Bare Floors

1. Steer the Westinghouse Vacuum Cleaner onto the bare floor you want to clean. The Rotary Brush bristles are soft and will not damage your hardwood floors. Vacuum as usual.

Cleaning Above Floors

The 9.5 Foot Telescopic Cleaning Wand makes it easy to vacuum hard-to-reach, above-floor areas.

1. Return your Vacuum Cleaner to its upright position.
2. Grab the Hose Handle and press down firmly on the colored Wand Release Button. (See Figure 10a.)

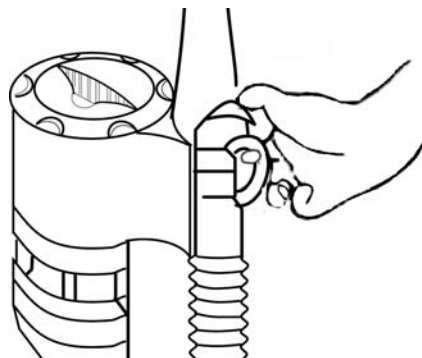


Figure 10a

3. The Telescopic Cleaning Wand will release easily from the back of the Vacuum Cleaner.
4. Slide the Telescopic Cleaning Wand out of the Hose Collar by gripping the Collar in one hand and the Cleaning Wand Handle in the other. Pull to extend. (See Figure 10b.)

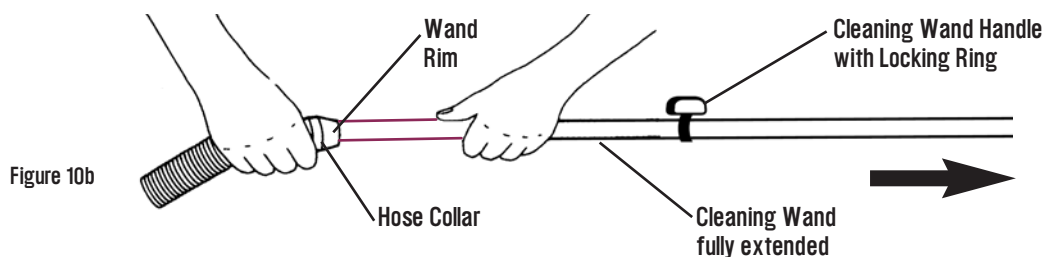


Figure 10b

5. With the Hose and Cleaning Wand fully extended, there are 9.5 feet to work with.
6. If the Wand won't pull out easily, twist the Locking Ring counter-clockwise and loosen slightly.
7. Once the Wand is at the desired length, lock the Wand into place by turning the Locking Ring clockwise. (See Figure 10c.)



Figure 10c

Lock the Wand into place by turning the Locking Ring clockwise.

8. Notice that the airflow is automatically redirected from the Power Head to the Telescopic Cleaning Wand.
9. All On-Board Cleaning Tools will attach onto the end of the Telescopic Cleaning Wand. Check to make sure they are properly locked into place. Vacuum as usual.

Attaching Cleaning Tools To The Wand

1. Select the appropriate Cleaning Tool for the vacuuming job.
2. Release the Cleaning Wand from the back of the Vacuum Cleaner.
3. Slide the Tool into the top of the Cleaning Wand.
4. Firmly press the Tool in place. It should fit snugly.

Attaching Cleaning Tools To The Hose

You can also attach your Cleaning Tools directly onto the Hose. This will give you the flexibility to clean delicate china or fine collectibles that must be dusted carefully.

1. Remove the Wand from the Hose. Extend the Cleaning Wand as far as it will reach out of the Hose.
2. Hold the Hose Collar in one hand and, using your thumb and forefinger, press in both of the Hose Collar Latches. (See Figure 11a.)

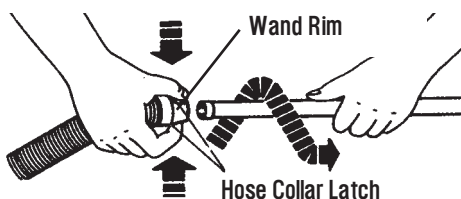


Figure 11a

3. With your other hand, pull the Wand all of the way out of the Hose Collar. (See Figure 11a.)
4. Insert any Attachment directly into the Hose Collar. (See Figure 11b.)

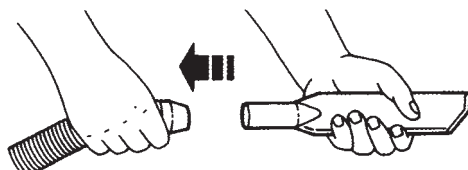


Figure 11b

The Westinghouse WST1600A Cord-Free Series Vacuum Cleaner Hose is made with reinforced steel. Its coils will stay flexible and in good shape for the life of your Vacuum Cleaner.

Tools and Tips

If you're having difficulty removing the Cleaning Wand from the Hose Collar, rotate the Wand as you pull it out. With continued use, the rubber Hose Collar will soften and the Cleaning Wand will pull out more easily.

Returning the Cleaning Wand To It's Locked, Storage Position

1. When you are finished vacuuming, compress the Hose and slide the Cleaning Wand back into the Hose Collar.
2. Follow the OPERATING INSTRUCTIONS: ATTACHING THE TELESCOPIC CLEANING WAND AND HOSE section in this Owner's Manual, and lock the Wand in place with a click.

IMPORTANT: If the Wand is not attached properly, the Vacuum Cleaner will turn itself OFF while vacuuming. If the Vacuum Cleaner suddenly shuts OFF, first check to make sure the Wand is securely locked into position.

USER MAINTENANCE INSTRUCTIONS

Proper cleaning and maintenance will ensure the highest operating performance of your Westinghouse WST1600A Cord-Free Series Vacuum Cleaner.

Emptying the Collection Bin

Your Westinghouse Vacuum Cleaner's see-through Collection Bin fits inside its Storage Compartment. Check to make sure the Collection Bin is never filled higher than the MAX markings on the Bin. It will fill up quickly, so it's a good idea to empty it after every use.

1. Return your Vacuum Cleaner to its upright position.
2. **Press the Power Button to turn the Vacuum Cleaner OFF before you empty the Collection Bin.**

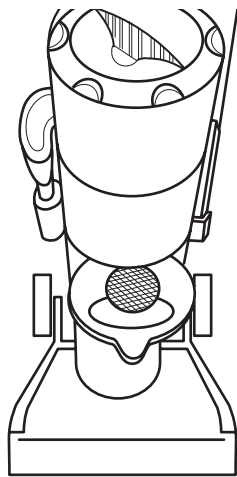


Figure 12a

3. Press down on the Handle at the top of the Collection Bin. Pull outward until the Bin releases from its locked-in storage position inside the Storage Compartment. (See Figure 12a.)
4. Grasp the Handle firmly and lift the Collection Bin out and away from the Vacuum Cleaner.
5. Hold the Grip Area at the bottom of the Collection Bin with one hand.

6. With your other hand, turn the Collection Bin Cover/Handle a quarter turn counter-clockwise to the UNLOCKED position. (See Figures 12b and 12c.)

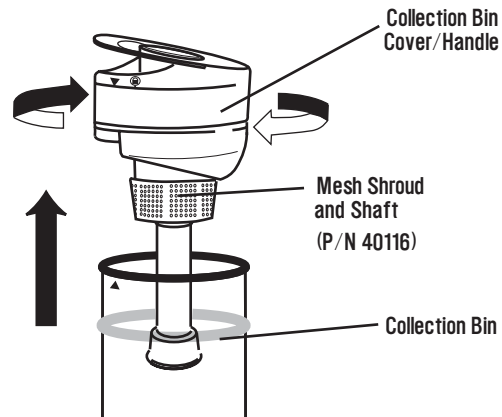


Figure 12b

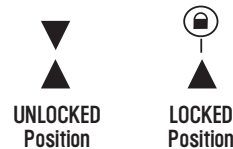


Figure 12c

7. Separate the Collection Bin Cover/Handle from the Collection Bin by pulling the Handle straight up and out of the Collection Bin. (See Figure 12b.)
8. Turn the Collection Bin upside down over a trash can. Make sure you empty all dirt and debris from above and below the Dirt Arrestor. To ensure that all the dirt spills out, tap the side of the Collection Bin gently against the edge of the trash can. (See Figure 12d.) Wipe away any debris attached to the Mesh Shroud or the Web attached to the Shaft.

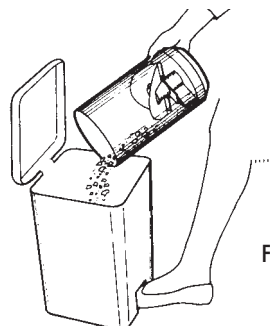


Figure 12d

Health Tip

If you suffer from allergies or asthma, take the Collection Bin outdoors to empty. As you empty the dirt into the trash can, gently tap the Collection Bin against the side of the can to remove loose debris.

Cleaning The Collection Bin

The Collection Bin should be washed periodically.

1. Wash the Bin in warm water using a mild soap. Avoid harsh or abrasive cleaners or sponges. Rinse thoroughly. **TO AVOID DAMAGE, DO NOT PLACE COLLECTION BIN IN THE DISHWASHER.**
2. Let it air dry. **Make sure the Collection Bin is completely dry before putting it back into the Vacuum Cleaner.**

Cleaning The Foam Filter and Pleated Filter Contained In The Collection Bin Cover/Handle

To get the best possible performance from your Vacuum Cleaner, clean the Foam Filter weekly and the Pleated Filter monthly.

1. Remove the Collection Bin.

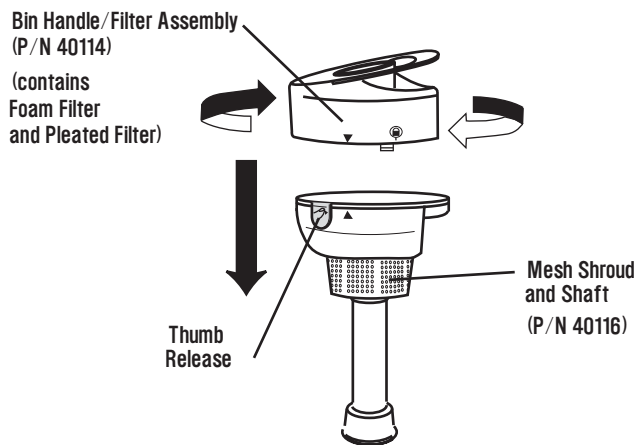


Figure 13a

2. The Bin Handle/Filter Assembly and the Mesh Shroud and Shaft join together to form the Collection Bin Cover/Handle. See Figure 13a. Grasping the Bin Handle/Filter Assembly in your right hand, and the Mesh Shroud and Shaft firmly in the other, press the Thumb Release with your left thumb. Turn the Bin Handle/Filter Assembly counter-clockwise to the UNLOCKED position; until the 2 arrows line up. (See Figure 12c.) Pull the Shaft away from the Bin Handle/Filter Assembly.

3. Remove the Foam Filter from the bottom of the Bin Handle/Filter Assembly. (See Figure 13b.) Note that the Pleated Filter is permanently affixed to the inside of the Handle. Rinse the Foam Filter and the Bin Handle/Filter Assembly with warm water and soap* and then rinse with water only until water running out the bottom is clean and there is no remaining soap.

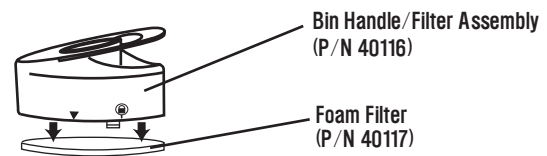


Figure 13b

*For best results, immerse in soapy water for 30 minutes.

4. **Air-dry both Filters: allow the Pleated Filter to thoroughly dry for at least 24 hours.**
5. Place clean Foam Filter into the bottom of the Bin Handle/Filter Assembly. Carefully tuck the edges of the Foam Filter inside the rim of the Bin Handle/Filter Assembly. (See Figure 13c.)

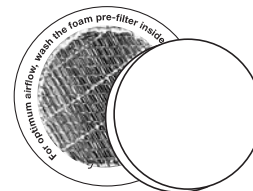


Figure 13c

IMPORTANT: FOR OPTIMUM VACUUMING PERFORMANCE, THE FOAM FILTER SHOULD BE WASHED WITH WARM, SOAPY WATER EVERY WEEK.

Reassembling the Collection Bin

1. After cleaning, you must reassemble the Bin Handle/Filter Assembly and the Mesh Shroud and Shaft. Position the Bin Handle/Filter Assembly onto the Mesh Shroud and Shaft to create the complete Collection Bin Cover/Handle. Line up the arrow on the Mesh Shroud and Shaft with the Bin Handle/Filter Assembly. Guide the tab from the Handle into the Shaft. (See Figure 14a.)

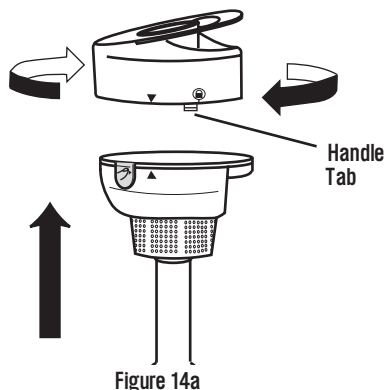


Figure 14a

2. Turn the Handle clockwise to the LOCKED position, the LOCK icon will line up with the arrow on the Shaft. (See Figure 14b.)

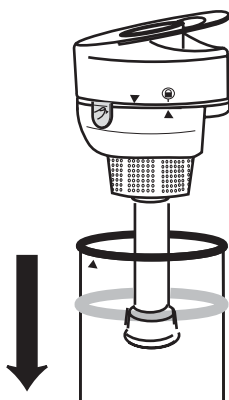


Figure 14b

3. Insert the assembled Collection Bin Cover/Handle into the Collection Bin, placing the bottom cup of the Shaft over the Collection Bin Dirt Arrestor. Line up the arrow on the Collection Bin with the Bin Handle/Filter Assembly. (See Figure 14c.)

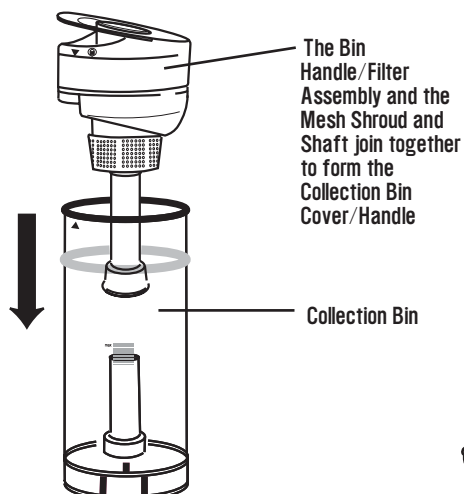


Figure 14c

4. Turn the Handle clockwise to the LOCKED position, the LOCK icon will line up with the arrow on the Collection Bin. (See Figure 14d.)

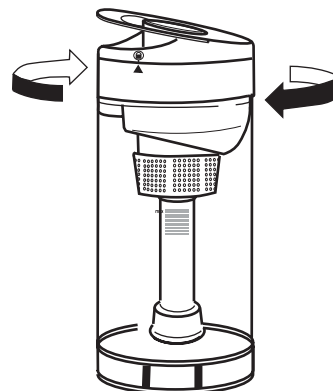


Figure 14d

Replacing the Collection Bin into the Vacuum Cleaner

1. Insert the assembled Collection Bin (consists of Collection Bin with Collection Bin Cover/Handle locked into it) bottom-first into the Collection Bin Storage Compartment at the front of the Vacuum Cleaner.
2. Grasp the Collection Bin Cover/Handle and push into the Vacuum Cleaner, pulling the Handle slightly down until it catches; then upwards to lock. You should hear an audible "click."

WARNING: If the Collection Bin is not secured in place, a loss of suction while vacuuming could result.

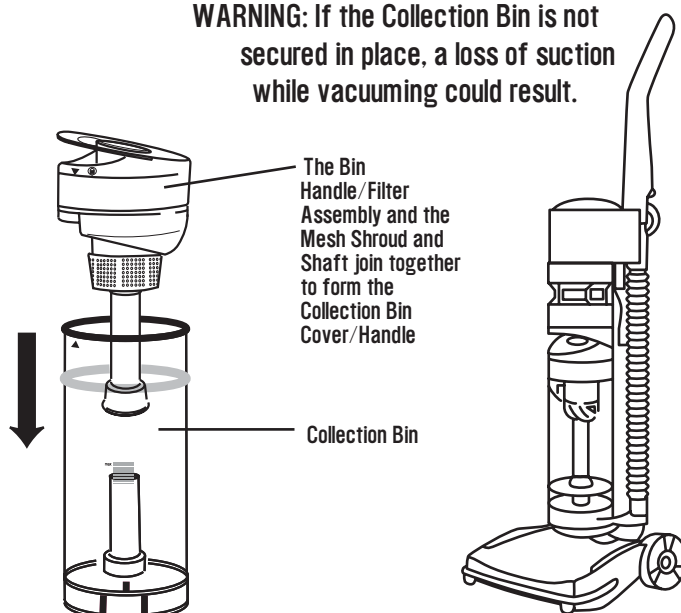


Figure 15

Cleaning the HEPA Filter

The HEPA Filter will need cleaning once every 3 months to maintain optimal performance.

1. Press the Power Button to turn the Vacuum Cleaner OFF.
2. **Remove the Battery Pack.**
3. Locate the round, notched HEPA Filter Cover on the top of the Vacuum Cleaner.
4. Grip and turn counter-clockwise, pulling the Cover off the top of the Vacuum Cleaner.
5. Use the center knob in the top of the HEPA Filter to pull the HEPA Filter out of the Filter Housing. (See Figure 16.)

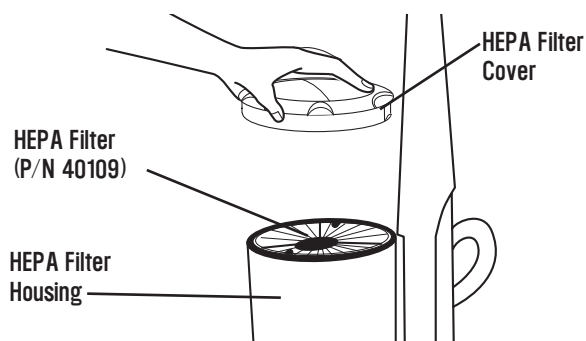


Figure 16

6. Tap Filter gently against trash container to free and eliminate excess dirt and debris.

IMPORTANT!

DO NOT ATTEMPT TO WASH THIS FILTER. THE MATERIAL IS NOT WASHABLE.

DO NOT IMMERSE, SOAK, DAMPEN, RUN WATER THROUGH, NEAR OR CLOSE TO THE HEPA FILTER. ANY WATER OR MOISTURE WILL CAUSE THE HEPA FILTER TO DISINTEGRATE. WASHING THE HEPA FILTER WILL VOID YOUR 7 YEAR HEPA FILTER WARRANTY.

TO AVOID DAMAGE, WHEN CLEANING THE FILTER, DO NOT PUT ANY OBJECT INSIDE THE FILTER MEDIA PLATES.

We recommend that the HEPA Filter be checked and cleaned every 3 months to maintain performance. Under normal circumstances, this Filter will last for 7 years.

7. Return the HEPA Filter into its Housing. Match the grooves in the top of the HEPA Filter Cover with the Filter Housing posts and replace into its position on the top of the Vacuum Cleaner. Turn clockwise to lock in place.

Removing A Blockage

The Westinghouse WST1600A Cord-Free Series Vacuum Cleaner may incur a loss of suction if there is a blockage in the machine. In most instances, a blockage will occur in the Cleaning Head, Rotating Brush, or the Wand/Hose.

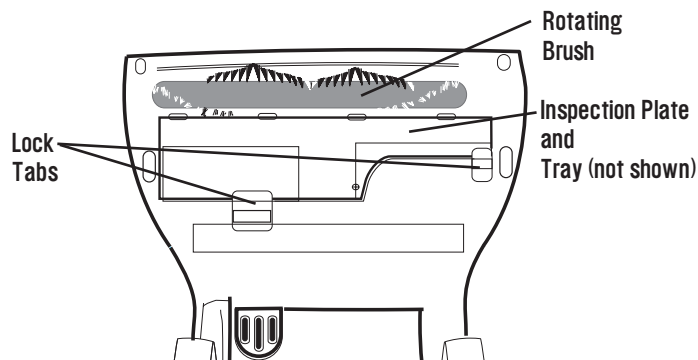


Figure 17

Blockage in the Rotating Brush or Cleaning Head

1. Press the Power Button to turn the Vacuum Cleaner OFF.
2. **Remove the Battery Pack.**
3. Turn the Vacuum Cleaner to rest the Base on its back. (See Figure 17.)
4. Check the Rotating Brush. Remove any lodged debris or caught objects.
5. Press the 2 Lock Tabs and pull the Inspection Plate away from the Vacuum Cleaner.
6. Pull the Tray out of the Vacuum Cleaner which will give you total access to the Air Passageway and lodged fluff or debris.
7. Gently remove all debris using a long, straight tool such as a screwdriver.
8. Once you have cleaned the Air Passageway, replace the Tray and then snap the Inspection Plate back into position.
9. Return the Vacuum Cleaner to its normal upright position.

Blockage in the Wand/Hose

1. Press the Power Button to turn the Vacuum Cleaner OFF.
2. **Remove the Battery Pack.**
3. Detach the Telescopic Wand from the Hose and look down through the Wand to see if there is a blockage.
4. If the Wand is free of debris, then remove the Collection Bin.
5. Once the Collection Bin is removed, you will have exposed a hole in the Cleaner Base.
6. Look down the hole for any debris. Half way down the hole you will see an opening coming from the wand/hose region.
7. If you suspect a blockage there, you will need to use a metal coat hanger to feed into the hole and around the bend to the hose area.
8. Once you have cleaned the debris, replace the Collection Bin and Telescopic Wand.

For Your Safety: **Electronic Brush Brake**

Your Cord-Free Vacuum Cleaner has a sophisticated Electronic Brush Brake system that senses when an excessive load has been applied to the Brush. If the Brush gets caught in the fringe of a carpet or a scatter rug, the Brush will turn itself OFF. The Power Saver/Brush Status Light will turn red to indicate the stoppage of the Brush.

1. **Remove the Battery Pack.**
2. Consult the section entitled: REMOVING A BLOCKAGE in this Owner's Manual.

For Your Safety: **Automatic Shut-Off**

The main suction motor in your Vacuum Cleaner is thermally protected from overheating which can occur if there is a blockage of air. If the main motor shuts down due to overheating, follow the instructions in the section entitled REMOVING A BLOCKAGE in this Owner's Manual.

QUESTIONS AND ANSWERS

The Westinghouse WST1600A Cord-Free Vacuum Cleaner is easy to use. Even so, you may have some questions about how it works. Here are answers to some of the most common questions. If you still have a question and can't find the answer here, please call Consumer Service toll free at: 1-800-616-8689 or e-mail Salton, Inc. at: salton@saltonusa.com.

What is the Conditioning Cycle?

The Battery Pack Conditioning Cycle will take the batteries through a series of events to balance the individual cells and give peak battery capacity and run time.

When should the Battery Packs be reconditioned?

Battery Packs should be conditioned every 50-charge/discharge cycles.

How long does it take to condition a Battery Pack?

To ensure proper battery performance, please allow 24 hours to condition/charge your Battery Packs. Once the Conditioning Cycle Button is depressed, the Cycle may not be interrupted.

How long does it take to “normally” charge a Battery Pack? After fully charging, how long should my Battery Pack last?

It takes 30 minutes (without conditioning) to completely charge a Battery. Fully charged, your Battery Pack should provide 20 to 30 minutes of vacuuming time when the Vacuum Cleaner is used in carpet/bare floor mode. Run time is reduced when the above-floor Cleaning Wand is used.

Can I charge a Battery Pack even if it is not entirely used up?

You may charge a partially used Battery Pack whenever you desire with no adverse effect on the Battery Pack. If you charge the Battery Pack for 10 minutes, you should gain 7 to 10 minutes of vacuuming time.

Where is the best place to store my spare Battery?

Store the fully charged Battery Pack in the Battery Charger until you are ready to vacuum. The Charger may be left plugged in.

Can I use the Westinghouse WST1600A Cord-Free Series Vacuum Cleaner outside?

No. The Westinghouse WST1600A Cord-Free Series Vacuum Cleaner is designed for indoor use only. Do not use the Vacuum Cleaner outdoors, or on wet indoor surfaces. Do not use the Battery Charger outdoors.

Are there any types of materials that should NOT be vacuumed up with the Westinghouse Vacuum Cleaner?

Yes. Do not vacuum up damp materials such as mud, tile grout, plaster-filler or caulking since these materials could harden inside the Vacuum Cleaner and cause damage. Also, do not pick up large surface litter, fireplace ashes, cellophane, twine or solid objects such as coins, paper clips, safety pins, etc. These types of objects can easily lodge in the Cleaning Head and will decrease suction and cleaning ability.

How often should I clean the Foam Filter and the Pleated Filter?

FOR OPTIMUM VACUUMING PERFORMANCE, THE Foam Filter SHOULD BE WASHED with warm, soapy water EVERY WEEK.

WASH THE PLEATED FILTER MONTHLY.

A drop in performance signalled by a drop in suction at the end of the Hose, a drop in cyclonic swirling in the Collection Bin, or the Vacuum Cleaner's inability to pick up debris from the floor are indicators that these Filters need cleaning.

What should I do if the suction in my Vacuum Cleaner starts to decrease or shuts off altogether?

Check the Foam Filter and Pleated Filter contained in the Collection Bin Cover/Handle. If either is dirty, suction power can be adversely affected. If required, clean the Filters, following the instructions outlined in the section entitled: **CLEANING THE FOAM FILTER AND PLEATED FILTER CONTAINED IN THE COLLECTION BIN COVER/HANDLE** on page 18 in this Owner's Manual.

Make sure the Collection is securely locked in place. If the Collection Bin is not secured, a loss of suction while vacuuming could result.

Check the status of your Battery. When the battery is nearly consumed (approximately 2 minutes remaining) the Power Indicator Light on the Control Panel will turn amber.

Recondition your Battery Pack. Follow the **BATTERY PACK CHARGING PROCEDURE / BATTERY CONDITIONING CYCLE** instructions described in this Owner's Manual.

What if there is still no suction when I turn on my Vacuum Cleaner?

Follow the **REMOVING A BLOCKAGE** instructions described in this Owner's Manual.

**My Vacuum Cleaner turned itself OFF!
What should I do?**

If the Vacuum Cleaner is left in the upright position when the Power Button is activated, the Vacuum Cleaner will place itself in **Sleep Mode**. Both the Suction and Brush Motors will turn OFF and remain on standby for 10 minutes. When the Vacuum Cleaner is tilted back into the working position or the above-floor cleaning wand is activated, power will automatically be restored. After 10 minutes in the Sleep mode with no activity, the Vacuum Cleaner will turn itself OFF.

Check to make sure the Telescopic Cleaning Wand is properly attached when the Vacuum Cleaner is used in the working position on carpets and bare floors. If the Wand is not properly attached, the Vacuum Cleaner will turn itself OFF. Push up on the Handle until it snaps and locks into place in the channel at the back of the Vacuum Cleaner, under the Wand Release Button. (See Figure 3b.)

How often will I need to replace the belt?

The Westinghouse WST1600A Vacuum Cleaner uses a special break-free belt. It rarely breaks or needs replacing.

How can I order a Hose Extension or other accessories for my Westinghouse WST1600A Vacuum Cleaner?

Just call our toll free number:
1-800-616-8689 and refer to the "Accessory/Parts List" in this manual.

What are some of the other accessories I can order for my Westinghouse WST1600A Vacuum Cleaner?

There is a wide range of replacement accessories available. Simply refer to the "Accessory/Parts List" at the back of this manual for a complete list and ordering instructions.

CALL US AT:

1-800-616-8689

or email us at: salton@saltonusa.com



Westinghouse



WST1600A CORD-FREE SERIES ACCESSORY ORDER FORM

Please contact us tollfree at: 1-800-616-8689 for All Pricing Information.

To use as a self-mailer, please fold order form as shown on backside, seal with tape and add postage.

PART #	DESCRIPTION		QUANTITY	PRICE EACH	AMOUNT (\$)
40111	Crevice Tool				
40112	Dusting Brush				
40113	Universal Cleaning Tool				
40114	Bin Handle/Filter Assembly				
40115	Collection Bin				
40117	Foam Filter				
40109	HEPA Filter				
40120	Battery Charger Cover				
C1600	Battery Charger				
40119	Battery Charger Filter Cover				
40121	Battery Charger Mesh Pre-Filter				
BP1600	Battery Pack				
40118	Fuse				

MAILING LABEL: Please Print

Name _____

Street: _____

City: _____ State: _____

Zip Code _____ Tel: () _____

SUBTOTAL

TAX
(if applicable)

TOTAL

METHOD OF PAYMENT:

☐ Check / Money Order

☐ Visa

☐ American Express

C.I.D.# ☐☐☐☐☐☐

☐ Master Card

☐ Discover

Credit Card Number:

Expiration Date:

Signature:

CARDHOLDER ADDRESS (If different from mailing address indicated above): Please Print

Name _____

Street: _____

City: _____ State: _____

Zip Code _____ Tel: () _____

Satisfaction guaranteed or full refund price of Accessory within 30 days from date of receipt (less shipping and handling).

Please contact us at: 1-800-616-8689 for RETURN AUTHORIZATION.

Enclose Check or Money Order payable to: Salton, Inc.

 
*Accessories described are subject to availability. Please allow 2 to 4 weeks for processing and delivery.

™ and "You can be sure...if it's Westinghouse" are trademarks of Westinghouse Electric Corporation and used under license by Salton, Inc.

Unplugged® is a registered trademark of Salton, Inc.

You can be sure...if it's Westinghouse™





PLACE
STAMP
HERE

Salton, Inc.
1801 North Stadium Blvd.
Columbia, MO 65202

ATTN: WESTINGHOUSE VACUUMS
ORDER PROCESSING DEPARTMENT

WESTINGHOUSE UNPLUGGED® WST1600A CORD-FREE VACUUM CLEANER ACCESSORY / PARTS LIST

Replacement parts are available, and may be purchased through our Consumer Service Department by calling 1-800-616-8689, Monday through Friday, 9am - 5pm Central Time. You can pay for these parts by using either Visa, Mastercard, Discover, or American Express. Please be ready to give the part number(s) when you call.

Or log into our website to order at: **www.eSalton.com**

<u>PART #</u>	<u>DESCRIPTION</u>
40111	Crevice Tool
40112	Dusting Brush
40113	Universal Cleaning Tool
40114	Bin Handle/Filter Assembly
40115	Collection Bin
40117	Foam Filter
40109	HEPA Filter
C1600	Battery Charger
40120	Battery Charger Cover
40119	Battery Charger Filter Cover
40121	Battery Charger Mesh Pre-Filter
BP1600	Battery Pack
40118	Fuse

LIMITED WARRANTY

One Year Vacuum Cleaner Warranty: This Westinghouse Vacuum Cleaner is warranted to be free from defects in materials and workmanship for a period of (1) year from the original purchase date.

Seven Year Filter Warranty: The HEPA Filter in your Westinghouse Vacuum Cleaner is warranted not to become so clogged that it starts to significantly retard air flow for a period of seven (7) years from the original purchase date.

Original Purchaser: This warranty covers only the original consumer purchaser for as long as he or she owns the Westinghouse Vacuum Cleaner.

Warranty Coverage: This warranty is valid only if the purchaser uses the Vacuum Cleaner in accordance with Salton's Operating Instructions. This warranty is void if the Westinghouse Vacuum Cleaner is used for commercial or rental use. This warranty does not apply (i) to normal wear parts that require replacement under normal use, including but not limited to: battery packs, rubber parts, hoses, bumpers and attachments; (ii) to ordinary wear and tear and blockages which occur during use; (iii) if the machine is used to vacuum excessive amounts of plaster dust, sawdust, or fireplace ash; (iv) to Vacuum Cleaners which have been subject to abuse, misuse, negligence or accident; or (v) to damage or defects which were caused by unauthorized or improper use, modification, alteration, service or repair.

This warranty is effective only if the Westinghouse Vacuum Cleaner is purchased and operated in the USA, and does not extend to any units which have been altered or modified

Implied Warranties: ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE WITH RESPECT TO THE WESTINGHOUSE VACUUM CLEANER ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE ORIGINAL PURCHASE DATE. ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE WITH RESPECT TO THE HEPA FILTER ARE LIMITED IN DURATION TO SEVEN (7) YEARS FROM THE ORIGINAL PURCHASE DATE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Vacuum Cleaner Warranty Performance: If the Westinghouse Vacuum Cleaner is found to be defective during the warranty period, Salton will, at its option, either repair or replace the Vacuum Cleaner with a reconditioned comparable model, without charge, or refund the purchase price. To get warranty service:

1. Call Salton Consumer Service, toll-free at: 1-800-616-8689 to report the problem.
2. You will be given the name of an Authorized Salton Service Center.
3. Take the Vacuum Cleaner and proof-of-purchase to the designated Authorized Salton Service Center for warranty repairs deemed appropriate by the designated Service Center.
4. If there is no local Authorized Service Center, you may be requested to ship your Vacuum Cleaner (postage prepaid) to a designated Authorized Salton Service Center for warranty repairs. Care must be exercised when the Vacuum Cleaner is shipped, as Salton will not be responsible for warranty repairs to products damaged during transit.

HEPA Filter Warranty Service: If the HEPA Filter becomes so clogged during the warranty period that it starts to significantly retard air flow while you still own the Vacuum Cleaner in which it was installed, Salton will send you a replacement HEPA Filter at no cost. To get warranty service, send the defective Filter postage pre-paid to the Repair Center listed below together with a proof-of-purchase.

Risk During Shipment: We cannot assume responsibility for loss or damage for products shipped for warranty repair. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof-of-purchase to determine warranty status. C.O.D. shipments cannot be accepted.

To return the product, ship to:

ATTN: Repair Center
Salton, Inc.
708 South Missouri Street
Macon, MO 63552

To contact us, please write to, call, or email:

Consumer Relations Dept.
Salton, Inc.
1801 North Stadium Blvd.
Columbia, MO 65202
1-800-616-8689
E-mail: Salton@Saltonusa.com

Limitation of Remedies: No representative or other person is authorized to assume for Salton any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and in no event shall Salton be liable for any incidental or consequential damages, losses or expenses. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Legal Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

®™ and "You Can Be Sure...If It's Westinghouse" are trademarks of Westinghouse Electric Corporation and used under license by Salton, Inc. Unplugged® is a registered trademark of Salton, Inc.

For more information on Salton products: visit our website: www.eSalton.com