 


# ***Juiceman***<sup>®</sup>

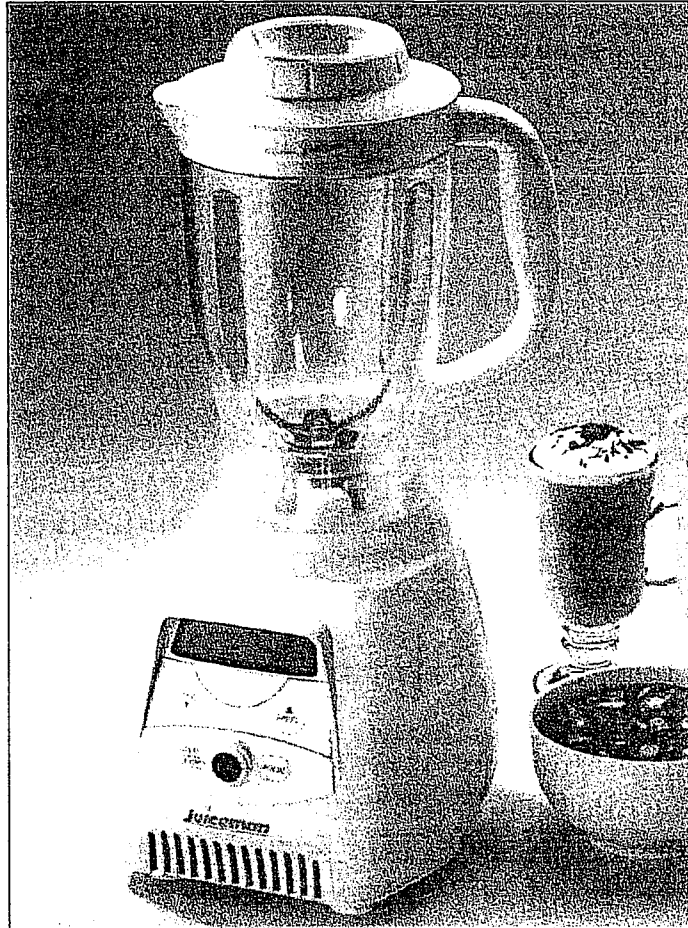

INSTRUCTION MANUAL

 smoothies

MODEL: JMS6



# IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed including the following:

1. Read all instructions before using.
2. To protect against risk of electrical shock, do not submerge Blender Base, Cord or Plug in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contact with moving parts.
6. Do not operate the SMOOTHIE with a damaged cord or plug or should the appliance malfunction, or has been dropped or damaged in any manner. Contact Consumer Service for return authorization for examination, repair or electrical or mechanical adjustment.
7. Do not use outdoors.
8. Do not let cord hang over edge of table or counter or touch hot surfaces.
9. Keep hands, hair, clothing and utensils away from moving blades and out of container while blending to reduce the risk of severe injury to persons or damage to the SMOOTHIE. A scraper may be used but must be used only when the Blender is not running.
10. Blades are sharp. Handle carefully.
11. Always operate Blender with Blending Jar Lid in place.
12. The use of attachments, including canning jars, not recommended or sold by the manufacturer may cause fire, electric shock or injury.
13. When processing hot liquids, remove Center Lid from the Blending Jar Lid.
14. Be certain Blending Jar Lid is securely locked in place before operating appliance.

## SAVE THESE INSTRUCTIONS



## ADDITIONAL IMPORTANT SAFEGUARDS

1. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. When using this appliance, provide adequate air space above and on all sides for air circulation. Do not allow this appliance to touch curtains, wall coverings, clothing, dish towels or other flammable materials during use.
4. Do not leave this appliance unattended during use.
5. If this appliance begins to malfunction during use, immediately press OFF Button and unplug the cord. Do not use or attempt to repair the malfunctioning appliance. Do not use the Blending Jar if cracked or chipped.

## GROUNDING-TYPE PLUG

This appliance has a 3-prong grounded-type plug. This plug will only fit into an electrical outlet made for a 3-prong plug. This is a safety feature. If the plug should fail to fit the outlet, contact a qualified electrician. Do not attempt to defeat this safety feature.

## ELECTRIC POWER

If the electric circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

Extension cords are not recommended, however, if an extension cord is used, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and (2) the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

 
## PLASTICIZER WARNING

**CAUTION:** To prevent Plasticizers from migrating from the finish of the counter top or table top or other furniture, place **NON-PLASTIC** coasters or place mats between the appliance and the finish of the counter top or table top.

Failure to do so may cause the finish to darken, permanent blemishes may occur or stains can appear.




## GETTING TO KNOW YOUR JUICEMAN® JMS6 SMOOTHIE

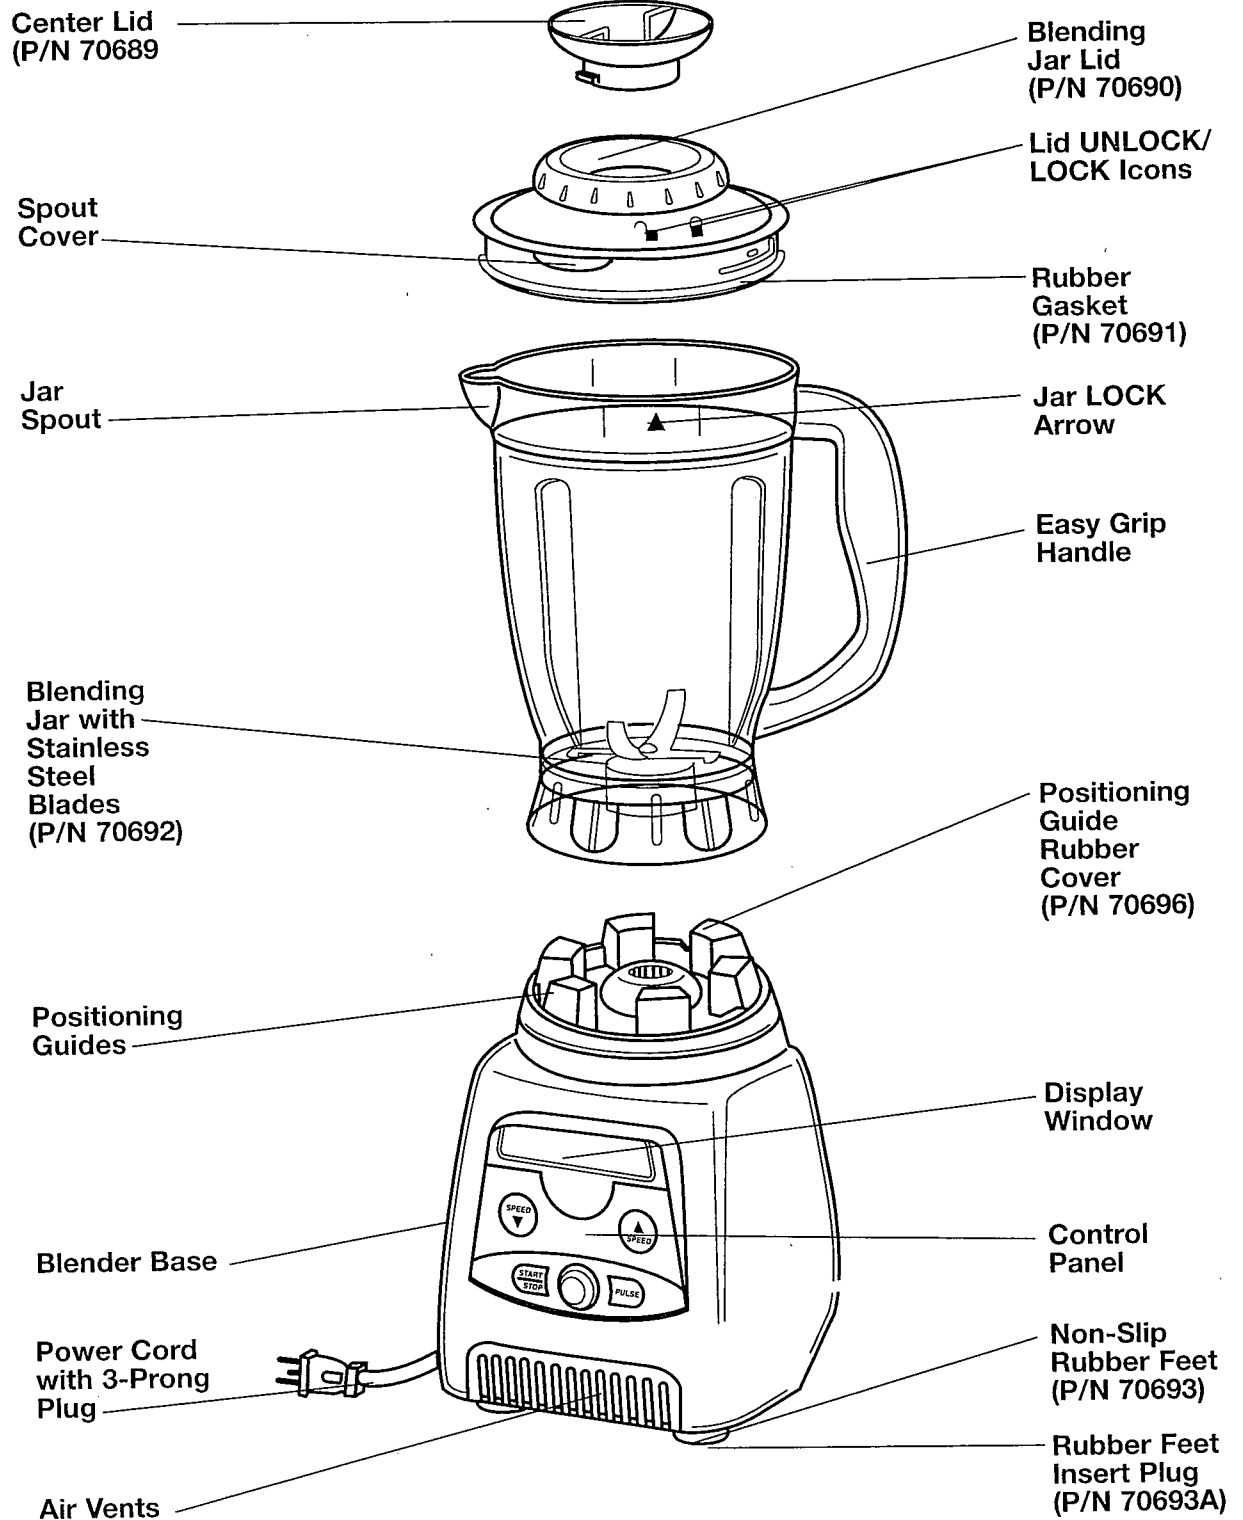



## CONTROL PANEL

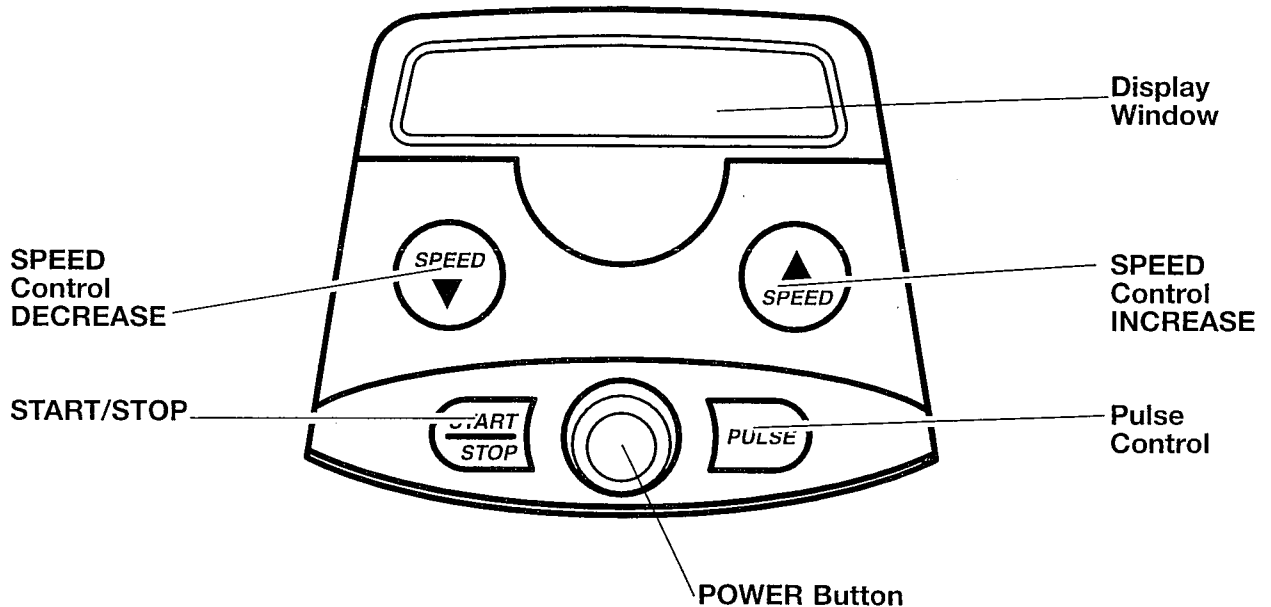 

### **POWER Button**

Press the POWER Button to turn the Blender ON and OFF. The POWER Button will glow red to indicate the Smoothie is ready to operate.

### **Display Window**

When the POWER Button is pressed, the Display Window will illuminate. The Display Window shows Blender SPEED (%), Time elapsed in Minutes and Seconds.

### **SPEED (%) Controls ▲ and ▼**

Use this pair of Buttons to select the desired SPEED from 5% to 100% in increments of 5%, where 5% is the minimum SPEED and 100% is at full blending power.

▲ Each time you press this arrow, the SPEED Control increases 5%.

▼ Each time you press this arrow, the SPEED Control decreases 5%.

(Hint: Holding the arrow down in place will either fast forward ▲, or fast reverse ▼ the SPEED.)

### **Start/Stop**

Press and hold this Button to START blending or to STOP Blender operations.

### **PULSE Control Button**

Press this Button to initiate PULSE blending action, for short bursts of power. PULSE is activated as long as you continue to press the Button. Pulsing action will stop as you release.



## SAFETY SYSTEM

The SMOOTHIE has a Safety System that disables the Motor if the Blending Jar is not (or is improperly) seated in the Blender Base. The words: "NO JAR" will appear on the Display Window.



When finished using this Blender, press POWER Button to turn OFF. DO NOT use this Safety System to turn the Blender ON and OFF. This Safety System is intended for safety reasons only.

## BEFORE FIRST USE

1. When using for the first time, wash Blending Jar with Blades, Center Lid, and Blending Jar Lid in warm soapy water. Rinse well and dry thoroughly.
2. Wipe SMOOTHIE with a soft, clean cloth or sponge.

**CAUTION: TO PROTECT AGAINST ELECTRIC SHOCK, NEVER IMMERSE THE BLENDER BASE IN WATER OR ANY OTHER LIQUID.**

3. Be sure to unplug the power cord and wind around the Cord Storage area on the bottom of the Blender Base when SMOOTHIE is not in use.


 



## INSTRUCTIONS FOR USE

1. Place Blender Base on a dry, level surface. SMOOTHIE's Non-Slip Feet should feel secure on the working surface.
2. Make sure cord is unplugged and POWER Button is OFF.
3. Place Blending Jar on top of Blender Base. Using the 6 Positioning Guides, rotate the Jar to be in any of 6 possible positions, with the Handle facing left or right. The Jar will fit snugly as it is properly seated. Your SMOOTHIE is suitable for both left-handed and right-handed users, and, when not in use, the Handle may be rotated for convenient storage.


4. Add ingredients to Blending Jar.

**CAUTION: NEVER operate Blender when the Jar is empty.**

 
5. **To Lock Blending Jar Lid:** Place Blending Jar Lid on top of the Blender Jar and align the Lid's UNLOCK icon  with the Jar's (▲). Turn clockwise until the Jar's arrow (▲) and the Lid's LOCK icon  are aligned. The Lid must fit securely in place.

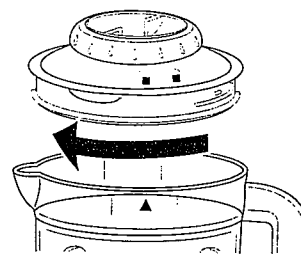

**Properly locked, the Spout Cover on the Lid is centered over the Spout of the Jar.**

**To Unlock Blending Jar Lid:** Rotate Blending Jar Lid counterclockwise until the Jar's arrow (▲) and the Lid's UNLOCK icon  are aligned. Then remove the Blending Jar Lid.

 6. Lock Center Lid into the Jar Lid by turning clockwise until properly seated.
7. Make sure that the POWER Button is still OFF and plug into a 120V AC electrical outlet.
8. To turn the SMOOTHIE Blender ON, press the POWER Button; it will glow red; the Display Window will illuminate. The SMOOTHIE Blender is now ready to operate. "POWER ON" will be displayed first. Then, the default SPEED setting at 50% and Time 0 :00 will appear on the Display Windows (See illustrations below).



**CAUTION: DO NOT TOUCH BLADES. DO NOT INTERFERE WITH THE BLADE MOVEMENT.** Keep hands and utensils out of Blending Jar while operating to reduce the risk of severe injury to persons or damage to the Blender. A scraper may be used, but must be used only when the Blender is not running.



## OPERATIONAL MODES

Your SMOOTHIE has 2 Modes of operation: Continuous Mode and PULSE Mode.

### CONTINUOUS MODE

1. Press the POWER Button.
2. Select the desired SPEED from 5% to 100%, (default SPEED setting is 50%) by using the up ▲ and down ▼ SPEED (%) Controls.
  - ▲ Each time you press this arrow, the SPEED (%) Control increases 5%.
  - ▼ Each time you press this arrow, the SPEED (%) Control decreases 5%.The SPEED (%) appears on the Display Window.

*(Hint: Holding the arrow down in place will either fast forward ▲, or fast reverse ▼ the SPEED.)*

3. Firmly press and hold the START/STOP Button to start blending.

**NOTE:** The SPEED (%) Control can be changed while blending in Continuous Mode.

4. The Display Window shows Time elapsed in Minutes and Seconds.
5. When blending is complete, press START/STOP Button again to stop the operation. The Display Window will show the previous SPEED (%) setting and total elapsed blending time.

**NOTE:** In order to avoid overheating, blending will be stopped automatically after 2 minutes of operation in Continuous Mode. To reset the unit, press the POWER Button to the OFF position and allow to cool for 5 minutes, then press the POWER Button to the ON position.

6. When you are finished using the SMOOTHIE for a period of time, press the POWER Button to the OFF position.

### PULSE MODE

The PULSE Mode is recommended for short bursts of power blending.

1. Choose the desired SPEED (%) (follow instructions listed for the Continuous Mode).
2. Press firmly on the PULSE Control Button to start blending.
3. The Blender will operate as long as the PULSE Button is held down and will stop as you release.

**NOTE:** The SPEED (%) Control can NOT be changed while blending in PULSE Mode.





## HINTS & TIPS

### GENERAL

- Add ingredients to Blending Jar a little at a time to ensure proper blending and to prevent overflow. **Never fill Blending Jar more than 3/4 full**; the action of the Blades will cause the ingredients to rise in the Blending Jar. Make large recipes in several batches.
- Unless the recipe states differently, pour liquid ingredients into Blending Jar before solid ingredients. The liquid will help the processing go faster and at a lower SPEED (%).
- For Powdery Crushed Ice no liquid needed (see recipe).
- When in Continuous Mode, blend for 5 to 30 seconds, and check consistency. Continue blending until desired consistency is reached. Over-blending will result in a loose consistency.

**NOTE:** Always operate Blender with Lid in place.

- Do not remove Blending Jar from the Blender Base when the Motor is running.

**CAUTION: DO NOT TOUCH BLADES. DO NOT INTERFERE WITH THE BLADE MOVEMENT.** Keep hands and utensils out of Blending Jar while operating to reduce the risk of severe injury to persons or damage to the Blender. A scraper may be used, but must be used only when the Blender is not running.

### SOLIDS

- Thick mixtures require special attention during processing. Periodically press the OFF Button and scrape mixture off sides of Blending Jar and onto the Blades. Replace Lid and continue processing. Select a higher SPEED if processing becomes sluggish.
- With the Center Lid removed, add solids and ice small amounts at a time through the hole in the Blending Jar Lid. Always cut solid foods such as vegetables and cheese into small chunks before placing in the Blending Jar.

### HOT INGREDIENTS

- To prevent excessive heat expansion remove Center Lid from Jar Lid before adding hot ingredients. Add hot foods slowly (to a maximum of 2 cups) through the Blender Jar Lid's center hole.

**NOTE:** For blending hot ingredients, remove Center Lid to allow for heat expansion before blending. Place a small rag or paper towel over opening to prevent hot liquids from splashing out.

**CAUTION:** To prevent the risk of burns, do not use your hand to cover opening!



## USER MAINTENANCE INSTRUCTIONS

### CLEANING YOUR SMOOTHIE

**CAUTION:** Do not immerse Blender Base in water.

**Always unplug the unit before cleaning.**

1. Disassemble Blender Lid by turning the Center Lid counter-clockwise until it removes easily from the Jar Lid.
2. Rotate Blending Jar Lid counterclockwise until the Jar's arrow (▲) and the Lid's UNLOCK icon ◡ are aligned. Then remove the Blending Jar Lid.
3. Wash Blending Jar with Blades, Jar Lid and Center Lid in warm, sudsy water. Use any mild liquid dishwashing detergent. Do not use any products containing ammonia, or scouring powders. These products will dull, scratch or mar the plastic surface. Rinse all parts and wipe dry.
4. For complete cleaning, remove Positioning Guide Rubber Cover from the Blender Base and the clear Rubber Gasket from the bottom rim of the Jar Lid and wash in warm, soapy water.
5. To loosen foods easily from Blades, fill Blending Jar not more than one-quarter full with warm water and a drop or two of liquid dishwashing detergent. Set SPEED to 25-50% and continuously blend for a two to five minutes. Inspect Blades. Use a long handled kitchen brush to remove debris from the Blades.

**CAUTION:** Allow Blades to air-dry, do not touch Blades at any time.

6. Wipe Blender Base and Power Cord with a warm, sudsy cloth, then wipe clean with a damp cloth. Dry with a soft cloth. Sponge off the Blender Base and Non-Slip Rubber Feet in case any liquid has spilled under the Blender.



## USER MAINTENANCE INSTRUCTIONS (Con't.)

 
This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

### STORAGE

1. Unplug unit and allow to cool. Never store it while it is hot or still plugged in.

**CAUTION:** Severe injury can result if Blender is accidentally turned on when not properly assembled.

2. Wrap cord around the Cord Storage area, located on the bottom of the Blender Base. (See illustration below.)

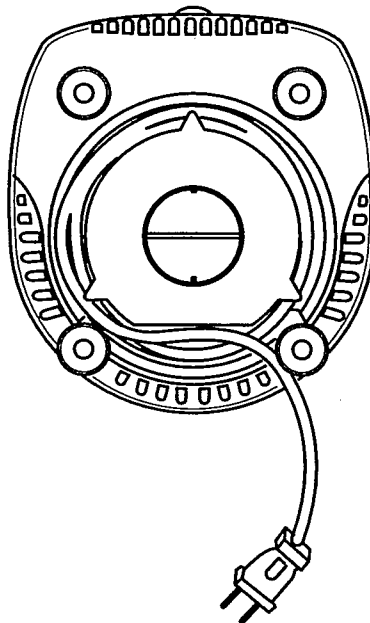

# LIMITED ONE YEAR WARRANTY

**Warranty:** This Juiceman® product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

**Warranty Coverage:** This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**Implied Warranties:** ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

**Warranty Performance:** During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

**Service and Repair:** Should the appliance malfunction, you should first call toll-free 1 (800) 233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number JMS6 when you call.

**In-Warranty Service (USA):** For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization 1 (800) 233-9054.

**Out-of Warranty Service:** A flat rate charge by model is made for out-of-warranty service. Include \$15.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

**For Products Purchased in the USA, but Used in Canada:** You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

**Risk During Shipment:** We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

**To return the appliance, ship to:**

ATTN: Repair Center  
Salton, Inc.  
708 South Missouri Street  
Macon, MO 63552

**To contact us, please write to, call, or email:**

Salton, Inc.  
P.O. Box 7366  
Columbia, MO 65205-7366  
1-800-233-9054  
E-mail: Salton@Saltonusa.com

**Limitation of Remedies:** No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and **in no event shall Salton be liable for any incidental or consequential damages, losses or expenses.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

**Legal Rights:** This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For more information on Salton products: visit our website: [www.juiceman.com](http://www.juiceman.com), or email us at: [juiceman@saltonusa.com](mailto:juiceman@saltonusa.com)

©2001 Salton, Inc. All rights reserved.

Printed in China

P/N 60846

09/01