



MASSAGING PAD WITH HEAT

OWNER'S MANUAL & OPERATING INSTRUCTIONS Model SEAT313

REGENESIS™

IMPORTANT SAFEGUARDS

When using an electrical appliance, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER: To reduce the risk of electrical shock:

- I. Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- 2. Never use pins or other metallic fasteners with this appliance.
- 3. Carefully examine the covering before each use. Discard the appliance if the covering shows any sign of deterioration, such as ripped cloth or damaged parts.
- 4. Keep Dry-Do not operate in a wet or moist condition.

WARNING: To reduce the risk of fire, burns, electric shock or injury to persons:

- I. An appliance should never be left unattended when plugged in. Unplug unit from outlet when not in use.
- 2. Do not operate under blanket or pad. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- 3. Close supervision is necessary when this appliance is used by, on, or near children, invalids or disabled persons.
- 4. Use this appliance only for its intended use as described in this manual.
- 5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged in any matter, or dropped into water. Send appliance to an authorized service center for examination and repair.
- 6. Do not carry this appliance by its supply cord or use cord as a handle.
- 7. Keep the cord away from heated surfaces.
- 8. Never use while sleeping.
- 9. Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 11. To disconnect, turn all controls to the OFF position, then remove the plug from outlet.

12. Use heated surfaces carefully. May cause serious burns. Do not use over sensitive skin, on legs with varicose veins or in the presence of poor circulation. The unattended use of heat by children or incapacitated persons may be dangerous.

ADDITIONAL IMPORTANT SAFEGUARDS

- 1. If you have any concerns regarding your health, consult a physician before operating.
- 2. This unit is not intended to treat any ailment and is not a substitute for a doctor's care.
- 3. Massage should be pleasant and comfortable. If you experience pain in a muscle or joint for a prolonged period of time, discontinue use and consult your doctor. Persistent pain could be a symptom of a more serious condition.
- 4. Do not attempt to wash the internal Heating and Massaging Element. Only the Outer Casing can be washed.
- 5. Do not allow cords to hang where they can be easily tripped over or pulled.
- 6. If the unit comes into contact with water it should be unplugged from the main power supply.
- 7. Do not use massage function for more than 60 minutes at a time. It is suggested that the massage function should be allowed to cool down for three minutes for every 30 minutes of use. However, the heating element can be used continuously.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

GETTING TO KNOW YOUR MASSAGING PAD WITH HEAT


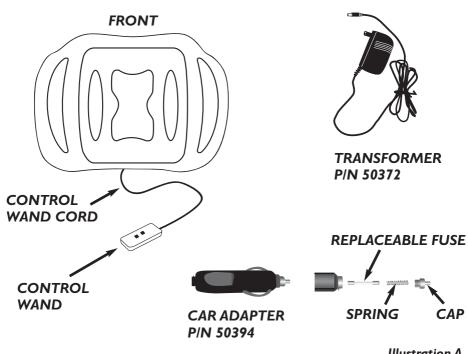


Illustration A

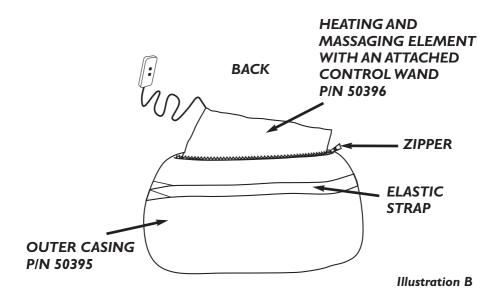

HOW TO USE YOUR MASSAGING PAD WITH HEAT

The Massaging Pad is designed to attach to a chair for a lower back massage. It will fit on most office style chairs.

- I. Unpack the Massaging Pad, Transformer and Car Adapter from box (Illustration A).
- Select the chair you would like to use, and attach the Massaging Pad by placing the Elastic Strap over the back of the chair.
- 3. Unwrap the Control Wand Cord.
- 4. Plug the Transformer into a standard 120V outlet; or, if used in a car plug the Car Adapter into your cigarette lighter. Plug the opposite end of Transformer or Car Adapter into the DC Jack located on the bottom Control Wand (Illustration C).
- 5. Sit down and place back against Massaging Pad (Illustration D).
- 6. Using the Control Wand, select High/Low massage, and/or High/Low heat.
- When finished, turn both switches to OFF and unplug unit.

Note: Adding heat to the massage will decrease the massage intensity. This is because they share the same power supply, and is normal.

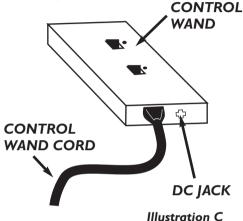




Illustration D

REPLACING THE FUSE

The fuse in the Car Adapter is replaceable. To replace:

- 1. Unscrew the Cap.
- 2. Remove the Spring and Fuse.
- 3. Replace the Fuse with a standard I amp Fuse.
- 4. Replace Spring.
- 5. Replace Cap.

CLEANING INSTRUCTIONS

The Outer Casing is washable. To wash, the Outer Casing **must** be separated from the Heating and Massaging Element.

TO SEPARATE:

- I. Unzip the zipper on the back of the unit from which the Control Wand protrudes (Illustration B).
- 2. Remove the Heating and Massaging Element from the Outer Casing.
- 3. Wash Outer Casing by hand or on delicate cycle only. Washing on regular cycle may cause the color to fade.
- 4. Tumble dry Outer Casing on low heat. Make sure the unit is completely dried before reassembling.

TO REASSEMBLE:

- I. Replace Heating and Massaging Element inside the Outer Casing.
- 2. Close Outer Casing of unit by closing the zipper on back of unit.

STORAGE

- I. Unplug unit and allow it to cool.
- 2. Store unit in its box or in a clean, dry place.
- 3. Do not hang the unit by the power cord.

USER MAINTENANCE

This appliance requires little maintenance. Do not try to repair it yourself. Contact a qualified appliance repair technician if the product requires servicing.

LIMITED ONE YEAR WARRANTY

Warranty: This Relaxor® product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

Warranty Coverage: This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Implied Warranties: ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair: Should the appliance malfunction, you should first call toll-free 1 (800) 233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number SEAT313 when you call.

In-Warranty Service (USA): For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization 1 (800) 233-9054.

Out-of Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$6.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

For Products Purchased in the USA, but Used in Canada: You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

Risk During Shipment: We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

To return the appliance, ship to:

ATTN: Repair Center Salton, Inc. 708 South Missouri Street Macon, MO 63552 To contact us, please write to, call, or email:

P.O. Box 1637 Columbia, MO 65205-1637 1-800-233-9054 E-mail: Salton@Saltonusa.com

Limitation of Remedies: No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and in no event shall Salton be liable for any incidental or consequential damages, losses or expenses. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Legal Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For more information on Salton products: visit our website: www.salton-maxim.com ©2002 Salton, Inc. All rights reserved.

P/N 61069 06/02

Made in China