

**OWNER'S MANUAL**  
**Model No. GRT06 Series**

**GEORGE FOREMAN®**

**LEAN  
MEAN  
FAT REDUCING  
GRILLING  
MACHINE**

*George Foreman*



**TOASTER OVEN**

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not immerse cord, plug, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Consumer Relations for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. To disconnect, turn the Temperature Control Dial to Min and the Timer to "0", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Oversize foods or metal utensils must not be inserted in a toaster-oven as they may create a fire or risk of electric shock.
15. A fire may occur if the toaster-oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
16. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock.
17. Extreme caution should be exercised when using containers constructed of other than metal or glass.
18. Do not store any materials, other than manufacturers recommended accessories, in this oven when not in use.
19. Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.

20. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
21. To turn off the Toaster Oven, turn the Temperature Control Dial to Min and the Timer Control Dial to the "0" position.
22. Use extreme caution when removing pans or disposing of hot grease.

## **SAVE THESE INSTRUCTIONS**

### **THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY**

## **ADDITIONAL IMPORTANT SAFEGUARDS**

***CAUTION HOT SURFACES: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires or other injury to persons or damage to property.***

1. A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. **Do not reach into the water!**
3. When using this appliance, provide adequate air space above and on all sides for air circulation. Do not operate this appliance while it is touching or near curtains, wall coverings, clothing, dishtowels or other flammable materials.
4. To reduce the risk of fire, do not leave this appliance unattended during use.
5. If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair a malfunctioning appliance!
6. The cord to this appliance should only be plugged into a 120V AC 60 Hz electrical wall outlet.
7. Do not use this appliance in an unstable position.

## Polarized Plug

This appliance has a **polarized plug** (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## Short Cord Instructions

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Do not use an extension cord with this product.

## Electric Power

Do not overload the electrical circuit with other appliances. Operate this appliance on a separate electrical circuit.


## Plasticizer Warning

**CAUTION:** To prevent Plasticizers from migrating from the finish of the countertop or tabletop or other furniture, place **NON-PLASTIC** coasters or placemats between the appliance and the finish of the countertop or tabletop.

**Failure to do so may cause the finish to darken, permanent blemishes may occur or stains can appear.**

# Getting To Know Your GRT06 Toaster Oven

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

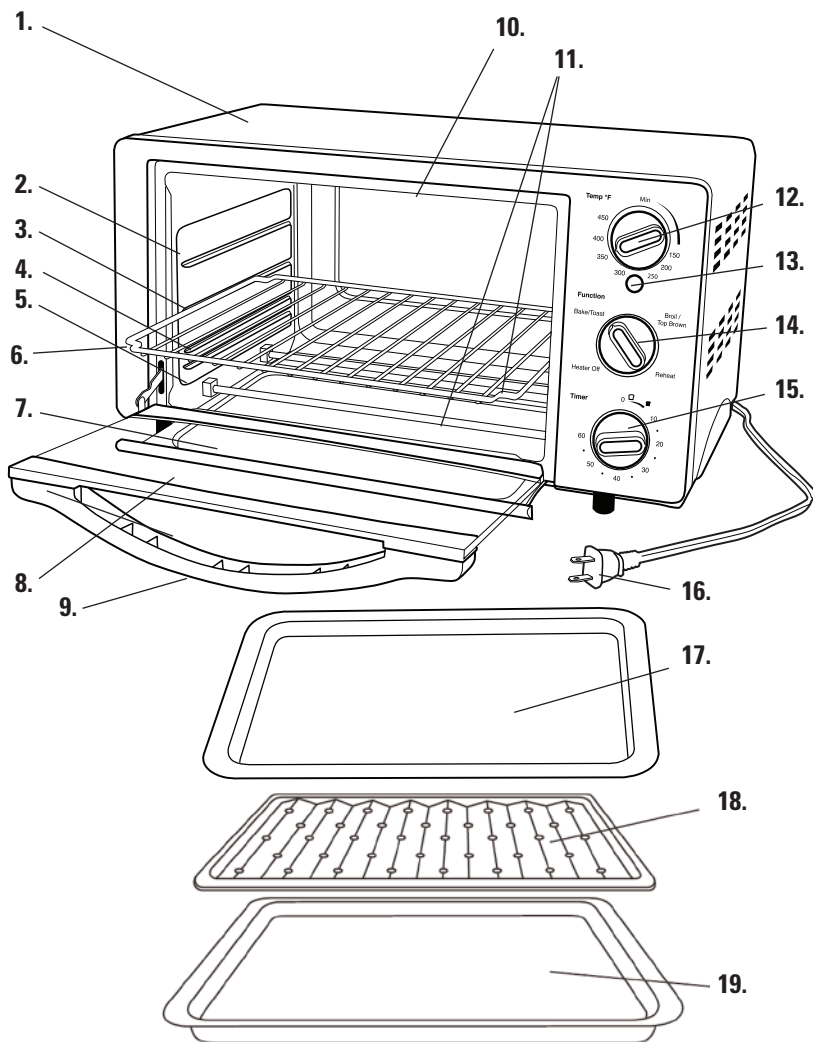

1. Exterior Casing
2. Shelf Position #1
3. Shelf Position #2
4. Shelf Position #3
5. Shelf Position #4
6. Wire Rack (P/N 22914)
7. Crumb Tray (P/N 22915)
8. Glass Door
9. Cool Touch Door Handle
10. Upper Heating Elements (not shown)

11. Lower Heating Elements
12. Temperature Control Dial
13. Power On Light
14. Function Selector Dial
15. Timer Control Dial
16. Power Cord
17. Bake Pan (P/N 22916)
18. Broil Insert (P/N 22368)
19. Broil Pan (P/N 22369)

## Temperature Control Dial:


Your oven has an adjustable temperature control dial with temperatures 150°–450° Fahrenheit. This allows you to prepare food according to package or recipe directions.

## Power On Light:

The Power On Light will remain ON anytime the Timer Control Dial is turned clockwise beyond the OFF ("0") position.

## Function Selector Dial:

The oven has four different settings: BAKE/TOAST, BROIL/TOP BROWN, REHEAT, and HEATER OFF. To select a setting, turn the Function Selector Dial to the setting desired. Although the Timer Control Dial (below) illuminates the Power On Light and serves as the ON and OFF Switch, the Toaster Oven will not heat up unless the BAKE/TOAST, BROIL/TOP BROWN or REHEAT Function is selected. The HEATER OFF setting will turn the Heating Elements OFF. Return the Function Selector Dial back to the desired setting to continue heating.

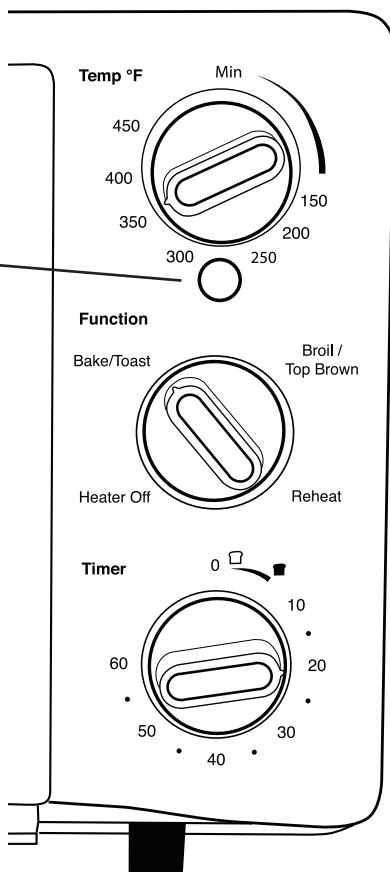

## Timer Control Dial:

The Timer Control Dial also acts as the Toaster Oven ON and OFF switch. Turn the Timer Control Dial clockwise to select appropriate cooking time. The Timer Control Dial is a 60-minute timer divided into 10-minute increments, as well as a toast setting.

If cooking less than 10 minutes, turn the Timer Control Dial past 10 minutes, then back to desired cooking time. When cooking time is complete, a signal will sound and the unit will turn off automatically.

# Operating Instructions

## Before First Use:

1. Read all instructions in this manual carefully.
2. Carefully unpack your Toaster Oven and remove all packaging materials.
3. Place your Oven on a level surface such as a countertop or table. Be sure the sides, back, and top of the Oven are at least four inches away from any walls, cabinets, or objects on the counter or table.
4. Remove all stickers from the Oven except the rating label located on the back.
5. Remove Wire Rack, Crumb Tray and the Bake Pan and wash in warm, soapy water. Rinse and dry thoroughly before placing in the Toaster Oven.
6. Remove any dust that may have accumulated during packaging, simply wipe the Toaster Oven exterior with a clean, damp cloth.
7. Do not use abrasive cleansers.
8. Do not put the Toaster Oven, cord or plug in water.
9. When you are ready to use the Oven, plug the cord into a 120V AC 60 Hz outlet.
10. To eliminate any protective substance or oil that may have been used for packing and shipping, set the unit to BAKE/TOAST, set the Temperature Control Dial to 350° and set the Timer Control Dial for about 15 minutes. A small amount of smoke and odor may be detected. This is normal.
11. To avoid scratching, marring, or discoloration, do not store anything on top of the Oven during operation.

**CAUTION: Appliance surfaces are hot during and after use.**

**CAUTION: Always wear protective, insulated oven mitts on hands when touching hot Oven or hot dishes and food or when inserting or removing Wire Rack, Bake Pan, baking dish and food.**

**CAUTION: As Soon as the Timer is engaged, the Toaster Oven will turn ON. The Heating Elements will turn ON.**

**CAUTION: As soon as the Timer is engaged, the Heating Elements will become hot immediately. Use care not to place anything on top of the Toaster Oven. Do not touch Toaster Oven or any part of the Oven without wearing oven mitts.**

## Operating Instructions (continued)

### Cooking Containers:

- The Bake Pan included with the Toaster Oven is suitable for items such as cookies, rolls, biscuits, nachos and pork chops.
- A variety of standard baking dishes, such as 8-9" round or square cake pan, a 6-cup muffin pan, 12" pizza pan, and 1 & 2 quart round, square, or rectangular casserole dishes may be used for other foods.
- Choose bakeware made of metal, or glass/ceramic without lids.
- Dark or dull pans absorb heat faster; foods will bake more rapidly and crust will brown more easily than in shiny bake pans.
- Check package directions and/or with the ovenware manufacturer to determine if the container is suitable for use in a Toaster Oven or Toaster Oven-Broiler.
- Do not use oven roasting bags in this Oven, as they may come in contact with the heating elements

**CAUTION: Allow at least 1" air space between the top of the container and the upper heating elements. Never use glass lids on glass or metal bakeware. If a lid is necessary, cover tightly with heavy-duty aluminum foil.**

## Instructions for Toasting

**Both the top and the bottom Heating Elements will be ON when this Oven Function is used.**

1. Make sure the Crumb Tray is in place in the bottom of the Toaster Oven.
2. Place Wire Rack into Shelf Position #2.
3. Plug into 120V AC 60 Hz outlet.
4. Open the Door and center food on the Wire Rack. Close the Door.
5. Turn the Function Selector Dial to BAKE/TOAST. Turn the Temperature Control Dial to 450°. To set the Timer for less than 10 minutes, turn past 10 and then back to the appropriate amount of time.
6. When the cooking time is complete, a signal will sound, the Timer will finish in the "0" position.



**NOTE:** Watch toast until desired color is achieved. Shut OFF Toaster Oven manually by turning the Timer to the “0” position. Open door to check food. Be careful when removing toast from the back of the wire rack. The inside of the Toaster Oven is very hot. **DO NOT LEAVE TOASTER OVEN UNATTENDED DURING USE.**

7. Wear protective oven mitts to remove food from Toaster Oven.
8. Turn the Temperature Control Dial to Min and the Timer to the “0” position. Unplug and allow to cool before cleaning.

## Hints for Toasting:

- Remove all protective wrappings from food before placing in Toaster Oven. Follow toaster food directions. Frozen and heavy bread require a longer time setting (e.g. bagels and English muffins.)

**NOTE:** Use extra caution when using this Toaster Oven for toasting pastry items with runny-type frosting or open fillings.

- When toasting more than one slice of bread, use slices of similar size, thickness and freshness.
- One slice requires a lighter setting than several slices.
- Stale bread, thin bread or sweet bread products, such as tea cakes and fruit loaf, brown much more quickly than ordinary bread, so they should be toasted for less time.
- Different breads require different toasting times. Turn Timer Control Dial to the “0” position and open the Oven Door to check toast color. Close Oven Door and reset Timer if more toasting time is needed.
- For best results, clean Crumb Tray frequently.

## Instructions for Baking

**Both the top and the bottom Heating Elements will be ON when this Oven Function is used.**

1. Make sure the Crumb Tray is in place in the bottom of the Toaster Oven.
2. Place Wire Rack or Bake Pan into Shelf Position #2 , #3 or #4.
3. Plug into 120V AC 60 Hz outlet.
4. To preheat the Toaster Oven, turn the Function Selector Dial to the BAKE/TOAST position. Turn the Temperature Control Dial to the desired position. Set the Timer Control Dial to 10 minutes. After 10

minutes, a signal will sound and the Toaster Oven will automatically shut off.

5. Remove all protective wrappings from food before placing in Toaster Oven.
6. Open the Oven Door and center food or appropriate baking dish on Wire Rack or Bake Pan. The Bake Pan may be used instead of the Wire Rack and baking dish. If you would like your food browned top and bottom, place food directly on Wire Rack and close Oven Door. Bake according to package or recipe time.
7. Turn Timer Control Dial to desired time.
8. When the cooking time is complete, a signal will sound, the Timer will finish in the "0" position.

**NOTE:** If cooking is completed BEFORE the Timer shuts the Toaster Oven OFF, you may shut the Toaster Oven OFF manually by turning the Timer to the "0" position. The inside of the Toaster Oven is very hot. **DO NOT LEAVE TOASTER OVEN UNATTENDED DURING USE.**

9. Wear protective oven mitts to remove food from Toaster Oven.
10. Turn the Temperature Control Dial to Min and the Timer to the "0" position. Unplug and allow to cool before cleaning.

**NOTE:** Do not use glass covers on baking pans. If using glass or glass-ceramic baking container, make sure it is at least 1-1/2 inches away from the top heating element.

## Hints for Baking:

- Heavy-duty aluminum foil may be used to cover top of baking container to reduce over browning. Tuck ends of foil closely against edge of pan.
- Place food toward the back of the Oven for better browning.
- Food may cook faster than recipe or package time. Check for doneness prior to end of cook time.
- Rotate and turn food over (if applicable) for more even browning halfway through the cooking process.
- Turn Function Control Dial to HEATER OFF position and open the Oven Door to check food. Close the Oven Door, and reset Function Control Dial to BAKE/TOAST if more baking is needed.
- To prevent heat loss, avoid opening door excessively.
- For best results, foods that contain a leavening agent should be baked on the Shelf Position #2 or #3.

## Instructions for Top Browning

Only the top Heating Element will heat when this Oven function is used.

1. Make sure the Crumb Tray is in place in the bottom of the Toaster Oven.
2. Place Wire Rack or Bake Pan into Shelf Position #1 or #2.
3. Plug into 120V AC 60 Hz outlet.
4. Place the food to be top browned on the Wire Rack or Bake Pan and close the Oven Door.
4. Turn the Function Selector Dial to BROIL/TOP BROWN. Turn the Temperature Control Dial to 450°. Turn the Timer Control Dial to the desired time. To set the Timer for less than 10 minutes, turn past 10 and then back to the appropriate amount of time.
6. When the cooking time is complete, a signal will sound, the Timer will finish in the "0" position.

**NOTE:** If cooking is completed BEFORE the Timer shuts the Toaster Oven OFF, you may shut the Toaster Oven OFF manually by turning the Timer to the "0" position. The inside of the Toaster Oven is very hot. **DO NOT LEAVE TOASTER OVEN UNATTENDED DURING USE.**

7. Wear protective oven mitts to remove food from Toaster Oven.
8. Turn the Temperature Control Dial to Min and the Timer to the "0" position. Unplug and allow to cool before cleaning.

### Hints for Top Browning:

- Watch food to avoid over-browning.
- Top Brown may be used to top brown bagels, English muffins or melt cheese on sandwiches or casseroles.

# Instructions for Broiling

Only the top Heating Element will heat when this Oven function is used.

1. Make sure the Crumb Tray is in place in the bottom of the Toaster Oven.
2. Place the Broil Insert in the Broil Pan. Always use the Broil Pan and Broil Insert when broiling. Place food on the Broil Insert. Juices and fat will drip into the Broil Pan and decrease splattering while broiling.
3. Plug into 120V AC 60 Hz electrical outlet.

**CAUTION: As soon as the Timer Control Dial is engaged, the Toaster Oven will turn ON. The top Heating Elements will cycle ON and OFF to maintain temperature for the entire cooking time.**

**CAUTION: As soon as the Timer Control Dial is engaged, Heating Elements will become hot immediately. Use care not to place anything on top of the Toaster Oven. Do not touch the Toaster Oven or any part of the Toaster Oven without wearing oven mitts.**

4. Place Broil Pan and Broil Insert on Wire Rack in Shelf Position #1 or #2, leaving approximately 2 in. between the food and the Upper Heating Elements. Close the Oven door.
5. Turn Temperature Control Dial to 450°. Set the Function Selector Dial to BROIL/TOP BROWN and the Timer Control Dial to the desired time.

**NOTE: To set the Timer Control Dial for less than 10 minutes, turn past 10 minutes and then turn back to the appropriate amount of time.**

6. Broil food until done, turning halfway through cooking time. Carefully remove the Broil Pan and Broil Insert from the Toaster Oven using oven mitts. Toaster Oven will shut off automatically once the Timer Control Dial reaches "0". The Power Light will go off.

**NOTE: If cooking is completed BEFORE the Timer shuts the Toaster Oven OFF, you may shut the Toaster Oven OFF manually by turning the Timer to the "0" position. The inside of the Toaster Oven is very hot.**

7. When finished, turn the Temperature Control Dial to Min and the make sure the Timer Control Dial is in the "0" position.
8. Unplug and allow to cool completely before cleaning.

**WARNING: DO NOT LEAVE TOASTER OVEN UNATTENDED DURING USE.**

# Instructions for Reheating

Only the bottom Heating Element will heat when this Oven function is used.

1. Make sure the Crumb Tray is in place in the bottom of the Toaster Oven.
2. Place Wire Rack or Bake Pan into Shelf Position #2, #3 or #4.
3. Plug into 120V AC 60 Hz outlet.
4. Open the Oven Door and center baking dish on Wire Rack or Bake Pan. The Bake Pan may be used instead of the Wire Rack and baking dish.
5. Turn the Function Selector Dial to REHEAT. Turn the Temperature Control Dial to desired temperature. Turn the Timer Control Dial to the desired time. To set the Timer for less than 10 minutes, turn past 10 and then back to the appropriate amount of time.
6. When the cooking time is complete, a signal will sound, the Timer will finish in the "0" position.

**NOTE:** If reheating is completed BEFORE the Timer shuts the Toaster Oven OFF, you may shut the Toaster Oven OFF manually by turning the Timer to the "0" position. The inside of the Toaster Oven is very hot. **DO NOT LEAVE TOASTER OVEN UNATTENDED DURING USE.**

7. Wear protective oven mitts to remove food from Toaster Oven.
8. Turn the Temperature Control Dial to Min and the Timer to the "0" position. Unplug and allow to cool before cleaning.

## Hints for Reheating:

- For best results, use Bake Pan to minimize clean-up due to spills.
- Use for short periods of time after food is cooked.

# User Maintenance Instructions

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing requiring disassembly must be performed by a qualified appliance repair technician.

## Care and Cleaning

1. Turn the Temperature Control Dial to Min and the Timer to the "0" position and unplug before cleaning.
2. Allow Toaster Oven and accessories to cool completely before cleaning.
3. Clean the outside of the Toaster Oven with a damp cloth and dry thoroughly. A non-abrasive liquid cleaner may be used for stubborn stains. Rinse and dry thoroughly. Do not use metal scouring pads or abrasive cleaners that will scratch the surface.
4. Remove Wire Rack and Bake Pan, wash in hot soapy water. Rinse and dry thoroughly.
5. Rinse and dry thoroughly before closing oven door.
6. Clean the Glass Oven Door with a cloth or sponge dampened with warm, sudsy water. Dry thoroughly.
7. Slide out the Crumb Tray from bottom of Toaster Oven. If crumbs and spills have accumulated on the Crumb Tray, wash in hot soapy water. Rinse and dry thoroughly. Reinsert Crumb Tray into bottom of Toaster Oven.
8. DO NOT use abrasive cleaners or metal scouring pads to clean Wire Rack, Bake Pan, or Crumb Tray. For stubborn stains, clean with a nylon or polyester mesh pad and a mild, non-abrasive cleaner. Rinse and dry thoroughly.

**CAUTION:** DO NOT use spray-on or other oven cleaners. Using these types of cleaners may cause electrical damage.

## **INTERIOR CLEANING**

Clean interior with a mild or non-abrasive cleaner and plastic scouring pad after each use to avoid buildup. Do not rub too hard as surface can be scratched.

## **TO STORE**

Unplug unit, allow to cool, and clean before storing. Store in its box in a clean, dry place. Never store it while it is hot or still plugged in. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

## LIMITED ONE-YEAR WARRANTY

**Warranty Coverage:** This product is warranted to be free from defects in materials or workmanship for a period of one (1) year from the original purchase date. This product warranty is extended only to the original consumer purchaser of the product and is not transferable. For a period of one (1) year from the date of original purchase of the product, our Repair Center will, at its option, either (1) repair the product or (2) replace the product with a reconditioned comparable model. These remedies are the purchaser's exclusive remedies under this warranty.

**Warranty Service:** To obtain warranty service, you must call our warranty service number at 1-800-233-9054 for return instructions on how to deliver the product, in either the original packaging or packaging affording an equal degree of protection to the Repair Center specified below. You must enclose a copy of your sales receipt or other proof of purchase to demonstrate eligibility for warranty coverage.

**To return** the appliance, ship to:

ATTN: Repair Center  
708 South Missouri Street  
Macon, MO 63552 USA

**To contact us,** please write to, call, or email:

Consumer Relations Department  
PO Box 7366  
Columbia MO 65205-7366 USA  
1-800-233-9054  
E-mail: [consumer\\_relations@toastmaster.com](mailto:consumer_relations@toastmaster.com)

**What Is Not Covered:** This warranty does not cover damage resulting from misuse, accident, commercial use, improper service or any other damage caused by anything other than defects in material or workmanship during ordinary consumer use. This warranty is invalid if the serial number has been altered or removed from the product. This warranty is valid only in the United States and Canada.

**LIMITATION ON DAMAGES:** THERE SHALL BE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT.

**DURATION OF IMPLIED WARRANTIES:** EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES AND CONDITIONS, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR USE ON THIS PRODUCT ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights under the laws of your jurisdiction.

For more information on our products, visit our website: [www.igrillwithgeorge.com](http://www.igrillwithgeorge.com)