


# READ AND SAVE THESE INSTRUCTIONS

**WARNING:** A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.

## AUTOMATIC MILL & BREW™ WITH THERMAL CARAFE

USE AND CARE GUIDE FOR  
MODEL MEMB10T

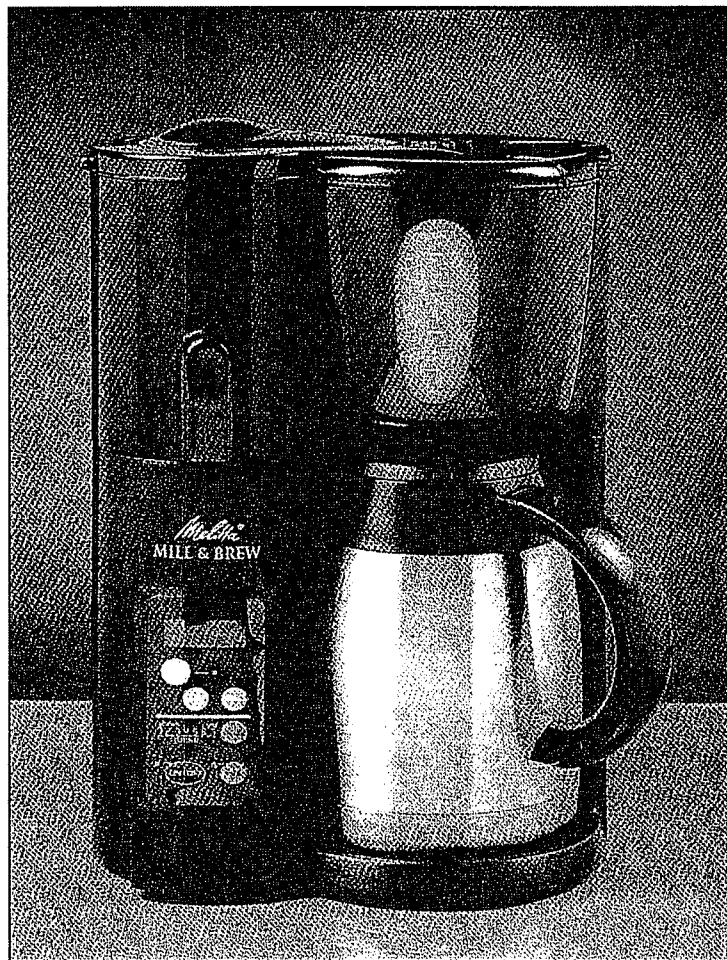

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and injury to persons, including the following:

- Read all instructions before using appliance.
- Do not touch hot surfaces. Use handle.
- To protect against electrical shock, do not immerse cord, plug or appliance in water or other liquid. See instructions for cleaning.
- This appliance is not for use by children.
- Close supervision is necessary when any appliance is used near children.
- Unplug from outlet when not in use. Unplug and allow to cool before attaching or removing parts and before cleaning the appliance.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Do not use appliance for other than intended use.
- Thermal Carafe must never be used on a range top. Use only the designated thermal carafe for your coffeemaker.
- Do not use a cracked thermal carafe or a thermal carafe having a loose or weakened handle.
- Do not clean thermal carafe with abrasive cleaners, steel wool pads or other abrasive material.
- Do not remove lid or covers during brewing cycle, scalding may occur.
- Allow mill/brew basket to cool before removing it from appliance.
- To disconnect, press the OFF button, then remove plug from wall outlet.
- Do not move entire unit when thermal carafe contains hot liquid.
- Do not operate any damaged appliance. Do not operate with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact Consumer Service for return authorization, examination, repair, electrical or mechanical adjustment.
- The use of accessory attachments not recommended by the manufacturer may cause fire, electrical shock or injury.
- Be certain lids and covers are securely in place before operating appliance.
- Do not pour liquid other than water and the cleaning solution specified in this manual into the water reservoir. See instructions for cleaning.

- Coffee Maker must be left to cool down for approximately 10 minutes before adding more water.
- Do not use outdoors or while standing in a damp area.
- **WARNING:** To reduce the risk of the fire or electric shock, do not remove bottom cover. No user serviceable parts inside. Repair must be done by authorized service personnel only.
- The mill is intended for processing small quantities of coffee beans only for immediate consumption. This appliance is not intended to prepare large quantities of ground coffee at one time.
- **WARNING:** To prevent injury from hot overflow, replace thermal carafe within 20 seconds, if removed during brewing. Pour slowly when full.
- Check mill/brew basket for presence of foreign objects before using.
- Blades are sharp. Handle carefully.
- Do not attempt to defeat the lid interlock mechanism.
- Avoid contacting moving parts.
- Do not open Mill/Brew assembly lid until blades stop and brewing is complete.


## **SAVE THESE INSTRUCTIONS**

### **THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY**


**CAUTION:** A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the cord must be: (1) marked with an electrical rating of 125 V, and at least 13 A, 1625 W, and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

**POLARIZED PLUG:** This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.


**ELECTRIC POWER:** If the electric circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electric circuit from other operating appliances.

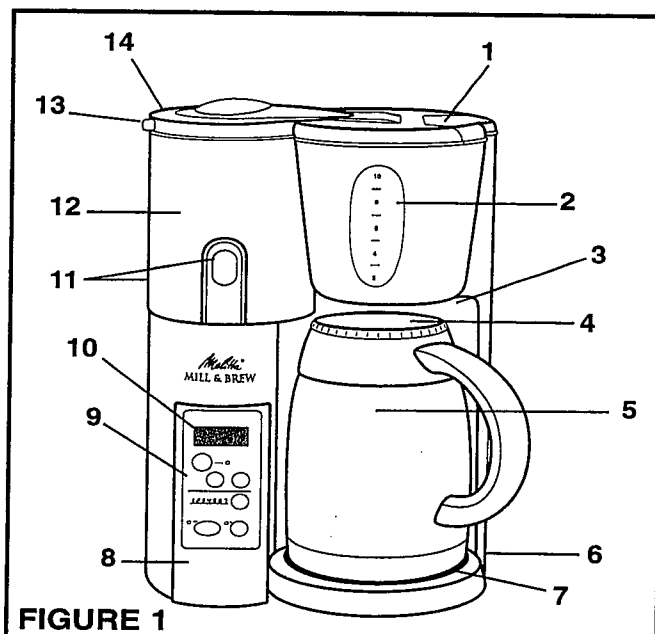


**FIGURE 1**

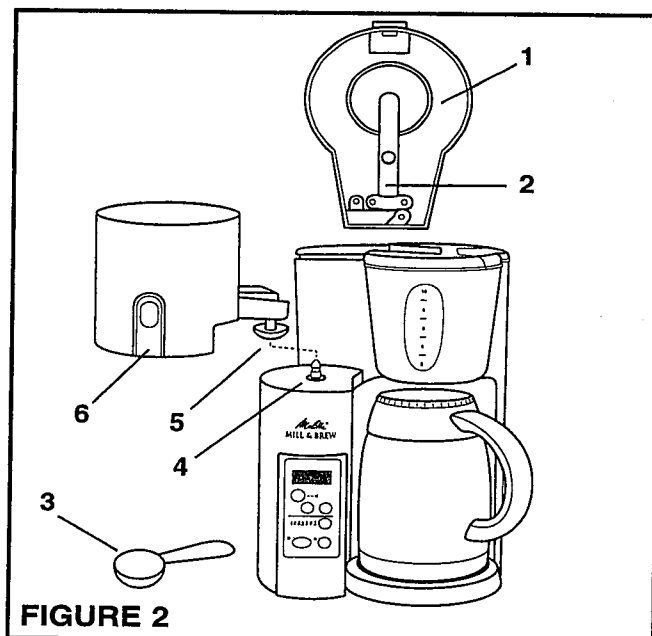

**FIGURE 2**

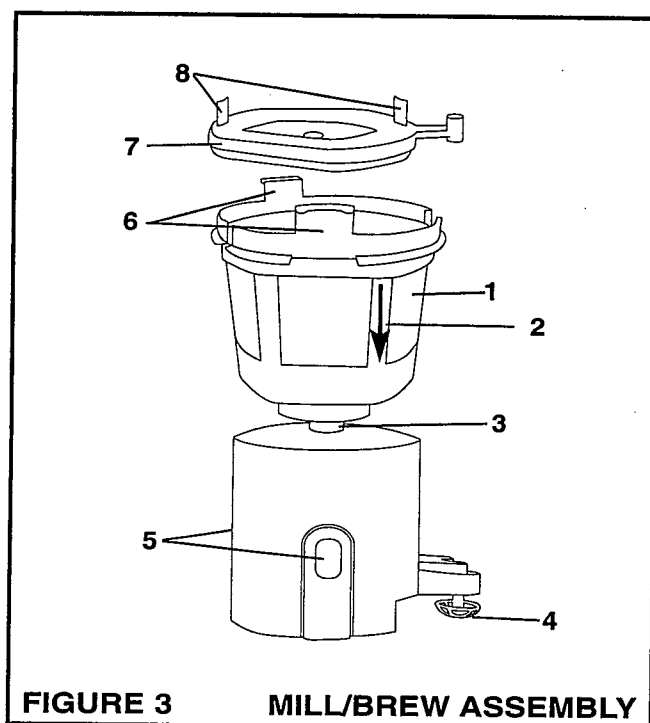

**FIGURE 3** **MILL/BREW ASSEMBLY**

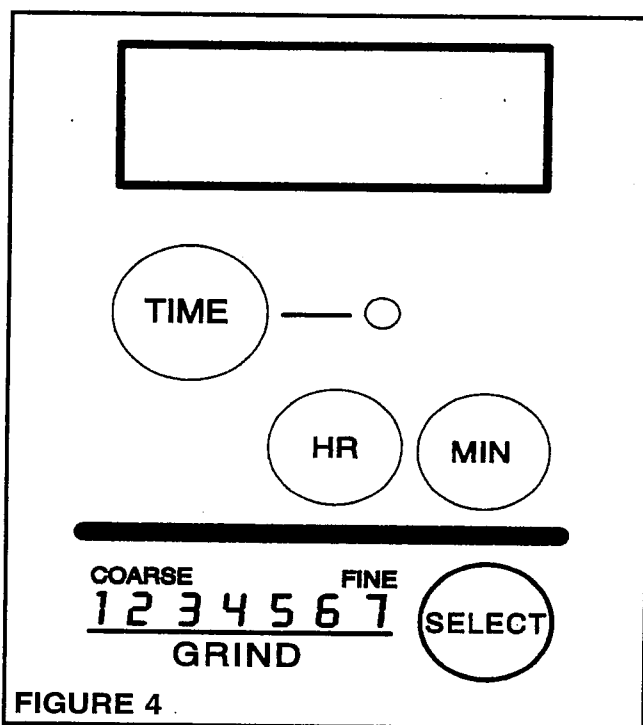

**FIGURE 4**

**FIGURE 1**

1. Reservoir Cover
2. Water Window
3. Pause and Pour
4. Carafe Lid (P/N 30840)
5. Thermal Carafe (P/N 30839)
6. Cord Storage
7. Base Plate
8. Coffeemaker Base
9. Control Panel
10. LED Display
11. Lock Buttons
12. Mill and Brew Assembly (P/N 30643B)
13. Mill/Brew Assembly Lock
14. Mill/Brew Assembly Lid

**FIGURE 2**

1. Mill/Brew Assembly Lid
2. Spreader Tube
3. Measuring Spoon (P/N 30661B)
4. Motor Grinder Pin
5. Pause and Pour
6. Locking Buttons

**FIGURE 3**

1. Mill/Brew Basket (P/N 30640)
2. Maximum Fill Level
3. Blades
4. Pause and Pour
5. Lock Buttons
6. Basket Tabs
7. Mill/Brew Basket Lid (P/N 30639)
8. Mill/Brew Basket Tabs

# Before Using Your Mill & Brew Coffeemaker

**CAUTION:** UNPLUG FROM OUTLET

**COFFEEMAKER:** Clean the thermal carafe and its lid, mill/brew basket and its lid, and mill/brew assembly. See Care and Cleaning. Fill the coffeemaker with the maximum amount of water and no coffee and turn the unit ON. See Brewing. Unplug coffeemaker and discard the water. Wait 10 minutes to allow heating elements to cool. Repeat this process two more times.

**CAUTION:** DO NOT IMMERSE CORD, PLUG OR COFFEEMAKER IN WATER OR OTHER LIQUID.

**CAUTION:** BLADES ARE SHARP. DO NOT ATTEMPT TO DISASSEMBLE MILL & BREW ASSEMBLY.

## Setting the Clock

1. Set the clock for actual time of day. Press and hold "HR" button for 2 seconds. The LED display will flash and unit will enter into the clock-setting mode. Press "HR" and "MIN" buttons to set correct time. Small dot in upper left corner of display signifies A.M. No dot indicates P.M. The clock display will flash 5 times, then stop. The time is now set.

## Brewing Instructions

**CAUTION:** DO NOT FILL MILL/BREW BASKET WITH MORE THAN 8 SPOONS OR 2½ OUNCES OF COFFEE BEANS. ARROW ON BASKET INDICATES MAXIMUM CAPACITY. **DO NOT FILL MILL/BREW BASKET WITH MORE THAN 8 SPOONS OR 2¾ OUNCES OF GROUND COFFEE.**

1. Plug into 120V-60 Hz outlet. You do not have to set clock or timer to brew.
2. Fill thermal carafe with cold water and pour desired number of cups into water reservoir. Use markings on water window to gauge level of water required to brew desired number of 5-ounce cups. The number 10 at the top indicates maximum 10-cup yield. Replace thermal carafe on base plate.
3. Open mill/brew assembly lid and grasp mill/brew basket tabs to remove basket lid. Place 1 measuring spoon roasted whole bean

coffee in mill/brew basket per every two cups of coffee desired. Replace lid. Make sure basket is firmly and completely seated in assembly, lid on basket is secured and lid to assembly is closed before attempting to operate unit. Amount of coffee beans may be adjusted for individual taste up to the maximum amount indicated.

**NOTE: Do not use too much force or pressure to close lid.**

4. For optimal holding temperature, rinse the inside of thermal carafe with warm water before brewing; empty and screw lid on tightly. Place carafe securely onto coffeemaker.

**NOTE: You may substitute ground coffee for coffee beans by turning off the mill. To do so, push the Mill button. The light will come on. Place ground coffee into mill/brew basket. Use approximately 1 tablespoon of grounds per cup of coffee.**

5. You are now ready to initiate the automatic mill and brew process. (If you wish to use the delay timer so you can program the coffeemaker to mill and brew later, please read section entitled "Programming The Timer To Make Coffee Later".

## Programming the Mill

**CAUTION: DO NOT OPEN UNTIL BLADES STOP AND BREWING IS COMPLETE. CLEAN AND DRY ALL PARTS AFTER EACH USE.**

If you desire a medium grind, your machine is automatically preset to "4" or medium grind; refer to step 2 below. If you wish to program a finer or coarser grind, start with step 1.

1. To set the mill to grind your beans to the desired level of coarseness, press SELECT button to select different coarseness levels, 1-7. Seven levels of coarseness are available. Coarseness is determined by length of time milled—the longer the time, the finer the grind. Setting 1 will mill the beans for 15 seconds. Setting 7 will mill the beans for 40 seconds. For medium grind, try setting 4. Make sure mill light is off.
2. Press ON button to initiate the mill/brew process; the red ON light will come on. Mill will start. After mill stops, unit will automatically switch to brewing operation. To interrupt milling or brewing, press OFF button. Red ON light will then turn off. Do not attempt to lift mill/brew lid until operation has come to a complete stop.

3. After brewing is complete, remove thermal carafe from base plate and serve. Coffeemaker will automatically shut off and the red ON light will turn off when the brewing is complete.
  4. To serve, carefully remove thermal carafe and loosen lid by turning it counter-clockwise. The indication dot should be in the front position to pour coffee. Tighten lid after serving.
  5. Unplug and allow unit to cool for 10 minutes between cycles. Allow to cool completely before attempting to clean.
- NOTE: After unit has been unplugged and then plugged in again for brewing, mill coarseness will default to setting 4.**

## **Programming the Timer to Make Coffee Later**

You can program the timer to automatically mill and brew coffee up to 24 hours in advance.

1. Press and hold the TIME button for 2 seconds. The green TIME light will come on and display will read 12:00. The unit is now in the timer programming mode.
2. Press "HR" and "MIN" buttons to program start time. The small dot in the upper left corner signifies clock is programmed for A.M. No dot in the upper left corner means clock is programmed for P.M.
3. The timer display and LED light will flash 5 times to indicate that the timer is now set. Press and release the TIME button. The green TIME light will come on.

**NOTE:** If unit is operated before programmed time, the timer will need to be reset. To do this, simply depress the TIME button. LED light will come on to indicate timer has been reset.

**IMPORTANT:** If programming timer to future start time, make sure water reservoir has been filled and mill/brew basket contains the correct amount of beans.

# User Maintenance Instructions

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Contact a qualified appliance repair technician if the product requires servicing.

## Care and Cleaning

1. Make sure coffeemaker is in the OFF position ; the red ON light will be off.
2. Unplug and allow to cool completely before cleaning.
3. After each use when unit has cooled, open Mill/Brew assembly lid and remove Mill/Brew basket and lid. Discard coffee grounds. Do not immerse thermal lid and carafe. Wash inside of thermal carafe with warm sudsy water, rinse and dry. Wash and dry remaining removable parts. Replace Mill and Brew assembly, Mill/Brew Basket, and Mill/Brew basket lid. Do not use cleaning agents or wire bottle brushes to clean the inside of the thermal carafe. Mineral deposits can be removed from the coffeemaker and the carafe by following the “Decalcification” instructions. No parts should be cleaned in a dishwasher.
4. Clean the outside of the coffeemaker with a damp cloth.  
**CAUTION:** DO NOT IMMERSE CORD, PLUG OR COFFEEMAKER UNIT OR THERMAL LID AND CARAFE IN WATER OR OTHER LIQUID.

## Decalcification of Your Mill & Brew Coffeemaker

For best tasting coffee, and to promote longer use of your Mill & Brew, follow the procedure for decalcification every month, or after 30 uses. If you have hard water, you may notice a slowing of the brewing process—an indication that you should decalcify more frequently.

1. Press OFF button.
2. Unplug and allow to cool completely before cleaning.



3. Wash and dry all removable parts.  
CAUTION: DO NOT IMMERSE CORD, PLUG OR COFFEEMAKER UNIT IN WATER OR OTHER LIQUID.  
CAUTION: BLADES ARE SHARP. HANDLE CAREFULLY.
4. Special cleaning of the coffeemaker is recommended at least once a month, depending on frequency of use and quality of water. Mineral deposits can form a coating in the coffeemaker. This may cause an off flavor in the water and may lengthen brewing time.
5. Fill the thermal carafe with 1 cup of vinegar and add 3 cups cold water. Pour into water reservoir.
6. Make sure mill/brew basket and assembly are securely in place and lid is closed.
7. Place thermal carafe on base plate.
8. Press ON button.
9. Halfway through brewing, press the OFF button. Carefully remove the thermal carafe and place on a heat resistant surface. Wait 15 minutes and pour solution back into water reservoir.
10. Press ON button. Allow all solution to empty into thermal carafe. After dripping stops, press OFF button and discard solution.
11. Allow coffeemaker to cool 10 minutes. Rinse it out by brewing a thermal carafe full of cold water. Discard water.
12. Wash, rinse and dry thermal carafe and lid.
13. You may also use a commercial cleaner made for automatic coffeemakers.
14. When coffeemaker has cooled, wipe exterior housing with a damp cloth.

### **Mill & Brew Assembly**

Never attempt to disassemble the grinder. If you wish to empty the mill/brew basket to refill with different beans, pour beans out, then fill with new beans.

## **Troubleshooting Guide**

- If mill/brew lid is opened during brewing cycle, ON/OFF LED will flash. To restart brewing process, reclose mill/brew lid.
- To position or remove the mill/brew assembly, press inward on the indentations on top of the lock buttons. Open mill/brew lid and lift up if removing, or place into position and then release lock buttons. If basket is properly seated and locked onto the base unit, the mill/brew and assembly will not move.

## IMPORTANT NOTICE

*If any parts are missing or defective,*

**DO NOT** *return this product.*

*Please call our Customer Service Department for assistance.*

**800-233-9054** *Monday - Friday 9:00 am - 5:00 pm CST*

*Thank You*

# LIMITED ONE YEAR WARRANTY

**Warranty:** This Melitta product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

**Warranty Coverage:** This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**Implied Warranties:** ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

**Warranty Performance:** During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

**Service and Repair:** Should the appliance malfunction, you should first call toll-free 1 (800) 233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number MEMB10T when you call.

**In-Warranty Service (USA):** For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization (1 800 233-9054).

**Out-of Warranty Service:** A flat rate charge by model is made for out-of-warranty service. Include \$ 8.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

**For Products Purchased in the USA, but Used in Canada:** You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

**Risk During Shipment:** We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

**To return the appliance, ship to:**

Attn: Repair Center  
Salton, Inc.  
708 South Missouri Street  
Macon, MO 63552  
Email: Salton@Saltonusa.com

**To contact us, please write to,  
call, or email:**

Salton, Inc.  
P.O. Box 6916  
Columbia, MO 65205-6916  
1(800) 233-9054

**Limitation of Remedies:** No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and **in no event shall Salton be liable for any incidental or consequential damages, losses or expenses.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

**Legal Rights:** This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For more information on Salton products:  
Visit our website: [www.salton-maxim.com](http://www.salton-maxim.com)