 


cook's essentials®

HIGH PERFORMANCE KITCHENWARE

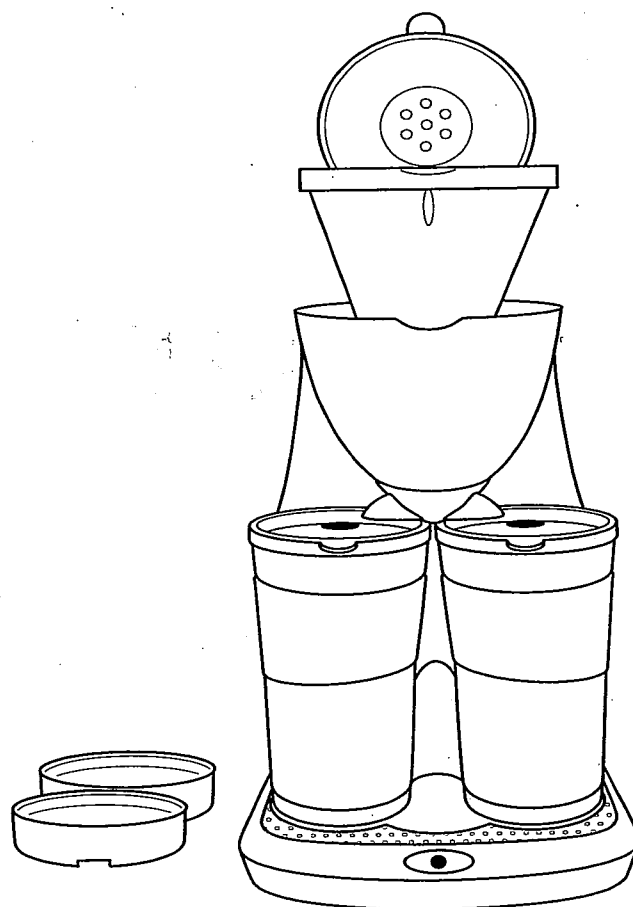

**TAKE 2™
COFFEE MAKER
WITH TWO 16OZ. THERMAL MUGS**

**MODEL CETCM2
OWNER'S MANUAL**

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock, and injury to persons, do not immerse cord, plug, or Coffee Maker in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Contact Consumer Service for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, press the ON/OFF switch OFF, then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Be certain lids are securely in place before operating appliance.
14. Scalding may occur if the lid is removed during the brewing cycles.
15. The thermal mugs are designed for use with this appliance. They must never be used on a range top.
16. Do not use a cracked thermal mug.
17. Do not clean thermal mugs with cleansers, steel wool pads, or other abrasive material.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

ADDITIONAL IMPORTANT SAFEGUARDS

WARNING: This appliance generates heat and escaping steam during use. Use proper precautions to prevent the risk of burns, fires, or other injury to persons or damage to property.

1. DO NOT pour liquid other than water and the cleaning solution specified in this manual into the water chamber.
2. Coffee Maker must be left to cool down for approximately 10 minutes before adding more water.
3. DO NOT attempt to move an appliance containing hot liquids. Allow appliance to cool completely before moving.
4. Always use fresh, cool water in your Coffee Maker. Warm water or other liquids, except as listed in cleaning section, may cause damage to the appliance.
5. DO NOT lift water chamber lid until brewing is complete and all parts have cooled.
6. DO NOT put thermal mugs into a microwave.

SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the cord must be: (1) marked with an electrical rating of 125 V and at least 10A., 1250 W., and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

POLARIZED PLUG

This appliance has a polarized plug, (one blade is wider than the other). As a safety feature, to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

BEFORE USING YOUR cook's essentials® CETCM2 TAKE 2™ COFFEE MAKER

CAUTION: Unplug from outlet. Press power switch OFF. The indicator light will be off.

IMPORTANT: Never place thermal mugs on a hot stove or in a microwave. Never let thermal mugs stand in water.

Before using your Take 2™ Coffee Maker for the first time, we suggest you become familiar with all of its parts. Read all instructions and cautions carefully.

Before brewing coffee, follow instructions for cleaning. See CARE AND CLEANING section in this manual.

CAUTION: Do not immerse cord, plug, or Coffee Maker unit in water or other liquids.

GETTING TO KNOW YOUR cook's essentials® CETCM2 TAKE 2™ COFFEE MAKER

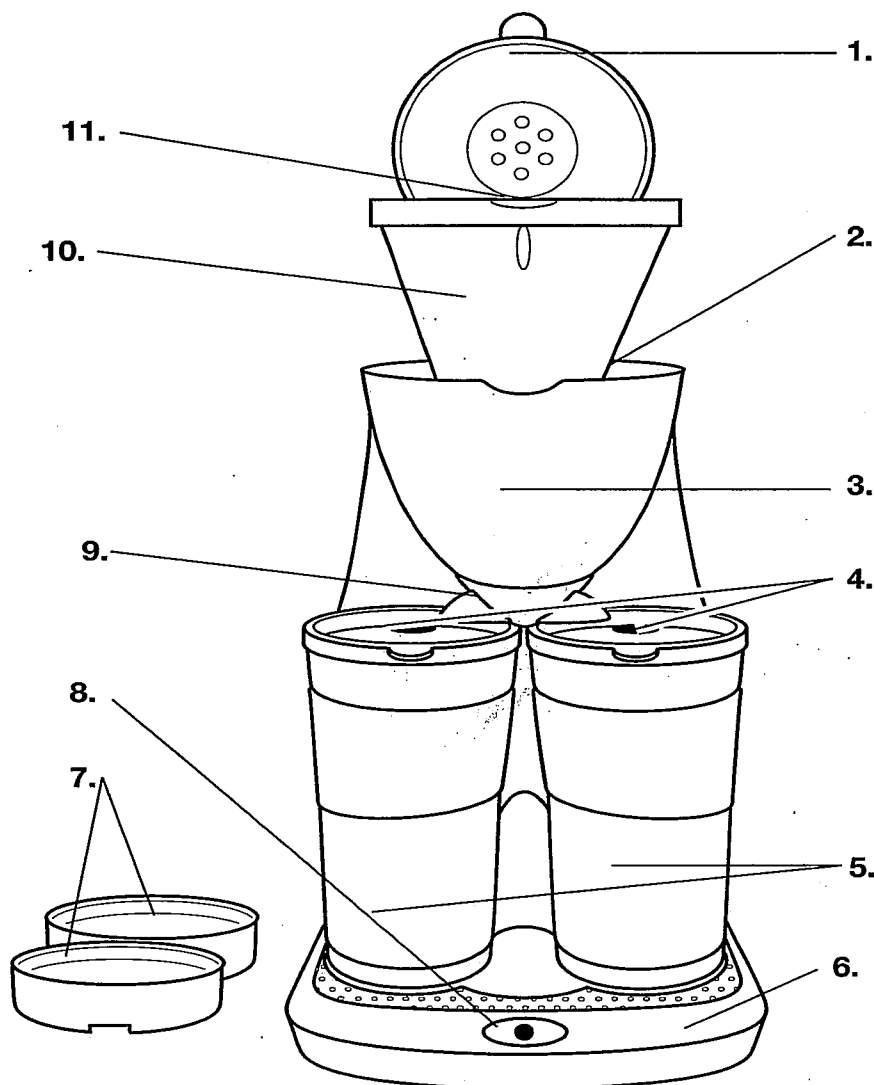 


FIGURE 1
Dual Mug Set Up

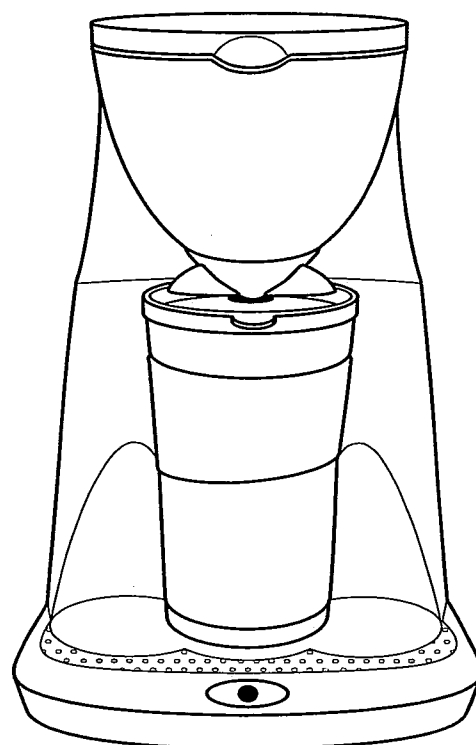 


FIGURE 2
Single Mug Set Up

1. Water Chamber Lid
2. Water Chamber with Water Level Indicator
3. Filter
4. Thermal Mug Lids (P/N 30909)
5. Thermal Mugs without Lids (P/N 30911)
6. Base

7. Thermal Mug Covers (P/N 30924)
8. Power Switch with Indicator Light
9. Flow Nozzle (P/N 30908)
10. Removable Filter Basket (P/N 30907)
11. Filter Basket Tab

BREWING

1. Plug into 120V ~ 60 Hz outlet.
2. Make sure unit is in the OFF position. The indicator light will be off.

IMPORTANT: Place Coffee Maker on a level surface.

3. Lift up the hinged water chamber lid and fill to desired level with cold, fresh water for the number of thermal mugs (one or two), using the water level indicator inside the water chamber.

WARNING: When making one thermal mug, do not fill above level 1.

IMPORTANT: If cream or milk will be added to thermal mugs, use less water for brewing.

4. For optimal holding temperature, rinse the inside of thermal mugs with warm water before brewing. Place lids securely on tops of thermal mugs. Press down on the lids to ensure proper fit.

NOTE: You can brew either one thermal mug or two thermal mugs at once. Place thermal mugs snugly on base of unit as shown in Figure 1 (for two thermal mugs) or Figure 2 (for one thermal mug). The contoured design on the base should be used as a guide for thermal mug alignment.

5. Insert a #2 paper cone filter into the removable filter basket and add coffee grounds. Use approximately 1-1/2 to 2 tablespoons for each thermal mug of coffee. Close water chamber lid.
6. Press power switch ON. The indicator light will illuminate.

CAUTION: Avoid contact with heated water.

IMPORTANT: Do not remove thermal mugs until the indicator light has turned OFF. The indicator light will turn OFF approximately two minutes after brewing is complete. This delay will allow the last drops of coffee to flow into the thermal mugs.

7. After indicator light turns off, thermal mugs may be safely removed.
8. If brewing more than one cycle, allow unit to cool for 10 minutes between cycles.

HELPFUL HINTS FOR BREWING

- Always use fresh, cold water for brewing. In areas with hard water or where water contains a high mineral content, use cold filtered water for optimal coffee taste.
- For best results, use #2 paper cone filters.

CARE AND CLEANING

1. Make sure power switch is in the OFF position. The indicator light will be off.
 2. Unplug and allow to cool completely before cleaning.
 3. Open water chamber lid and lift up on the tab of removable filter basket. Discard any paper filter and coffee grounds.
 4. Remove flow nozzle by turning counterclockwise a quarter turn and pulling down.
 5. Wash removable filter basket, flow nozzle, thermal mugs and thermal mug lids in warm, soapy water. Rinse and dry thoroughly. Or, you may wash the thermal mugs and lids in the top rack of a dishwasher.
 6. Clean the outside of the Coffee Maker with a damp cloth.
- CAUTION:** DO NOT IMMERSE CORD, PLUG OR COFFEE MAKER UNIT IN WATER OR OTHER LIQUID.
7. Replace removable filter basket and flow nozzle for next use.

DESCALING

We recommend that you descale your Coffee Maker once a month because mineral deposits can form a coating in the Coffee Maker, causing slower brewing time and possibly an off flavor in the coffee. Use a cleaner recommended for Coffee Makers. To descale your unit:

1. Pour two ounces of vinegar or coffee cleaner into the water chamber. Add cold water to the level 2 indicator.
2. Place both thermal mugs in proper position on base of unit.
3. See BREWING section in this manual. Follow brewing instructions **without coffee**.
4. When the indicator light turns off, wait 15 minutes and pour solution from thermal mugs back into Coffee Maker. Be sure that the removable filter basket is still in proper position.
5. Turn unit on again. Allow all solution to empty into thermal mugs. When indicator light turns off, discard solution.
6. Allow unit to cool 10 minutes. To rinse unit, fill chamber with fresh, cold water up to the level 2 indicator. Close water chamber lid. Press power switch ON. The indicator light will illuminate.
7. At end of cycle, allow the unit to cool. Discard water and paper filter. Wash and dry thermal mugs and other removable parts.
8. Unplug Coffee Maker from outlet. When Coffee Maker has cooled, wipe exterior with a damp cloth.

