

**cook's essentials®**

HIGH PERFORMANCE KITCHENWARE



## **4 SLICE TOASTER OVEN-BROILER**

**MODEL CETOV475RLB/RLP/RLW**

**OWNER'S MANUAL**

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Consumer Service for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. To disconnect turn both the Timer Control and Oven Control to the OFF position, then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Use extreme caution when removing tray or disposing of hot grease.
15. Oversize foods or metal utensils must not be inserted in a Toaster Oven as they may create a fire or risk of electric shock.
16. A fire may occur if the Toaster Oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
17. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
18. Extreme caution should be exercised when using containers constructed of other than metal or glass.

## **IMPORTANT SAFEGUARDS** *(Continued)*

19. Do not store any materials, other than manufacturers recommended accessories, in this Oven when not in use.
20. Do not place any of the following materials in the Oven: paper, cardboard, plastic, and the like.
21. Do not cover Crumb Tray or any part of the Oven with metal foil. This will cause overheating of the Oven.
22. To turn unit OFF, turn Timer Control to the OFF position.

## **SAVE THESE INSTRUCTIONS** **FOR HOUSEHOLD USE ONLY**

### **ADDITIONAL IMPORTANT SAFEGUARDS**

**CAUTION HOT SURFACES:** This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

1. A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. **Do not reach into the water!**
3. When using this appliance, provide adequate air space above and on all sides for air circulation. Do not operate this appliance while it is touching or near curtains, wall coverings, clothing, dishtowels or other flammable materials.
4. To reduce the risk of fire, do not leave this appliance unattended during use.
5. When using the BROIL/TOAST setting for toasting, do not operate more than 5 minutes.
6. If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair a malfunctioning appliance!
7. The cord to this appliance should only be plugged into a 120V AC electrical wall outlet.
8. Do not use this appliance in an unstable position.

## SHORT CORD INSTRUCTIONS

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Do not use an extension cord with this product.

## POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

Do not attempt to modify the plug in any way.

## ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

## PLASTICIZER WARNING

**CAUTION:** To prevent Plasticizers from migrating from the finish of the countertop or tabletop or other furniture, place **NON-PLASTIC** coasters or placemats between the appliance and the finish of the countertop or tabletop.

**Failure to do so may cause the finish to darken, permanent blemishes may occur or stains can appear.**

## INTRODUCTION

Congratulations on your purchase of the cook's essentials® 4 Slice Toaster Oven-Broiler. 6 cycles include: TOAST (up to 4 slices of bread), BAKE, BROIL, TOP BROWN, KEEP WARM or DEFROST from 200 to 500 degrees in this versatile Toaster Oven-Broiler. Use the 2 Hour (120 Minute) Timer Control or STAY ON feature to simplify meal-making. Grasp the handle to remove the Removable Stainless Steel Liner from the unit for effortless cleaning. Sleek design and stunning beauty of the Stainless Steel inners make this Toaster Oven-Broiler a beautiful addition to any kitchen. Accessories include Broil Insert, durable Enamel Bake/Broil Pan and Wire Rack.

# GETTING TO KNOW YOUR cook's essentials®

## 4 SLICE TOASTER OVEN-BROILER

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS.

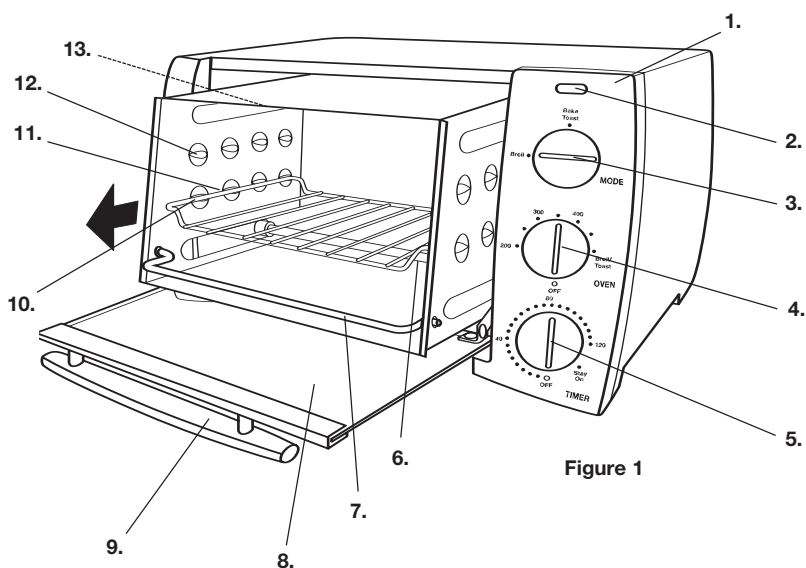 


Figure 1

- |   |   |
|---|---|
| 1. Control Panel  | 8. Glass Door                                   |
| 2. Power Light  | 9. Door Handle                                  |
| 3. Mode Control   | 10. Lower Shelf Rail:<br>Rack Positions 3 and 4 |
| 4. Oven Control   | 11. Wire Rack                                   |
| 5. Timer Control<br>with 120 minute (2 hour) Timer<br>and STAY ON feature | 12. Upper Shelf Rail:<br>Rack Positions 1 and 2 |
| 6. Lower Heating Elements   | 13. Upper Heating Elements                      |
| 7. Removable Stainless Steel<br>Liner with Handle (P/N 22564)             |   |

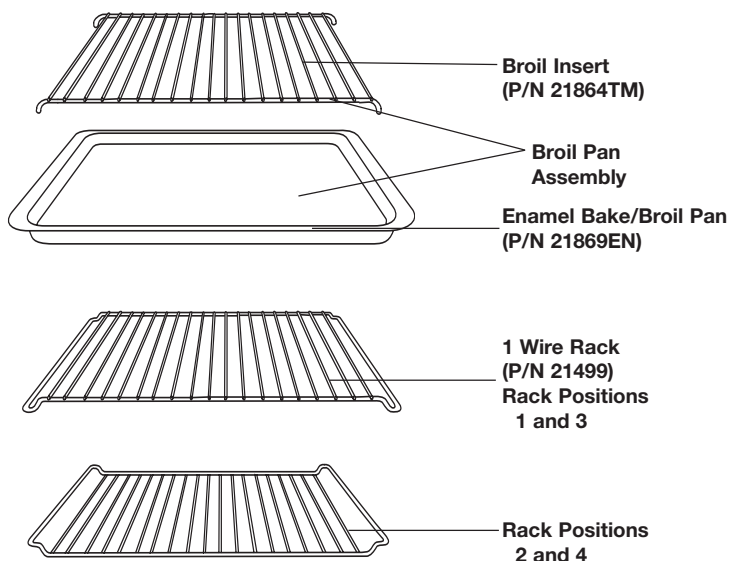 


Figure 2

## WIRE RACK POSITIONS

Place the Wire Rack on the Upper Shelf Rail so that it is inverted upwards, in Rack Position -- 1 the highest position, closest to the Upper Heating Elements. Rack Position 2 is achieved when the Wire Rack is placed on the Upper Shelf Rail and turned downwards. (See illustration above.) Place the Wire Rack on the Lower Shelf Rail so that it is inverted upwards for Rack Position 3; and when the Wire Rack is turned downwards on the Lower Shelf Rail, it is closest to the bottom of the Oven, in Position 4.

## CONTROL PANEL

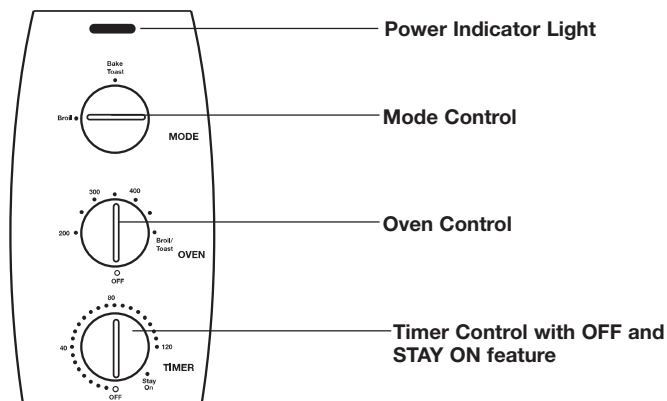 


Figure 3

# OPERATING INSTRUCTIONS

## BEFORE FIRST USE

1. Carefully unpack your Toaster Oven-Broiler and remove all packaging materials.
2. Place your Toaster Oven-Broiler on a level surface such as a countertop or tabletop. Be sure the sides, back, and top of the Toaster Oven-Broiler are at least 4 inches away from any walls, cabinets, or objects on the counter or table.
3. Remove all stickers from the Toaster Oven-Broiler except the rating label located on the back.
4. Using the Handle, remove Removable Stainless Steel Liner, Bake/Broil Pan, Broil Insert, and Wire Rack. Wash in warm, soapy water. Rinse and dry thoroughly before replacing in the Toaster Oven-Broiler.
5. Remove any dust that may have accumulated during packaging by simply wiping the Toaster Oven-Broiler exterior with a clean, damp cloth.
6. Do not use abrasive cleansers.
7. Do not immerse the Toaster Oven-Broiler, cord or plug in water.
8. When you are ready to use the Toaster Oven-Broiler, plug the cord into a 120V AC outlet.
9. To eliminate any protective substance or oil that may have been used for packing and shipping, turn the Mode Control to BAKE/TOAST and set the Timer Control for 15 minutes. A small amount of smoke and odor may be detected. This is normal.

**NOTE: To set the Timer Control for less than 40 minutes, turn to 40 and then turn back to the appropriate amount of time.**

10. To avoid scratching, marring, or discoloration, do not store anything on top of the Toaster Oven-Broiler during operation.

**CAUTION: Appliance surfaces are hot during and after use.**

**CAUTION: Always wear protective, insulated oven mitts on hands when touching hot Toaster Oven-Broiler or hot dishes and food or when inserting or removing Wire Racks, baking dish and food.**

## COOKING CONTAINERS

- The Enamel Bake/Broil Pan included with the Toaster Oven-Broiler is suitable for items such as cookies, rolls, biscuits, nachos and pork chops.
- A variety of standard baking dishes, such as an 8" round or square cake pan, or a 6-cup muffin pan, a 1 or 2 quart round, square, or a rectangular casserole dish may be used for other foods.
- Choose bakeware made of either metal or glass/ceramic without lids.
- Dark or dull pans absorb heat faster; foods will bake more rapidly and crust will brown more easily than in shiny bake pans.
- When using any Toaster Oven-Broiler functions including defrosting frozen foods and/or keeping foods warm, be sure to check package directions on the container or contact the ovenware manufacturer to determine the container's suitability for use in a Toaster Oven-Broiler.
- Do not use oven roasting bags in this Toaster Oven-Broiler, as they may come in contact with the Heating Elements.

**CAUTION: Allow at least 1" air space between the top of the container and the Upper Heating Elements. Never use glass lids on glass or metal bakeware. If a lid is necessary, cover tightly with heavy-duty aluminum foil.**

## INSTRUCTIONS FOR TOASTING

1. Make sure the Removable Stainless Steel Liner is in place in the Toaster Oven-Broiler.
2. Plug into 120V AC 60 Hz outlet.
3. Open the Glass Door and place the Wire Rack in Position 3. (See Figure 2.) Center bread on the Wire Rack. Close the Glass Door.
4. Turn the Mode Control to BAKE/TOAST.
5. Turn the Oven Control to BROIL/TOAST.

**NOTE: To set the Timer Control for less than 40 minutes, turn to 40 and then turn back to the appropriate amount of time.**

6. Turn the Timer Control back to 5 minutes (maximum). The Power Light will illuminate.

**IMPORTANT: Watch toast until desired color is achieved.**

Consecutive cycles will take less time. Adjust to your liking.

**CAUTION: Do not set the Timer Control to the STAY ON position when using the TOAST cycle.**

**CAUTION: As soon as the Timer Control is engaged, the Toaster Oven-Broiler will turn ON. Both the top and the bottom Heating Elements may cycle ON and OFF to maintain temperature for the entire cooking time.**

**CAUTION: As soon as the Timer Control is engaged both Heating Elements will become hot immediately. Use care not to place anything on top of the Toaster Oven-Broiler. Do not touch the Toaster Oven-Broiler or any part of the Toaster Oven-Broiler without wearing oven mitts.**

7. When the TOAST time is complete, a signal will sound and the Toaster Oven-Broiler will automatically shut OFF. The Power Light will go off.
8. If the TOAST cycle is completed before the Timer Control shuts the Toaster Oven-Broiler OFF, you may shut the Toaster Oven-Broiler OFF manually by turning the Timer Control to the OFF position. The Power Light will go off.
9. Open the Glass Door. Wear protective oven mitts to remove toast from Toaster Oven-Broiler. Be careful when removing toast from the back of the Wire Rack. The inside of the Toaster Oven-Broiler is very hot. Close Glass Door.
10. Unplug unit and allow to cool before cleaning.

**CAUTION: DO NOT LEAVE TOASTER OVEN-BROILER UNATTENDED DURING TOASTING.**

**When using the BROIL/TOAST setting for toasting, do not operate more than 5 minutes.**

**NOTE: Additional toast cycles may require less time since the oven cavity is already warm.**

See User Maintenance Instructions. Unplug when not in use.

## HINTS FOR TOASTING

- Remove all protective wrappings from food before placing in Toaster Oven-Broiler. Follow toaster food directions.
- Frozen and heavy bread require a longer time setting (e.g. bagels and English muffins).

**NOTE: Use extra caution when using this Toaster Oven-Broiler for toasting pastry items with runny-type frosting or open fillings.**

- When toasting more than one slice of bread, use slices of similar size, thickness and freshness.
- One slice of bread requires a lighter setting than several slices of bread.
- Stale bread, thin bread or sweet bread products, such as tea cakes and fruit loaf, brown much more quickly than ordinary bread, so they should be toasted for less time.
- Different breads require different toasting times. Turn Timer Control to the OFF position and open the Glass Door to check toast color. Close Glass Door and reset Timer Control if more toasting time is needed.
- For best results, clean Removable Stainless Steel Liner frequently.

## INSTRUCTIONS FOR BAKING

1. Make sure the Removable Stainless Steel Liner is in place in the Toaster Oven-Broiler.
2. Plug into 120V AC 60 Hz outlet.
3. To preheat the Toaster Oven-Broiler, turn the Mode Control to BAKE/TOAST. Set the Oven Control to the desired temperature, Turn the Timer Control to 10 minutes.

**NOTE: To set the Timer Control for less than 40 minutes, turn to 40 and then turn back to the appropriate amount of time.**

4. The Power Light will illuminate. After 10 minutes, a signal will sound and the Toaster Oven-Broiler will automatically shut OFF. The Power Light will go off. The oven is now preheated.
5. Remove all protective wrappings from food before placing in Toaster Oven-Broiler.
6. Open the Glass Door. Place the Wire Rack in upper Position 2, or Lower Rack Position 3 or 4 (See Figure 2) depending on the height of the pan and food or recipe directions. Use the Baking/Broil Pan or an appropriate baking container for the food, and place it on the Wire Rack. If you would like your food browned top and bottom, place food directly on Wire Rack and close Glass Door. Bake according to package or recipe time.

## **BAKING**     *(Continued)*

7. Turn the Timer Control to the desired time or to the STAY ON position. The Power Light will illuminate.

**NOTE:** To set the Timer Control for less than 40 minutes, turn to 40 and then turn back to the appropriate amount of time.

**CAUTION:** As soon as the Timer Control is engaged, the Toaster Oven-Broiler will turn ON. Both the top and the bottom Heating Elements will illuminate and then cycle off and on during cooking time to maintain proper temperature.

**CAUTION:** As soon as the Timer Control is engaged both Heating Elements will become hot immediately. Use care not to place anything on top of the Toaster Oven-Broiler. Do not touch the Toaster Oven-Broiler or any part of the Toaster Oven-Broiler without wearing oven mitts.

8. When the BAKE time is complete, a signal will sound and the Toaster Oven-Broiler will automatically shut OFF. The Power Light will go off.
9. If the cook cycle is completed before the Timer Control shuts the Toaster Oven-Broiler OFF, you may shut the Toaster Oven-Broiler OFF manually by turning the Timer Control to the OFF position. If the STAY ON position has been selected, the Toaster Oven-Broiler must be shut off manually by turning the Timer Control to the OFF position. The Power Light will go off.
10. Open the Glass Door. Wear protective oven mitts to remove food from Toaster Oven-Broiler. The inside of the Toaster Oven is very hot. Close the Glass Door.
11. Unplug the unit and allow to cool completely before cleaning.

**NOTE:** Do not use glass covers on baking pans. If using a glass or glass-ceramic baking container, make sure it is at least 1-1/2 inches away from the Top Heating Element.

**WARNING: DO NOT LEAVE TOASTER OVEN-BROILER UNATTENDED DURING BAKING.**

See User Maintenance Instructions. Unplug when not is use.

## HINTS FOR BAKING

- Heavy-duty aluminum foil may be used to cover top of baking container to reduce over browning. Tuck ends of foil closely against edge of pan.
- Place food toward the back of the Toaster Oven-Broiler for better browning.
- Food may cook faster than recipe or package time. Check for doneness prior to end of cook time.
- Rotate and turn food over for more even browning halfway through the cooking process.
- To prevent heat loss, avoid opening the Glass Door excessively.
- For best results, foods that contain a leavening agent should be baked on the lower Rack Positions 3 or 4 of the Toaster Oven-Broiler. (See Figure 2.)

## INSTRUCTIONS FOR BROILING

Only the Top Heating Element will heat when the Toaster Oven's BROIL cycle is used.

1. Make sure the Removable Stainless Steel Liner is in place in the Toaster Oven-Broiler.
2. Plug into 120V AC 60 Hz outlet.
3. Place food directly on the Broil Insert in the Bake/Broil Pan.
4. Open the Glass Door. Place the Wire Rack in Position 2 or 3, leaving approximately 2 to 3 inches between the food and the Upper Heating Elements. (See Figure 2.)
5. Brush food with sauces or oil as desired. Place the Bake/Broil Pan with the Broil Insert and food into the Toaster Oven Broiler and close the Glass Door. The Bake/Broil Pan will catch any juices during broiling.
6. Turn the Mode Control to BROIL.
7. Set the Oven Control to BROIL/TOAST.
8. Turn the Timer Control to the desired time. The Power Light will illuminate.

**CAUTION: Do not set the Timer Control to the STAY ON position when using the BROIL cycle.**

**NOTE: To set the Timer Control for less than 40 minutes, turn to 40 and then turn back to the appropriate amount of time.**

## **BROILING**     *(Continued)*

**CAUTION:** As soon as the Timer Control is engaged, the Toaster Oven-Broiler will turn ON. Only the top Heating Element will remain ON for the entire cooking time.

**CAUTION:** As soon as the Timer Control is engaged the Heating Element will become hot immediately. Use care not to place anything on top of the Toaster Oven-Broiler. Do not touch the Toaster Oven-Broiler or any part of the Toaster Oven-Broiler without wearing oven mitts.

9. BROIL according to package or recipe time. When broiling food that needs to be cooked on both sides, set the Timer Control for half the full cooking time, or the time necessary to broil one side.
10. When the first half of the BROIL time is complete, a signal will sound and the Toaster Oven-Broiler will automatically shut OFF. The Power Light will go off.
11. If the BROIL cycle is completed before the Timer Control shuts the Toaster Oven-Broiler OFF, you may shut the Toaster Oven-Broiler OFF manually by turning the Timer Control to the OFF position. The Power Light will go off.
12. Open the Glass Door. Wear protective oven mitts to carefully pull the Wire Rack and Bake/Broil Pan about halfway out of the Toaster Oven-Broiler. Turn the food over, slide the Wire Rack and Bake/Broil Pan into the Toaster Oven-Broiler and close the Toaster Oven-Broiler Glass Door. Turn the Timer Control to the desired final finishing time.
13. When the BROIL time is complete (both sides have been broiled), a signal will sound and the Toaster Oven-Broiler will automatically shut OFF. The Power Light will go off.
14. Open the Glass Door. Wear protective oven mitts to remove food from Toaster Oven-Broiler. Be careful when removing food. The inside of the Toaster Oven-Broiler is very hot. Close the Glass Door.
15. Unplug unit and allow to cool completely before cleaning.

**WARNING: DO NOT LEAVE TOASTER OVEN-BROILER UNATTENDED DURING BROILING.**

See User Maintenance Instructions. Unplug when not in use.

## INSTRUCTIONS FOR TOP BROWNING

To Top Brown foods, follow the BROIL instructions but place the food on the Enamel Bake/Broil Pan on the Wire Rack.

## HINTS FOR TOP BROWNING

- Watch food to avoid over-browning.
- Top Brown may be used to top brown bagels (cut side up), English muffins or melt cheese on sandwiches or casseroles.

**CAUTION: Do not set the Timer Control to the STAY ON position when using the TOP BROWN/BROIL cycle.**

**WARNING: DO NOT LEAVE TOASTER OVEN-BROILER UNATTENDED DURING TOP BROWNING.**

See User Maintenance Instructions. Unplug when not in use.

## INSTRUCTIONS FOR KEEP WARM

1. Make sure the Removable Stainless Steel Liner is in place in the Toaster Oven-Broiler.
2. Plug into 120V AC 60 Hz outlet.
3. Open the Glass Door. Place Wire Rack in Position 3 or 4 of Toaster Oven Broiler. (See Figure 2.) Center a baking container or food on the Wire Rack or use Bake/Broil Pan and close the Glass Door.
4. Turn the Mode Control to BAKE/TOAST.
5. Set the Oven Control to 200°F.
6. Turn the Timer Control to the desired time or to the STAY ON position. The Power Light will illuminate.

**NOTE: To set the Timer Control for less than 40 minutes, turn to 10 and then turn back to the appropriate amount of time.**

**CAUTION: As soon as the Timer Control is engaged, the Toaster Oven-Broiler will turn ON. Both the top and the bottom Heating Elements will remain ON for the entire cooking time.**

**CAUTION: As soon as the Timer Control is engaged both Heating Elements will become hot immediately. Use care not to place anything on top of the Toaster Oven-Broiler.**

**Do not touch the Toaster Oven-Broiler or any part of the Toaster Oven-Broiler without wearing oven mitts.**

7. When the KEEP WARM time is complete, a signal will sound and the Toaster Oven-Broiler will automatically shut OFF. The Power Light will go off.

## **KEEP WARM** (Continued)

8. If the KEEP WARM cycle is completed before the Timer Control shuts the Toaster Oven-Broiler OFF, you may shut the Toaster Oven-Broiler OFF manually by turning the Timer Control to the OFF position. If the STAY ON position has been selected, the Toaster Oven-Broiler must be shut off manually by turning the Timer Control to the OFF position. The Power Light will go off.
9. Open the Glass Door. Wear protective oven mitts to remove food from Toaster Oven-Broiler. Be careful when removing food. The inside of the Toaster Oven-Broiler is very hot. Close the Glass Door.
10. Unplug unit and allow to cool completely before cleaning.

**WARNING: DO NOT LEAVE TOASTER OVEN-BROILER UNATTENDED DURING KEEP WARM.**

See User Maintenance Instructions. Unplug when not in use.

## **HINTS FOR KEEP WARM**

- Use for short periods of time after food is cooked.
- To heat frozen or cold foods, see Instructions For Defrosting.

## **INSTRUCTIONS FOR DEFROSTING**

1. Make sure the Removable Stainless Steel Liner is in place in the Toaster Oven-Broiler.
2. Plug into 120V AC 60 Hz outlet.
3. Open the Glass Door. Place Wire Rack in Position 3 or 4 of Toaster Oven-Broiler. (See Figure 2.) Center a baking container or food on Wire Rack or use Bake/Broil Pan and close the Glass Door.
4. Turn the Mode Control to BAKE/TOAST.
5. Set the Oven Control to 200°F.
6. Turn the Timer Control to the desired time or to the STAY ON position. The Power Light will illuminate.

**NOTE: To set the Timer Control for less than 40 minutes, turn to 40 and then turn back to the appropriate amount of time.**

**CAUTION: As soon as the Timer Control is engaged, the Toaster Oven-Broiler will turn ON. Both the top and the bottom Heating Elements will remain ON for the entire cooking time.**

## DEFROST *(Continued)*

**CAUTION:** As soon as the Timer Control is engaged both Heating Elements will become hot immediately. Use care not to place anything on top of the Toaster Oven-Broiler. Do not touch the Toaster Oven-Broiler or any part of the Toaster Oven-Broiler without wearing oven mitts.

7. When the DEFROST time is complete, a signal will sound and the Toaster Oven-Broiler will automatically shut OFF. The Power Light will go off.
8. If the Timer Control has been set, the Toaster Oven-Broiler will shut off automatically when the DEFROST cycle is complete. If the DEFROST cycle is completed before the Timer Control shuts the Toaster Oven Broiler OFF, you may shut the Toaster Oven Broiler OFF manually by turning the Timer Control to the OFF position. If the STAY ON position has been selected, the Toaster Oven-Broiler must be shut off manually by turning the Timer Control to the OFF position. The Power Light will go off.
9. Open the Glass Door. Wear protective oven mitts to remove food from Toaster Oven-Broiler. Be careful when removing food. The inside of the Toaster Oven-Broiler is very hot. Close the Glass Door.
10. Unplug unit and allow to cool completely before cleaning.

**WARNING: DO NOT LEAVE TOASTER OVEN-BROILER UNATTENDED WHILE DEFROSTING FOOD.**

See User Maintenance Instructions. Unplug when not in use.

## HINTS FOR DEFROST

- Do not use this method for meat, poultry or fish.
- Do not cover food.
- Brush frozen dough with vegetable oil to prevent drying out while defrosting. After defrosting is complete, remove thawed dough from Toaster Oven-Broiler while Toaster Oven-Broiler preheats for BAKE cycle.

## SPECIAL FEATURES

### 120-Minute Timer Control or STAY ON Feature

- The Timer Control also acts as the Toaster Oven-Broiler's ON/OFF switch. Turn the Timer Control clockwise to select the appropriate cooking time.

**NOTE: To set the Timer Control for less than 40 minutes, turn to 40 and then turn back to the appropriate amount of time.**

- If the Timer Control has been set, when the cook time is complete, a signal will sound, the Timer Control will finish in the OFF position, the Toaster Oven-Broiler will automatically shut OFF. The Power Light will go off.

**NOTE: If you are ready to remove the food from the Toaster Oven-Broiler before the Timer Control shuts the Toaster Oven-Broiler OFF, you may shut the Toaster Oven-Broiler OFF manually by turning the Timer Control to the OFF position. The Power Light will go off. If the STAY ON position has been selected, the Toaster Oven-Broiler must be shut off manually by turning the Timer Control to the OFF position. The Power Light will go off.**

- Unplug Toaster Oven-Broiler when not in use.
- If you do not wish to use the Timer, simply turn the Timer Control counter clockwise to the STAY ON position and the Toaster Oven-Broiler will turn ON.

**CAUTION: Do not use STAY ON feature for toasting or broiling.**

Turn the Timer Control to the OFF position when cooking is complete.

**WARNING: DO NOT LEAVE TOASTER OVEN-BROILER UNATTENDED DURING USE.**

### Removable Wire Rack

The Wire Rack must be used for all cooking cycles. The Wire Rack is removable for easy cleaning and must be properly re-inserted before use.

### Bake/Broil Pan, Broil Insert

For best results use the Enamel Bake/Broil Pan to BAKE, DEFROST, TOP BROWN, KEEP WARM and to minimize clean-up due to spills. When using the BROIL cycle, both the Bake Pan and the Broil Insert MUST be used.

## Power Indicator Light

When you turn the Timer Control to the desired time, the Power Indicator Light will illuminate.

The unit will shut OFF automatically when using the 120-Minute Timer. When the cook time is complete, a signal will sound and the Toaster Oven-Broiler will automatically shut OFF. The Power Light will go off.

## Removable Stainless Steel Liner

Cleaning is a snap with the Removable Liner — the Liner slides out easily and is dishwasher safe. (See “Cleaning the Removable Stainless Steel Liner” section in this Owner’s Manual.)

## USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

### Care and Cleaning

1. Make sure the Oven Control and Timer Control are in the OFF position and unplug the Toaster Oven-Broiler before cleaning.
2. Allow Toaster Oven-Broiler and accessories to cool completely before cleaning.
3. Clean the Glass Door with a cloth or sponge dampened with warm, sudsy water. Dry thoroughly.

**CAUTION: DO NOT use spray-on or other oven cleaners. Using these types of cleaners may cause electrical damage.**

## Cleaning the Removable Stainless Steel Liner

1. Always unplug Oven and allow to cool completely before cleaning or moving.
2. Carefully remove the Removable Liner by grasping the Handle and by pulling straight out. (See Figure 1.)
3. Remove Bake/Broil Pan, Broil Insert and Wire Racks. Wash in soapy water and dry thoroughly.
4. DO NOT use abrasive cleaners or metal scouring pads to clean Bake/Broil Pan, Broil Insert or Wire Rack. For stubborn stains, clean with a nylon or polyester mesh pad and a mild, non-abrasive cleaner. Rinse and dry thoroughly.
5. The Removable Liner, Wire Rack, and Broil Pan Assembly may also be placed in the dishwasher for cleaning.
6. Slide cleaned Removable Liner back into the Toaster Oven-Broiler and close the Glass Door.

**CAUTION: ALWAYS MAKE SURE THE STAINLESS STEEL REMOVABLE LINER IS IN PROPER POSITION BEFORE OPERATING TOASTER OVEN-BROILER.**

## Exterior Cleaning

Clean the outside of the Toaster Oven-Broiler with a damp cloth and dry thoroughly. A non-abrasive liquid cleaner may be used for stubborn stains. Rinse and dry thoroughly. Do not use metal scouring pads or abrasive cleaners that will scratch the surface.

## To Store

Unplug unit, allow to cool, and clean before storing. Store in its box in a clean, dry place. Never store it while it is hot or still plugged in. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

