


Model No. MMTM1S

Spa Therapy™

TAPPING MASSAGER

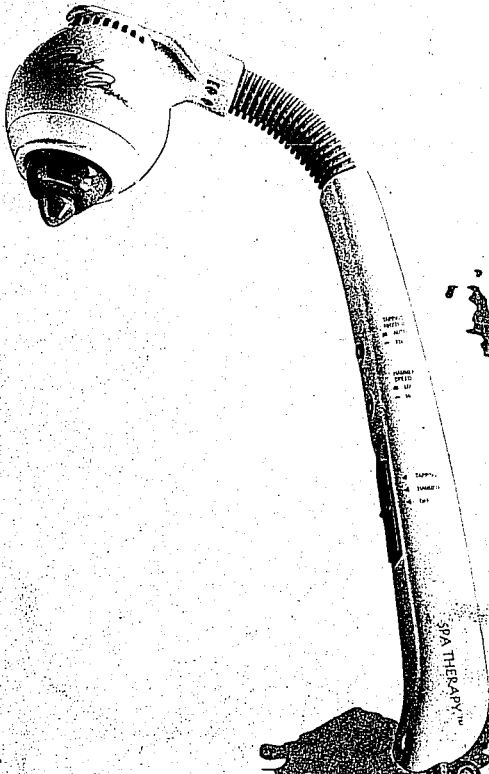


salton®

The Archives of
Milton H. Greene, L.L.C.

Burlington House™





Marilyn Monroe stands as one of the 20th century's most enduring images, an icon reborn, it seems, with each new generation. The man who best understood and captured - some say invented - this phenomenon was her friend and partner, the late Milton H. Greene.

It was Greene's unique personal friendship and business relationship with Marilyn Monroe that allowed the extraordinary photographs, recording her moods, beauty, talent and spirit, for which he is most widely remembered. The Monroe collection contains more than 2,000 never before seen photographs of the screen legend.

Greene's remarkable portraits of our most beloved artists, musicians, and personalities are legendary. Some of his subjects are Marlene Dietrich, Frank Sinatra, Judy Garland, Sammy Davis Jr., Ava Gardner, Cary Grant, Bette Davis, Tony Curtis, Paul Newman, Steve McQueen, Audrey Hepburn, Gene Kelly and Sophia Loren.

In a return to an era of lost elegance, The Archives, headed by Milton's eldest son Joshua, is preserving the vision and timeless works of the celebrated photographer. The Archives is dedicated to the restoration, license and sale of an unprecedented wealth of fine photography for use in traditional and interactive marketing, mass media, merchandising, exhibition and private collections.

The Archives, working in conjunction with Salton®, specifically restored and made available the Monroe images used in the packaging of these products.

We invite you to visit our website at www.archivesmhg.com or feel free to contact us.

The Archives of
Milton H. Greene, LLC
278 Maple Street Suite E
Florence, OR 97439
541-997-4970 fax: 541-997-5795

IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER.

DANGER: *As with most electrical appliances, electrical parts are electrically live even when the switch is off.*

To reduce the risk of death by electric shock:

1. Always unplug appliance immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into tub or sink.
4. Do not place in or drop into water or any other liquid.
5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING: *To reduce the risk of burns, electrocution, fire or injury to persons:*

1. Do not leave appliance unattended while it is operating or is plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
2. Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
3. Close supervision is necessary when this appliance is used by or near children or invalids.
4. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged in any manner or dropped in water. Take appliance to nearest service facility for examination and repair.
6. Do not carry this appliance by supply cord or use cord as a handle.
7. Keep the cord away from hot or heated surfaces. Do not wrap the cord around the appliance.
8. Never block the air openings of the appliance or place it on a soft surface such as a bed, pillow or couch, where the air openings may be blocked.
9. Never drop or insert anything into any openings.
10. Do not use outdoors.
11. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
12. To disconnect, turn all controls to the off position, then remove plug from outlet.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**


POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug fits into a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

GETTING TO KNOW YOUR Salton *Tapping Massager*

Before attempting to use your Salton Tapping Massager, you should become familiar with all of the parts. Read all of the instructions and safeguards carefully.

Identify all parts of your Salton Tapping Massager according to the drawing below so that you have no doubts when reading the instructions that follow.

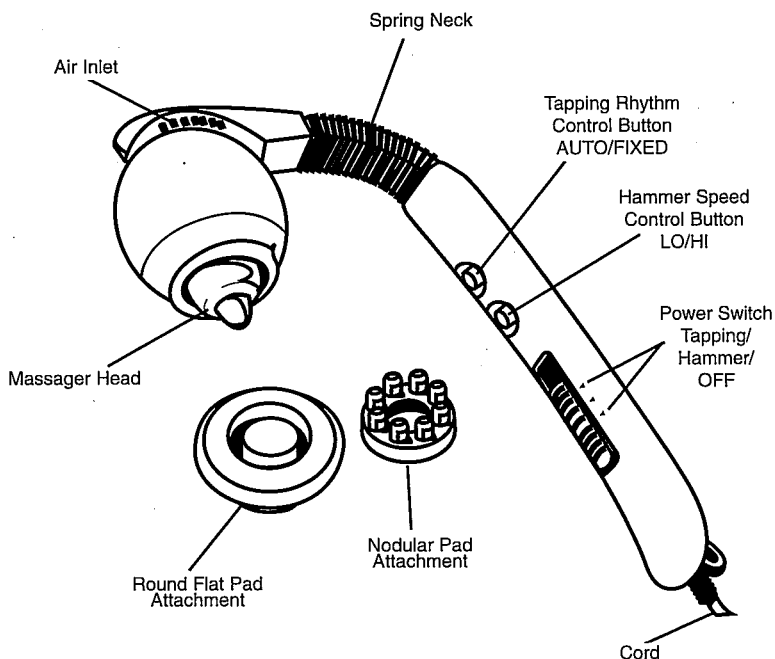

INSTRUCTIONS FOR USE

1. Plug your Tapping Massager into a 120V AC wall outlet.
2. Select your desired Massaging Pad. There are two (2) from which to choose:

Nodular Pad: This Pad is specifically designed for concentrated stimulation of a specific area of the body.

Round Flat Pad: This is designed for more gentle massage of a wider affected area of the body.

These Pads simply snap on and off of the rubber Massage Head.

3. Move the Power Switch to desired setting. There are two (2) settings from which to choose: **Hammer** or **Tapping**.

Hammer: This selection has a fast, vibrating action. You may select from two speeds by pressing the Hammer Speed Control Button located just above the Power Switch. When the Button is pressed "in", the speed will be fast/HI. When the Button is popped "out", the speed will be slow/LO. The Tapping Rhythm Control Button cannot be used with the Hammer Speed Control Button.

Tapping: This selection moves in a tapping-type action. To vary the tapping, simply press the Tapping Rhythm Control Button (located above the Hammer Speed Control Button) and the tapping pattern will change. When the Button is pressed "in", the tapping pattern will be FIXED and constant. When the Button is popped "out", the pattern will be on AUTO and will randomly change. In the AUTO mode, there are six (6) different patterns that occur in 10-12 second intervals. The Hammer Speed Control Button cannot be used with the Tapping Rhythm Control Button.

4. When you have finished your massage, turn the Power Switch to OFF and unplug the Massager.

FOR BEST RESULTS

- Do not apply the Massager Head onto one particular body part for more than 3 minutes at one time. This may have a negative effect.
 - If you feel that your Massager gives you too much stimulation, try placing a cloth or towel between you and the Massager. This may act as a buffer to the massaging action.
-
- Do not apply extra force to the Neck of the Massager. This may cause the unit to malfunction.
 - Your Massager has an overheat protection function. In case the Massager does not operate when the Power Switch is turned on, turn the appliance off, unplug it and allow it to cool for 30 minutes. If the Massager still does not operate after 30 minutes, take the unit to an authorized service facility for examination, adjustment or repair.

USER MAINTENANCE INSTRUCTIONS

This appliance contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified service personnel if servicing is needed.

To Clean: Wipe the exterior of the Massager with a damp cloth or sponge. Do not immerse in water or any other liquid. Do not use harsh, abrasive cleaners or utensils, as they may scratch the surface. Clean attachments in warm, soapy water and dry thoroughly.

To Store: Store your Massager in its original box or in a clean, dry place. Make sure it is unplugged after each use and before storing.

ONE YEAR LIMITED WARRANTY

This Salton Product warranty extends to the original consumer of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violations of written instructions furnished by Salton, Inc., or to units that have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract, or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one-year limited warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at Salton, Inc.'s option), when the product is returned to the Salton, Inc. facility. The repaired or replacement product will be in warranty for the balance of the one year warranty period and an additional one month period. No charge will be made for such repair or replacement.

Service and Repair

Should the appliance malfunction, you should first call toll-free 1-800-233-9054 between the hours of 9:00am and 5:00pm Central Standard Time and ask for Customer Service stating that you are a consumer with a problem.

In-Warranty Service: For an appliance covered under the warranty period, no charge is made for service or postage. Call for a pre-paid return mailing label (U.S. customers only).

Out-of-Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$8.00 for return shipping and handling. Salton, Inc. cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem; your full return address and day-time phone number; a note describing the problem you experienced; a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

ATTN: Repair Department, Salton, Inc.
550 Business Center Dr.
Mt. Prospect, IL 60056



For more information on Salton/Maxim products:
visit our website: <http://www.salton-maxim.com>
or email us at: salton@saltonusa.com