 


OWNER'S MANUAL

MODEL No. SR210A

salton<sup>TM</sup>  
**PRO STEAM**

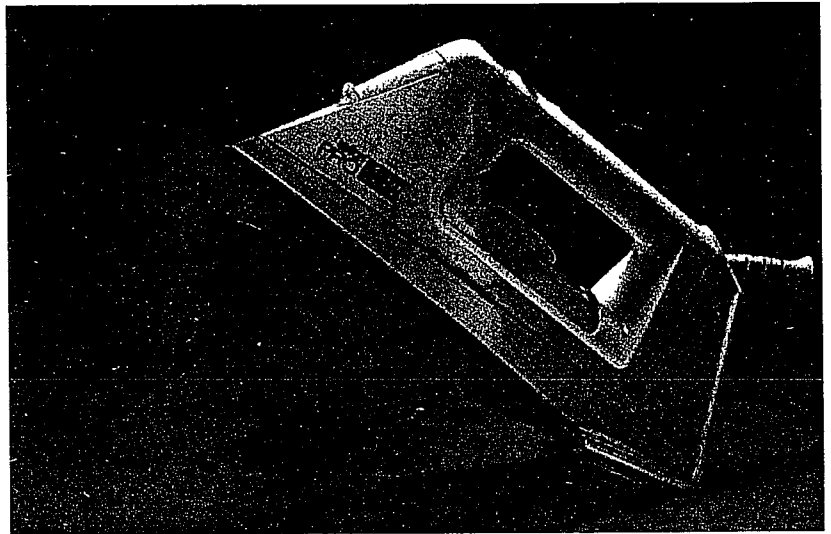

salton<sup>TM</sup>

*Get a taste of the good life with Salton*

# **IMPORTANT SAFETY INSTRUCTIONS**

When using your flat iron, basic safety precautions should always be followed, including the following:

1. Read all instructions carefully
2. Use iron only for it's intended use
3. To protect against risk of electrical shock, do not immerse the iron in water or other liquids.
4. The iron should always be turned to OFF before plugging or unplugging from outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
5. Do not allow cord to touch hot surfaces. Let iron cool completely before putting away.
6. Always disconnect iron from electrical outlet when filling with water or emptying and when not in use.
7. Do not operate iron with a damaged cord, or after the iron has been dropped or damaged in any manner. To avoid the risk of electrical shock, do not disassemble the iron. Return the iron to Service Center for examination and repair. Incorrect reassembly can cause the risk of electrical shock when the iron is used.
8. Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on any ironing board.
9. Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down; There may be hot water in the reservoir.

## **SPECIAL INSTRUCTIONS**

1. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a 12-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

**FOR HOUSEHOLD USE ONLY.**

**SAVE THESE INSTRUCTIONS**

# ADDITIONAL IMPORTANT SAFEGUARDS

 
1. Your Salton™ Iron is designed to rest only on the heel rest. Do not rest iron on sole plate.
2. Never use the iron on an unusable surface or rest it on an unstable surface.
3. While the iron is hot, never set it on an unprotected surface, even if it is on its heel rest.
4. **WARNING! TO PREVENT ELECTRIC SHOCK OR OTHER INJURY, BEFORE FILLING THE IRON WITH WATER, MAKE SURE THAT THE PLUG IS REMOVED FROM THE OUTLET. NEVER PULL CORD FROM THE OUTLET; INSTEAD, GRASP PLUG AND PULL TO DISCONNECT.**
5. **CAUTION: NEVER FILL THE IRON WITH FABRIC CONDITIONER, STARCHES OR ANY OTHER SOLUTION, AS THESE WILL DAMAGE THE STEAM MECHANISM. DO NOT USE CONTAMINATED WATER.**
6. **WARNING! TO AVOID FIRE, NEVER LEAVE IRON UNATTENDED WHILE IT IS PLUGGED IN. YOUR SALTON IRON COMES WITH THE SAFETY AUTO SHUT-OFF FEATURE. HOWEVER, THIS FEATURE IS NOT A SUBSTITUTE FOR YOUR CAREFUL USE OF THE IRON.**
7. Do not use your Salton™ iron on hanging drapes or hanging fabric.
8. **WARNING! TO PREVENT ELECTRIC SHOCK, NEVER IMMERSE THE IRON IN WATER OR OTHER LIQUIDS.**
9. **WARNING! TO PREVENT ELECTRIC SHOCK, NEVER USE THE IRON IN A LOCATION WHERE IT CAN FALL OR BE PULLED IN TO WATER OR ANOTHER LIQUID. IF THE IRON FALLS INTO WATER OR OTHER LIQUID, UNPLUG IT IMMEDIATELY; DO NOT REACH INTO THE WATER OR LIQUID.**
10. **WARNING! TO PREVENT ELECTRIC SHOCK OR OTHER INJURY, NEVER POUR WATER INTO THE STEAM VALVE HOLE.**
11. **CAUTION: Never use scouring pads, abrasives or chemical cleaners or solvents to clean your soleplate, as these will scratch and/or damage the surface.**
12. **CAUTION: Never use abrasives, chemical cleaners or solvents to clean the exterior of your iron, as these will damage the surface.**
13. Always store your iron on the heel rest, not on the soleplate. Even the smallest amount of moisture will cause corrosion and staining of the soleplate if the iron is stored face down.
14. **DANGER: NEVER USE THE IRON IF IT IS DAMAGED OR DROPPED. USING THE IRON WHEN IT IS DAMAGED COULD CREATE THE RISK OF FIRE, ELECTRIC SHOCK, INJURY OR DEATH.**

## GETTING TO KNOW YOUR SALTON PROSTEAM IRON

Before using your Salton ProSteam iron for the first time, remove any adhesive from the sole plate. Make sure that all adhesive is removed by rubbing the sole plate with a damp cloth.

When turned on for the first time, your new iron may give off vapors for up to 10 minutes. This is due to the initial heating of the materials used. It is safe, not detrimental to the performance of the product, and will not reoccur..


Before using for the first time, familiarize yourself with all parts:

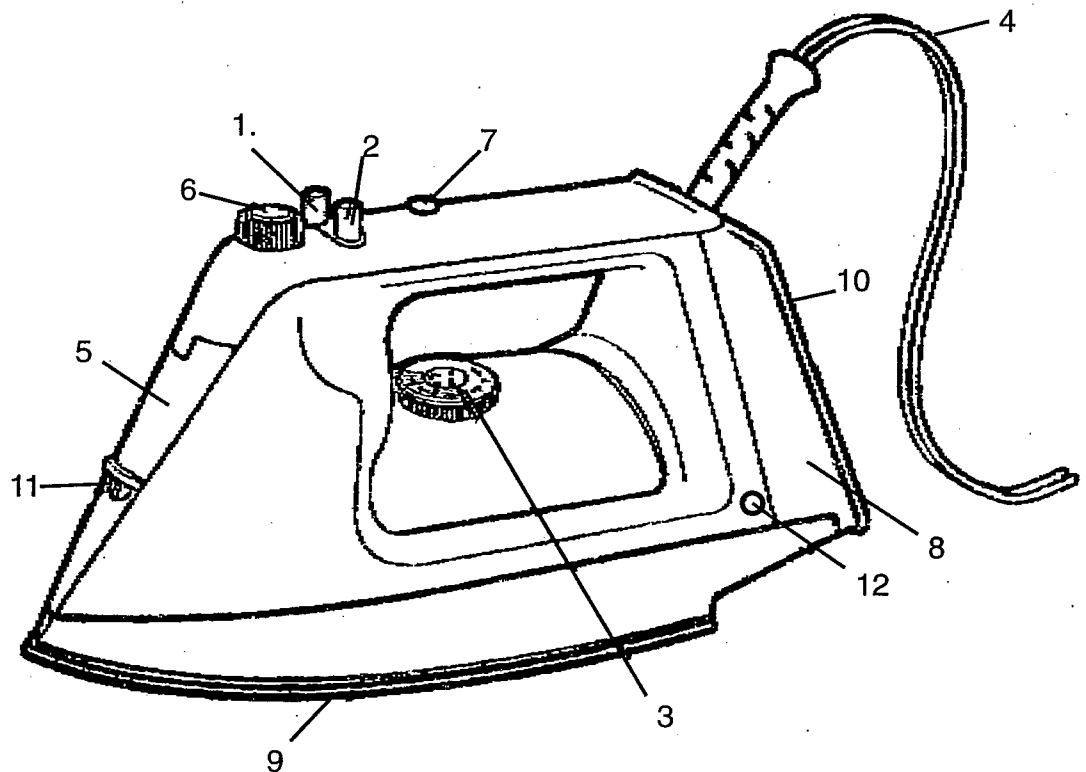

- 1. Blast of Steam Button
- 2. Atomizer Spray Button
- 3. Temperature Dial
- 4. Swivel Cord
- 5. Water Fill Port



- 6. Adjustable Steam Dial
- 7. Safety Auto Shut-Off
- 8. Cord Winder
- 9. Sole Plate
- 10. Heel Rest
- 11. Spray Nozzle
- 12. Ready Indicator Light (Red)

## FEATURES

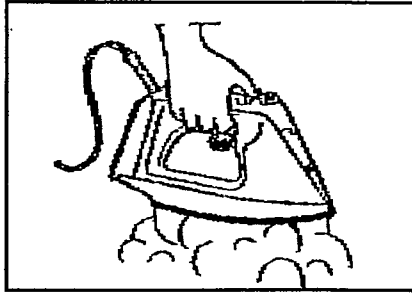 


### 1. BLAST OF STEAM

  Pushing the Blast button provides a powerful Blast of Steam without dripping water

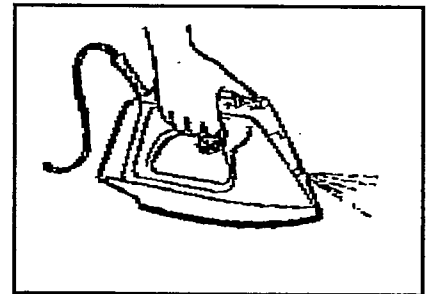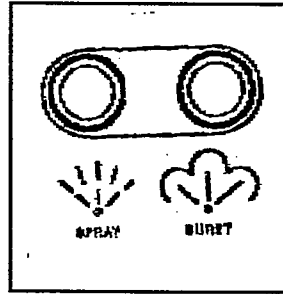


### 2. ATOMIZER SPRAY

 Pushing the spray button releases a jet of water

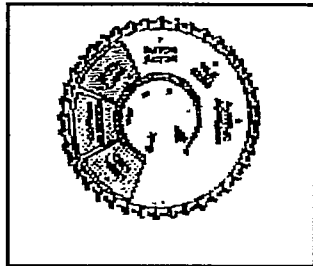


### 3. TEMPERATURE DIAL

 Temperatures are selected depending on the type of fabric to be ironed

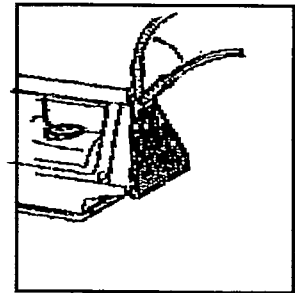


### 4. SWIVEL CORD FOR LEFT-AND RIGHT HANDED USERS

 Pivots up and down and is supported to prevent dangling along the fabric. The flexible grommet protects the cord from fraying

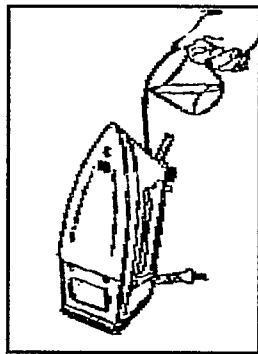


### 5. WATER FILL PORT

 Easy to fill for using steam or spray

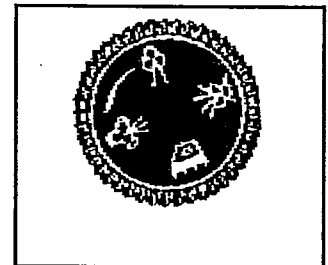


### 6. ADJUSTABLE STEAM DIAL

 For selecting dry ironing, turn to OFF. For steam ironing, adjust dial to preferred steam position.

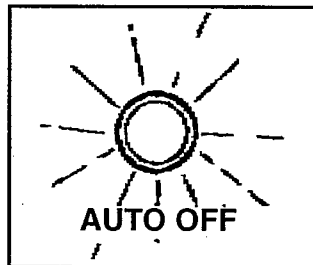

### 7. SAFETY AUTO SHUT-OFF

 Iron shuts off after 30 seconds in horizontal position and after 8 minutes in the vertical position. Auto off light will illuminate when the iron is on the Auto Shut Off Mode

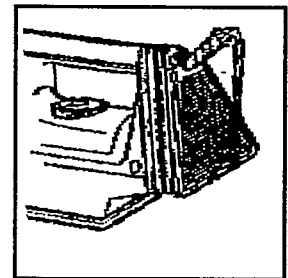

### 8. CORD WINDER

Holds cord conveniently and safely when iron is stored

# **OPERATING INSTRUCTIONS**

## **DRY IRONING**

1. Turn the steam dial to off. This will cut off the steam flow if water is in the tank.
2. Plug the cord into a 120V AC electrical outlet. The red indicator light will turn on.
3. Turn the temperature dial to the desired setting. (See ironing chart on page 10 for a guide to the temperature selection.)
4. While iron is warming to desired temperature, place iron on heel rest, on a stable, protected surface.
5. When the red light turns off, the iron is ready for use.

## **STEAM IRONING**

**WARNING! BEFORE FILLING THE IRON WITH WATER, MAKE SURE THE PLUG IS REMOVED FROM THE WALL SOCKET. AFTER THE PLUG IS REMOVED FROM THE WALL SOCKET, THE IRON MAY BE FILLED WHILE IT IS HOT.**

**WARNING! TO PREVENT THE RISK OF BURNS, USE CAUTION WHEN FILLING THE IRON WITH WATER. BURNS CAN OCCUR FROM TOUCHING HOT METAL PARTS, HOT WATER OR STEAM.**

1. Turn the STEAM dial to OFF.
2. Pour water through the water fill hole until maximum level is reached. Do not fill above the maximum line of the water reservoir.

**NOTE:** Tap water may be used.

**CAUTION: Never fill the iron with fabric conditioner, starches, or any other solution, as these will damage the steam mechanism. Do not use contaminated water.**

3. Plug the cord into 120V AC electrical outlet to turn the appliance on. The red light will turn on to indicate power.
4. Turn the temperature dial to the "COTTON" or "LINEN" position. (If the temperature is set below these settings, it will be too low for steam and water may drip from the sole plate. Place iron on heel rest, on a stable, protected surface while it is warming. When the amber light goes off, the iron is ready for use.
5. Turn the steam dial and adjust for steam rate. When using maximum steam rate, the iron uses more water, and it may be necessary to fill the tank more often.

## **USING THE BLAST OF STEAM**

The Blast of Steam is useful when ironing denim, cotton and linens. It provides an extra blast of steam to remove stubborn wrinkles.

The BLAST OF STEAM feature can be used with DRY or STEAM ironing and when the temperature dial is set at "COTTON" or "LINEN" on the temperature dial.

1. Make sure the tank is at least 1/2 full of water
2. Set the temperature dial in the steam range "COTTON" or "LINEN" while in a vertical position, resting on the heel rest or a stable, protected surface.
3. Press the Blast Of Steam button several times with the iron in a horizontal position to prime the pump.

**NOTE:** If the tank has run dry, make sure the plug is removed from the wall outlet; then fill the iron with water and re-prime the pump. The iron may be filled with water while it is hot.

## **ATOMIZER SPRAY**

The spray atomizer mist is useful on fabrics with stubborn wrinkles. Use the spray at any temperature setting and during either steam or dry ironing.

1. Make sure water reservoir is filled with water.
2. Press steam button and a jet of water will come out.

## **USE OF WATER**

Ordinary tap water may be used with the iron due to the special sole plate design. However, in very hard water areas, we recommend the use of distilled water or water that has been demineralized.

**CAUTION:** Never fill the iron with fabric conditioner, starches or any other solution, as these will damage the steam mechanism. Do not use contaminated water.

## **SAFETY AUTO SHUT-OFF**

The Safety Auto Shut-Off is a safety feature designed to automatically turn the iron off if you forget to.

The iron will turn itself off after 30 seconds of inactivity if left in the horizontal position; It will turn itself off after 8 minutes of inactivity if left in the vertical position.

The Auto Shut-Off light (on handle) will turn on when the iron is in the Auto Shut-Off mode.

**NOTE:** The Auto Shut-Off feature is delayed approximately 2 1/2 minutes when the iron is initially plugged in and turned on.

**WARNING! TO PREVENT FIRE, DO NOT LEAVE IRON UNATTENDED WHILE CONNECTED. THE SAFETY AUTO SHUT OFF IS NOT A SUBSTITUTE FOR YOUR CAREFUL USE OF THE IRON**

## **USER MAINTENANCE INSTRUCTIONS**

1. Turn the steam dial to OFF.
2. Turn the temperature dial to the "COTTON" or "LINEN" position and unplug from the electrical outlet.
3. Always allow the iron to cool completely before cleaning.
4. With sole plate facing away from you, carefully turn iron upside down over a sink and let remaining water empty out. Shake iron gently to remove all water from the reservoir.

**CAUTION: WATER IN RESERVOIR MAY STILL BE HOT. AVOID CONTACT WITH SKIN.**

5. Press the spray button to clear any water left inside.
6. The non-stick coating reduced sticking of fabrics and starches to sole plate. Wipe the sole plate with a damp, soft cloth after each use.

**CAUTION: Never use scouring pads, abrasives or chemical cleaners or solvents to clean your coated sole plate, as these will scratch and/or damage the surface.**

 
7. When the water has drained, set the iron on the heel rest for any remaining moisture to evaporate.
8. Wrap cord around the heel rest and store. Always store your iron on the heel rest, not the sole plate. Even the smallest amount of moisture will cause corrosion and staining of the sole plate if the iron is stored face down.

**CAUTION: Never use scouring pads, abrasives, or chemical cleaners or solvents to clean the exterior of your iron, as these will damage the surface.**



## CLEANING SOLE PLATE VENTS

1. Fill water reservoir, following instructions under STEAM ironing.
2. Plug cord into an electrical outlet.
3. Turn temperature selector to "LINEN"
4. As soon as the amber ready light goes out, unplug the iron and hold over a sink.
5. Set the steam dial to steam-cleaning position. Steam will come out of the vents, bringing with it calcium and other mineral deposits.

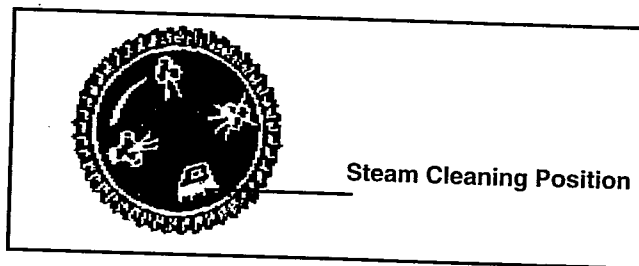

6. Repeat these steps until the water reservoir is completely empty.
7. Set the steam dial back to Off position.
8. Unplug the cord from the electrical outlet. Drain all the water out of the reservoir.

## IRONING GUIDE

### SELECTING IRON TEMPERATURE

Always read garment labels and follow the manufacturers ironing instructions. Refer to ironing chart on the next page for temperature recommendations:

<b>OFF</b>	No ironing
<b>ACRYLIC/SILK</b>	Use low settings for acrylic, silk and synthetics
<b>RAYON/WOOL</b>	Use moderate settings for rayon, wool and fabrics with more than 20% rayon or wool.
<b>COTTON/LINEN</b>	Use high settings for cotton, linen and blends

### IRONING HINTS

- Sort articles to be ironed according to the type of fabric. This will reduce the need to adjust the temperature for varying garments.
- If you are not sure of the fiber content of a garment, test a small area such as a seam or inside hem section before ironing a visible area. Start with a low temperature and gradually increase the heat to find the best setting.
- When reducing the temperature to iron sensitive fabrics, allow approximately 2 minutes for the iron to cool to the new setting
- Fabrics such as velour, wool, linen, and silk are best ironed with an ironing cloth to prevent shine marks.

### POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat thos safet feature.

# IRONING CHART

Fabric	Temperature Settings		Ironing Recommendations
Acrylic	ACRYLIC		Dry iron inside out
Acetate	ACRYLIC		Dry iron inside out while still damp
Silk	SILK		Iron inside out. Use an ironing cloth to prevent shine marks
Nylon	SILK		iron inside out while still damp
Polyester	SILK		iron inside out while still damp.
rayon	RAYON		Iron inside out
Viscose	RAYON		Mainly dry iron. Steam can be used under manufacturers instructions
Wool	WOOL		Steam iron inside out or us an ironing cloth
Wool Blends	WOOL		Steam iron inside out or us an ironing cloth
Cotton Blends	COTTON		Check label and follow manufacturer's instructions. Use setting for the fiber requiring the lowest setting. Spray lightly if needed before ironing
Corduroy	COTTON		Steam iron inside out or use ironing cloth and brush to raise the pile
Cotton	COTTON		Dry iron while still damp or use heavy steam and/or Blast of Steam
Linen	LINEN		Iron inside out or use an ironing cloth to prevent shine marks, especially with dark colors. Dry iron while still damp or use steam and/or BLAST OF STEAM
Denim	LINEN		Use Heavy Steam and /or BLAST OF STEAM

## ONE YEAR LIMITED WARRANTY

This Salton Maxim product warranty extends to the original consumer purchaser of the product.

**Warranty Duration:** This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

**Warranty Coverage:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violations of written instructions furnished by Salton Maxim Housewares, Inc., or to units that have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**Warranty Disclaimers:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for Salton Maxim Housewares, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

**Warranty Performance:** During the above one-year limited warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at Salton Maxim's option) when the product is returned to the Salton Maxim facility. The repaired or replacement product will be in warranty for the balance of the one year warranty period and an additional one month period. No charge will be made for such repair or replacement.

## Service and Repair

Should the appliance malfunction, you should first call toll-free 1-800-233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for Customer Service stating that you are a consumer with a problem.

**In-Warranty Service:** For an appliance covered under the warranty period, no charge is made for service or postage. Call for pre-paid return mailing label. (U.S. customers only)

**Out-of-Warranty Service:** A flat rate charge by model is made for out-of-warranty service. Include \$8.00 for return shipping and handling. Salton Maxim cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem; your full return address and daytime phone number; a note describing the problem you experienced; a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

Return the appliance to:

ATTN: Repair Department, Salton, Inc.

708 South Missouri St. Macon, MO 63552-1343

For more information on Salton/MAXIM products:

visit our website: <http://www.salton-maxim.com>, or you can email us at: [salton@saltonusa.com](mailto:salton@saltonusa.com)