



VITANTONIO®

Cordless Copper Kettle

OWNER'S MANUAL
Model VTCK1CAN

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact Consumer Service for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, lift the ON/OFF Switch to OFF position, then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Be certain Lid is securely in place before operating appliance.
14. Scalding may occur if the Lid is opened during heating.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

ADDITIONAL IMPORTANT SAFEGUARDS

WARNING: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

1. All users of this appliance must read and understand this instruction manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. Use **water only** in this appliance! Do not put any other liquids or food products in this appliance. Do not mix or add anything to the water placed in this appliance, except as instructed in the user maintenance instructions to clean the appliance.
4. Be sure Kettle is filled with water to at least the minimum marking level. Do not operate appliance without water or with an insufficient amount of water.
5. Do not fill above the MAX water level. If the Kettle is over-filled, there is a risk that boiling water may be ejected.
6. To avoid accidental scalding or burns, use extreme caution while moving this appliance when it contains hot water, and while pouring hot water from this appliance.
7. Keep appliance at least 4 inches away from walls or other objects during operation. Do not place any objects on top of appliance while it is operating. Place the appliance on a surface that is resistant to heat.
8. If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
9. If this appliance falls or accidentally becomes immersed in water or any other liquid, unplug it immediately. **Do not reach into the water! Do not use this appliance after it has fallen into or has become immersed in water.** Contact Consumer Service for examination and repair.
10. Do not leave this appliance unattended during use.
11. Always pour water into Kettle before plugging in and heating up the appliance. Never pour water into **heated** Kettle.
12. Do not block the steam from emitting from the Spout during use.
13. Do not use this appliance if it is cracked or damaged. Contact Consumer Service for examination and repair.
14. Do not place this appliance in a microwave oven.

GROUNDING 3-CONDUCTOR PLUG

This appliance is equipped with a grounded-type 3-wire cord (3-prong plug). This plug will only fit into an electrical outlet made for a 3-prong plug. This is a safety feature. If the plug should fail to fit the outlet, contact an electrician to replace the obsolete outlet. Do not attempt to defeat this safety feature.

SHORT CORD INSTRUCTIONS

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
Do not use an extension cord with this product.

PLASTICIZER WARNING

CAUTION: To prevent Plasticizers from migrating from the finish of the counter top or table top or other furniture, place NON-PLASTIC coasters or place mats between the appliance and the finish of the counter top or table top.


Failure to do so may cause the finish to darken, permanent blemishes may occur or stains can appear.

ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

Getting To Know Your VITANTONIO® 6 Cup Cordless Electric Kettle

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

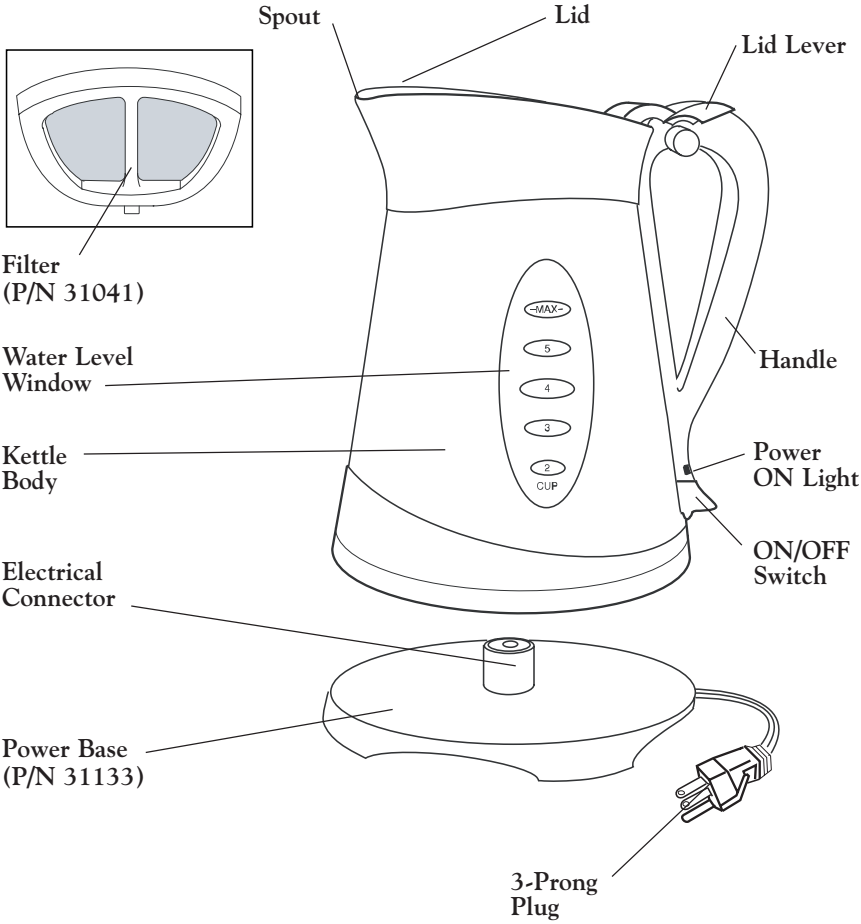

BEFORE USING FOR THE FIRST TIME

Before using your Kettle for the first time, clean it by boiling a Kettle of water following the operating instructions below, and then discard the water.

Operating Instructions

CAUTION: Do not immerse Power Base, power cord, or plug in water or any other liquid.

1. Position the Power Base on a stable, level surface near an electrical outlet. Unwind the power cord from the cord storage Area located beneath the Power Base. Make sure the cord exits through the cord exit slot on the side of the Power Base.
2. Check that the ON/OFF Switch is in the OFF (up) position.
3. Remove the Kettle from the Power Base and open the Lid. Fill with fresh, cold water to the desired level (see markings on Water Level Window). The Kettle yields up to 48 oz. of water. Use at least 2 cups of water, but do not fill above the MAX water level. Wipe excess water off the Kettle.

CAUTION: Do not fill above the MAX water level. This could cause boiling water to splatter out.

NOTE: If the Kettle is accidentally switched ON without sufficient water, a boil-dry protection device will automatically switch the unit OFF. (See boil-dry protection explanation.)

CAUTION: When filling or carrying the Kettle, avoid tilting it backwards, as this may allow water to pass through the steam aperture onto the control area. Should this occur, place the Kettle in a warm location for approximately 12 hours to allow it to completely dry before use.

4. Make sure the Filter is in place before use. Boiling water may splatter without the Filter in place.
5. Close the Lid and press down gently to ensure it is fully closed, otherwise the Kettle may not switch off after boiling.
6. Place the Kettle on the Power Base, **taking care not to spill any water.**
7. Plug the power cord into a 120V AC electrical outlet. Press the ON/OFF Switch down to the ON position. The Power ON Light will illuminate and the water will begin heating immediately.
8. When the water comes to a boil, the unit will automatically turn OFF.

NOTE: The Kettle can be turned off at any time during the heating process by using the ON/OFF Switch.

Operating Instructions (continued)

WARNING: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property. Keep hands and face clear of the area above the Kettle.

9. Grasp the Handle and carefully lift the Kettle from the Power Base before pouring.

CAUTION: Always make sure the Kettle is OFF before removing it from the Power Base. To avoid a risk of splashing, pour slowly and don't over tilt the Kettle.

CAUTION: Do not touch hot surfaces!

When you lift the Kettle from the Power Base you may notice moisture on the Power Base surface. This is the steam used to switch the Kettle OFF automatically, which then condenses and escapes through the vents in the underside of the Kettle. This is normal and should be ignored.

10. Return the Kettle to the Power Base. To reheat, check the water level and press the ON/OFF Switch to the ON position.
11. When not in use unplug the Power Base from the wall outlet. Allow the unit to cool completely before cleaning. Empty the Kettle after each use. Do not leave water in the Kettle overnight. See User Maintenance Instructions.

Boil-Dry Protection

A safety thermostat will automatically operate should your Kettle be accidentally plugged in without any water, or if the Kettle is without sufficient water, or if the Kettle is allowed to boil dry. To reset the boil-dry protection device you must remove the Kettle from the Power Base and allow it to cool before refilling with water.


User Maintenance Instructions

The Russell Hobbs® 6 cup electric Kettle requires little maintenance. It contains no user-serviceable parts. Do not try to repair it yourself. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

CAUTION: Always unplug Kettle and allow to cool before cleaning. Never immerse Kettle, Power Base, cord, or plug in water or other liquids. Never use scouring pads or harsh cleansers to clean your Kettle as they may damage the surface.

CLEANING

1. Make sure the Kettle is unplugged and completely cool.
2. Grasp the Handle and remove the Kettle from the Power Base. If necessary, wipe the inside and outside of the Kettle with a soft, damp cloth and wipe dry.
3. To remove the Filter, raise the Lid and pull the Filter straight up. Rinse the Filter under running water. If necessary, use a soft brush to loosen any scale deposits. Heavier deposits may require soaking in a water/vinegar solution. Do not wash in dishwasher.
4. To reinstall the Filter, align the tab on the bottom of the Filter with the slot below the Spout. Press down on the bottom of the Filter to snap it in place.
5. Wipe the Power Base with a damp cloth.
6. Make sure both the Power Base and Kettle are completely dry after cleaning and before use.
7. Wrap the power cord around the cord storage area beneath the Power Base for storage purposes.

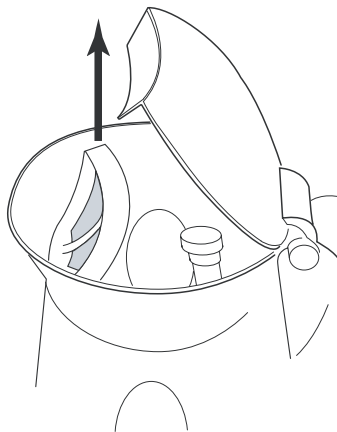

Decalcifying

Mineral deposits and/or scale build-up can form a coating inside the Kettle and may cause an off flavor in the water or lengthen the boiling time. To promote longer use of your electric Kettle, follow the decalcifying procedure every month, or after 30 uses. If you have hard water, you may notice a slowing of the boiling process — an indication you should decalcify more frequently.

Decalcifying Procedure

1. Fill the Kettle with approximately 1 quart (1 liter) of water. Add 1 fl. oz. (30ml) of white vinegar to the water.
2. Place the Power Base on a flat, level surface and plug the cord into a 120V AC electrical outlet.
3. Place the Kettle on the Power Base and press the Power ON/OFF Switch to the ON position.
4. Allow the mixture to come to a boil. When the unit automatically turns off, unplug the power cord from the wall outlet.
5. Grasp the Handle and remove the Kettle from the Power Base. Carefully pour out the hot contents.
6. Rinse the Kettle several times with water to remove all dislodged particles and deposits, and any trace of vinegar. **DO NOT IMMERSE THE KETTLE IN WATER! Make sure that all connectors and sockets are kept dry.**
7. If necessary, the Filter within the Spout can be removed for cleaning. Simply pull straight up to remove and rinse beneath running water. Heavier deposits may require soaking in a water/vinegar solution. When clean, rinse to remove deposits and any trace of vinegar. Reinstall the Filter.
8. Repeat the boiling process one more time with clean, fresh water.

STORAGE

Unplug unit and allow to cool. Store in its box or in a cool, dry place. Never store Kettle while it is still plugged in. Wrap cord around the cord storage area beneath the Power Base. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the appliance as it may cause the cord to fray and break.

LIMITED ONE-YEAR WARRANTY

Warranty Coverage: This product is warranted to be free from defects in materials or workmanship for a period of one (1) year from the original purchase date. This product warranty is extended only to the original consumer purchaser of the product and is not transferable. For a period of one (1) year from the date of original purchase of the product, our Repair Center will, at its option, either (1) repair the product or (2) replace the product with a reconditioned comparable model. These remedies are the purchaser's exclusive remedies under this warranty.

Warranty Service: To obtain warranty service, you must call our warranty service number at 1-800-233-9054 for return instructions on how to deliver the product, in either the original packaging or packaging affording an equal degree of protection to the Repair Center specified below. You must enclose a copy of your sales receipt or other proof of purchase to demonstrate eligibility for warranty coverage.

To return the appliance, ship to: **To contact us**, please write to, call, or email:

ATTN: Repair Center
708 South Missouri Street
Macon, MO 63552 USA

Consumer Relations Department
PO Box 7366
Columbia MO 65205-7366 USA
1-800-233-9054
E-mail:consumer_relations@toastmaster.com

What Is Not Covered: This warranty does not cover damage resulting from misuse, accident, commercial use, improper service or any other damage caused by anything other than defects in material or workmanship during ordinary consumer use. This warranty is invalid if the serial number has been altered or removed from the product. This warranty is valid only in the United States and Canada.

LIMITATION ON DAMAGES: THERE SHALL BE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES AND CONDITIONS, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR USE ON THIS PRODUCT ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights under the laws of your jurisdiction.

For more information on our products, visit our website:
www.maxim-toastmaster.com.