 


# OWNER'S MANUAL

Model No. DM22G, DM22Y

## Malt Shoppe™

DRINK MIXER

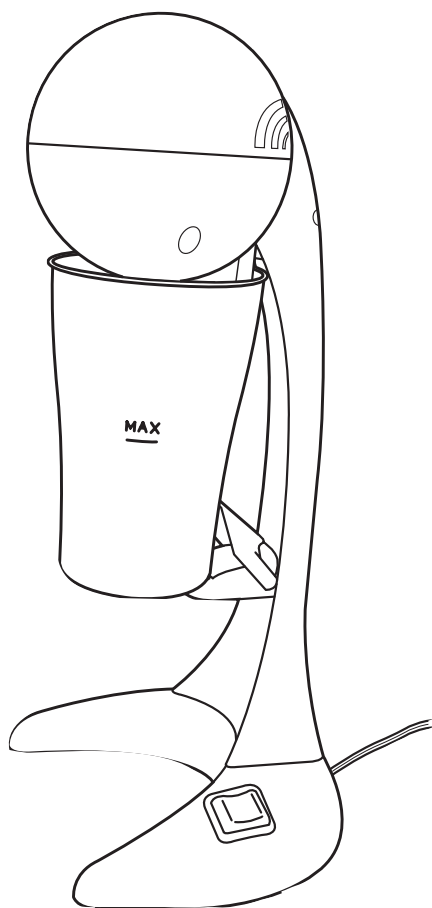

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. To protect against risk of electrical shock do not put cord, plugs, or appliance in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact Consumer Service for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended by the manufacturer may cause a risk of injury to persons.
8. Do not operate the Drink Mixer without the Mixing Cup. Do not use any Mixing Cup other than the one provided with the Drink Mixer.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter.
11. Do not let cord contact hot surface, including the stove.
12. Keep hands and utensils out of the Mixing Cup while blending to reduce the risk of severe injury to persons or damage to the Mixer. A scraper may be used but must be used only when the Mixer is not running.
13. Blades are sharp. Handle carefully.
14. Always operate Mixer with Mixing Cup in place.

**SAVE THESE INSTRUCTIONS**  
**THIS PRODUCT IS FOR HOUSEHOLD USE ONLY**

## ADDITIONAL IMPORTANT SAFEGUARDS

1. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. Do not leave this appliance unattended during use.
4. If this appliance begins to malfunction during use, immediately turn the Speed Switch to the (O) OFF position and unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
5. If this appliance falls or accidentally becomes immersed in water, unplug it immediately. **Do not reach into the water!** Do not use this appliance after it has fallen into or becomes immersed in water.
6. To reduce the risk of injury to persons or property, never use this appliance in an unstable position.
7. Do not use this appliance for other than its intended use.

## POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## PLASTICIZER WARNING

**CAUTION:** To prevent Plasticizers from migrating from the finish of the counter top or table top or other furniture, place NON-PLASTIC coasters or place mats between the appliance and the finish of the counter top or table top.

 
Failure to do so may cause the finish to darken, permanent blemishes may occur or stains can appear.

## ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

# GETTING TO KNOW YOUR MALT SHOPPE™ DRINK MIXER

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

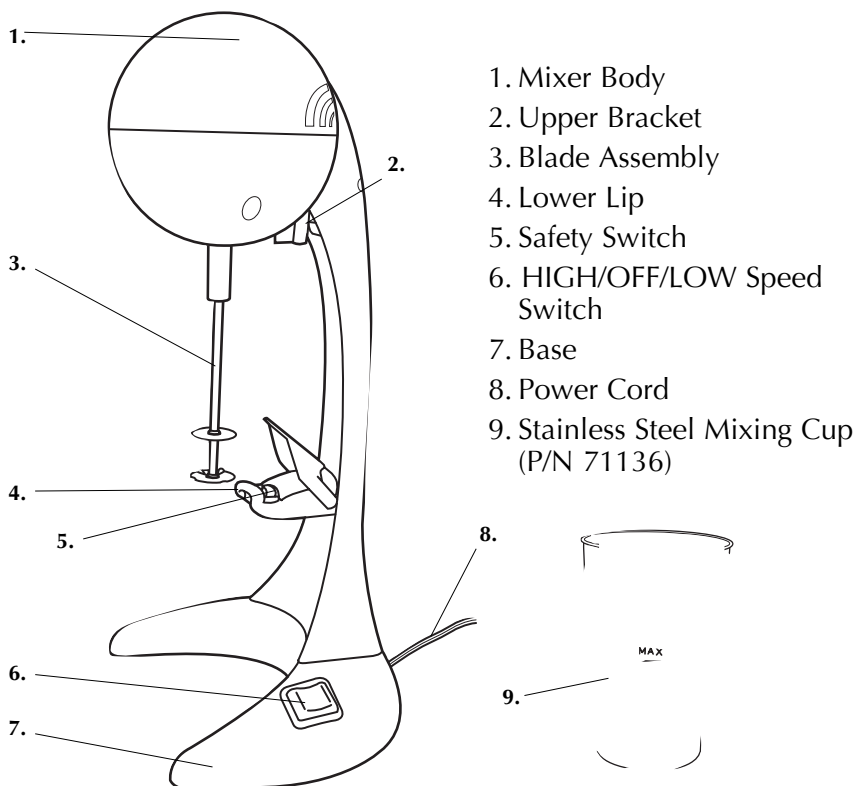

## BEFORE USING FOR THE FIRST TIME

**CAUTION: Use extreme care when handling the Blade Assembly.**

**Do not touch the Blades with your fingers. The Blades are very sharp and can cause injury if touched.**

1. Carefully unpack the Mixer Body and two Stainless Steel Mixing Cups.
2. Wash the two Stainless Steel Mixing Cups in warm soapy water. Rinse and dry thoroughly.
3. Make sure the cord is unplugged and the Speed Switch is in the (O) OFF position.

**CAUTION: To protect against risk of electrical shock, do not place Mixer Body, plug or cord in water or any other liquid.**

4. Wipe the Mixer Body clean with a moistened cloth. Dry thoroughly.

# OPERATING INSTRUCTIONS

**CAUTION: Keep hands and utensils out of the Mixing Cup while blending to prevent the possibility of severe injury to persons or damage to the unit. A scraper may be used but must only be used when the unit is not running.**

**CAUTION: Use extreme care when handling the Blade Assembly. Do not touch Blades with your fingers. The Blades are very sharp and can cause injury if touched.**

1. Before starting, make sure power cord is unplugged and the Speed Switch is in (O) OFF position.
2. Place the Mixer Body on a level, dry surface..
3. Add ingredients to the Stainless Steel Mixing Cup.

**NOTE: Do not fill the Stainless Steel Mixing Cup past the MAX marking on the side of the Mixing Cup. Never operate when the Mixing Cup is empty.**

4. Place the Upper Lip of the Stainless Steel Mixing Cup into the Upper Bracket (see Figure 1.)
5. Place the Base of the Stainless Steel Mixing Cup onto the Lower Lip. Make sure Mixing Cup is securely in place as this will engage the Safety Switch (see Figure 1.) If the Safety Switch is not engaged unit will not operate
6. Plug the power cord into a 120V AC electrical outlet. Slide the Speed Switch to the desired speed setting: I is the lowest speed; II is the highest. Blend until ingredients have reached desired consistency.
7. When ingredients are completely mixed, remove the Mixing Cup from the Mixer Body

**CAUTION: Stainless Steel Mixing Cup may rotate during blending, stabilize Mixing Cup by gently holding with your left hand.**

- Do not touch Blades
- Do not interfere with the Blade movement
- When blending is completed, turn the Speed Switch to (O) OFF to stop the Blender and unplug the unit.

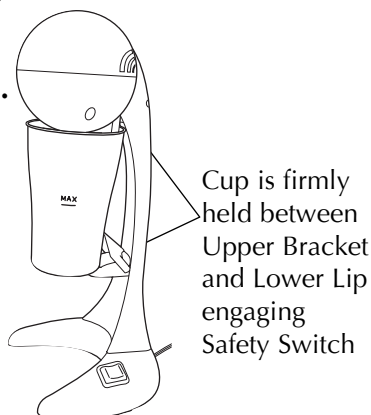 


FIGURE 1

# USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing that requires disassembly other than cleaning must be performed by a qualified appliance repair technician.

**CAUTION: Never immerse the Mixer Body, plug or cord in water or any other liquid.**

1. Always unplug the unit before cleaning.
2. Whenever possible, rinse parts immediately after processing to make cleanup easier.

**CAUTION: Use extreme care when handling the Blade Assembly. Do not touch the Blades with your fingers. The Blades are very sharp and can cause injury if touched.**

3. Wash the Stainless Steel Mixing Cups in warm soapy water. Rinse and dry thoroughly. Never use rough scouring pads or abrasive cleansers on any plastic or metal parts as the surface may be damaged.
4. If necessary, wipe exterior surface with a moist cloth or sponge and dry thoroughly.
5. Do not place any of the parts in boiling water.

## STORAGE

Unplug and clean unit. Store in original box or in a clean, dry place. Never store Malt Shoppe Mixer while it is hot or plugged in. Never wrap cord tightly around the appliance. Never place any stress on cord, especially where the cord enters the unit, as this could cause the cord to fray and break.

# RECIPES

## At The Hop

½ cup vanilla ice cream

½ cup lowfat milk

1 teaspoon vanilla extract

Combine ice cream, milk and vanilla extract in the Stainless Steel Mixing Cup. Place in the Malt Shoppe Drink Mixer and blend for 30-40 seconds or until smooth and creamy. Pour into a glass, pop in a straw and serve immediately.

## Splitsville

½ cup vanilla ice cream

½ cup lowfat milk

½ cup mashed banana

whipped cream

1 cherry

Combine ice cream, milk and mashed banana in the Stainless Steel Mixing Cup. Place in the Malt Shoppe Drink Mixer and blend for 30-40 seconds or until smooth and creamy. Pour into a glass, top off with whipped cream and a cherry, pop in a straw and serve immediately.

## Blueberry Hill

½ cup vanilla ice cream

½ cup lowfat milk

½ cup mashed blueberries

Combine ice cream, milk and blueberries in the Stainless Steel Mixing Cup. Place in the Malt Shoppe Drink Mixer and blend for 30-40 seconds or until smooth and creamy. Pour into a glass, pop in a straw and serve immediately.

## The Spider

½ cup vanilla ice cream

½ cup milk

juice from 1 large lime

Combine milk, ice cream and lime juice in the Stainless Steel Mixing Cup. Place in the Malt Shoppe Drink Mixer and blend for 30-40 seconds or until smooth and creamy. Pour into a glass, pop in a straw and serve immediately.

## Rock-A-Hula Baby

½ cup chocolate ice cream

½ cup lowfat milk

3 tablespoons chocolate syrup

Combine ice cream, milk and chocolate syrup in the Stainless Steel Mixing Cup. Place in the Malt Shoppe Drink Mixer and blend for 30-40 seconds or until smooth and creamy. Pour into a glass, pop in a straw and serve immediately.

## Pink Cadillac

½ cup strawberry ice cream

½ cup lowfat milk

6 strawberries, halved

Combine milk, ice cream and strawberries in the Stainless Steel Mixing Cup. Place in the Malt Shoppe Drink Mixer and blend for 30-40 seconds or until smooth and creamy. Pour into a glass, pop in a straw and serve immediately.



## The Twist

½ cup vanilla ice cream  
½ cup lowfat milk  
3 drops peppermint extract

Combine ice cream, milk and peppermint extract in the Stainless Steel Mixing Cup. Place in the Malt Shoppe Drink Mixer and blend for 30-40 seconds or until smooth and creamy. Pour into a glass, pop in a straw and serve immediately.

## Jingle Bell Rock

½ cup vanilla ice cream  
½ cup eggnog  
1 teaspoon vanilla extract

Combine eggnog, ice cream and vanilla extract in the Stainless Steel Mixing Cup. Place in the Malt Shoppe Drink Mixer and blend for 30-40 seconds or until smooth and creamy. Pour into a glass, pop in a straw and serve immediately.

## Sherbet Shuffle

½ cup orange sherbet  
½ cup lowfat milk  
3 tablespoons orange juice

Combine sherbet, milk and orange juice in the Stainless Steel Mixing Cup. Place in the Malt Shoppe Drink Mixer and blend for 30-40 seconds or until smooth and creamy. Pour into a glass, pop in a straw and serve immediately.

## Hunk'a Burning Mud

- 1/2 cup chocolate ice cream
- 1/2 cup lowfat milk
- 1/4 cup chilled black coffee
- 2 tablespoons chocolate syrup
- 1/4 cup grated chocolate

Combine milk, coffee, chocolate syrup and ice cream in the Stainless Steel Mixing Cup. Place in the Malt Shoppe Drink Mixer and blend for 30-40 seconds or until smooth and creamy. Pour into a glass, top off with grated chocolate, pop in a straw and serve immediately.

## Strawberry Flip

- 3/4 cup lowfat milk
- 3 tablespoons strawberry yogurt
- 3/4 cup vanilla yogurt
- 3 tablespoons orange juice
- 6 strawberries, halved

Combine milk, strawberry and vanilla yogurt, orange juice and strawberries in the Stainless Steel Mixing Cup. Place in the Malt Shoppe Drink Mixer and blend for 30-40 seconds or until smooth and creamy. Pour into a glass, pop in a straw and serve immediately.

## The Charles Atlas

- 1/2 cup lowfat milk
- 1/2 cup vanilla yogurt
- 2 tablespoons unprocessed bran
- 1 tablespoon wheat germ
- 1 tablespoon honey

Combine milk, yogurt, bran, wheat germ and honey in the Stainless Steel Mixing Cup. Place in the Malt Shoppe Drink Mixer and blend for 30-40 seconds or until smooth and creamy. Pour into a glass, pop in a straw and serve immediately.

# LIMITED ONE YEAR WARRANTY

**Warranty Coverage:** This product is warranted to be free from defects in materials or workmanship for a period of one (1) year from the original purchase date. This product warranty is extended only to the original consumer purchaser of the product and is not transferable. For a period of one (1) year from the date of original purchase of the product, our Repair Center will, at its option, either (1) repair the product or (2) replace the product with a reconditioned comparable model. These remedies are the purchaser's exclusive remedies under this warranty.

**Warranty Service:** To obtain warranty service, you must call our warranty service number at 1-800-233-9054 for return instructions on how to deliver the product, in either the original packaging or packaging affording an equal degree of protection to the Repair Center specified below. You must enclose a copy of your sales receipt or other proof of purchase to demonstrate eligibility for warranty coverage.

To return the appliance, ship to:

ATTN: Repair Center  
708 South Missouri Street  
Macon, MO 63552 USA

To contact us, please write to, call, or email:

Consumer Relations Department  
PO Box 7366  
Columbia MO 65205-7366 USA  
1-800-233-9054  
E-mail:  
consumer\_relations@toastmaster.com

**What Is Not Covered:** This warranty does not cover damage resulting from misuse, accident, commercial use, improper service or any other damage caused by anything other than defects in material or workmanship during ordinary consumer use. This warranty is invalid if the serial number has been altered or removed from the product. This warranty is valid only in the United States and Canada.

**LIMITATION ON DAMAGES:** THERE SHALL BE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT.

**DURATION OF IMPLIED WARRANTIES:** EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES AND CONDITIONS, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR USE ON THIS PRODUCT ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights under the laws of your jurisdiction.

For more information on our products, visit our website: [www.maxim-toastmaster.com](http://www.maxim-toastmaster.com).

Made in China

P/N 61646  
02/05