
OWNER'S MANUAL MODEL No. KM-44

# Iced Tea Iced Coffee Maker

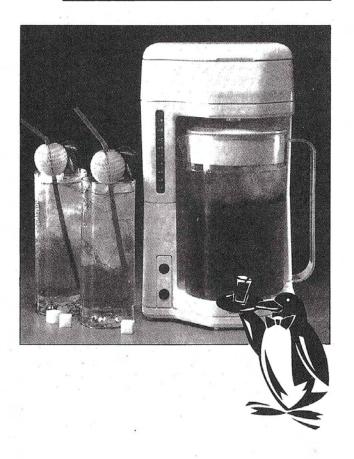



# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

- 1. Read all instructions carefully.
- 2. Do not touch hot surfaces. Use handles or knobs.
- 3. To protect against electric shock, do not place cord, plugs or appliance in water or other liquid.
- 4. Close supervision is necessary when any appliance is used by or near children.
- 5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
- 6. Do not operate any appliance with a damaged cord or plug or after the appliance has malfunctioned or has been damaged in any manner.
- 7. The use of an accessory attachment not recommended by Salton Inc. may cause injury.
- 8. Do not use outdoors.
- 9. Do not let cord hang over edge of table or counter or touch hot surfaces.
- 10. Do not place on or near a hot gas or electric burner, or in a heated oven.
- 11. Do not use appliance for other than intended use.
- 12. Scalding may occur if the lid is removed during brewing cycle.
- 13. The carafe is designed for use with this appliance. It must never be used on a range top.
- 14. Do not set a hot carafe on a wet or cold surface. Do not use a cracked carafe or a carafe having a loose or weakened handle.
- 15. Do not clean carafe with cleansers, steel wool pads or other abrasive material.

# SAVE THESE INSTRUCTIONS

# For Household Use Only Polarized Plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## **Short Cord Instructions**

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Do not use an extension cord.

### **Plasticizer Warning**

**CAUTION:** To prevent Plasticizers from migrating from the finish of the counter top or table top or other furniture, place NON-PLASTIC coasters or placemats between the appliance and the finish of the counter top or table top.

Failure to do so may cause the finish to darken, permanent blemishes may occur or stains can appear.


#### **Electric Power**

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

# Getting to know Your Salton KM-44 Iced Tea and Iced Coffee Maker

Before attempting to use your Salton KM-44 you should become familiar with all of the parts. Read all of the instructions and cautions carefully. Wash all removable parts in warm soapy water, rinse thoroughly and dry.

Before making your first pot of iced tea or iced coffee, make sure the water container is empty. Remove literature, etc. that may be inserted in the container... we recommend operating the iced tea and iced coffee maker once or twice with water (maximum capacity) only...no ground coffee or tea... to remove any possible dust or debris.

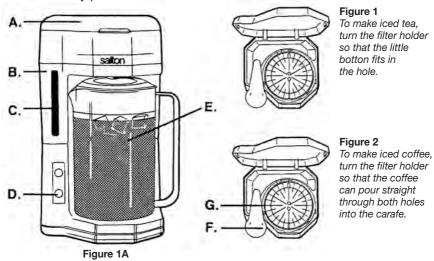

- A. Water reservoir cover
- **B.** Water reservoir
- C. Water level indicator (red Ball)
- **D.** On/off switch

- E. Carafe with attached cover
- F. Water nozzle
- G. Filter holder

# Directions for Making Automatic Iced Tea/Iced Coffee

- Lift the cover of the water reservoir, pour in cold, clean water to the desired level... the water level is shown by the red ball in the water indicator.
- To make iced tea, turn the filter holder so that the little button fits in the hole. The tea has to steep before pouring into the carafe. (See Figure 1) We suggest 2-3 tea bags for one whole carafe.
   To make iced coffee, turn the filter holder so that the coffee can pour straight through both holes into the carafe. (Figure 2)
   We suggest 4-6 rounded teaspoons fresh ground coffee for a whole carafe. ALWAYS USE A PAPER OR MESH FILTER.


After using your Salton Iced Tea and Iced Coffee Maker several times you can adjust the amount of tea bags or coffee to your own taste.

- 3. Fill the carafe with ice cubes to the ice cube marker line.
- 4. Make sure the carafe is sitting in the proper position. (See Figure 1A)
- 5. Plug in the appliance and switch the machine on by pressing the red
- The water will start to filter through the machine and into the carafe.
   When the coffee or tea has brewed the appliance will automatically switch off.

#### FILTER PLACEMENT



To make iced tea, turn the filter holder so that the little botton fits in the hole. The tea has to steep before pouring into the carafe.

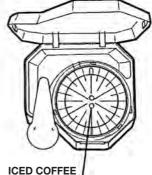

To make iced coffee, turn the filter holder so that the coffee can pour straight through both holes into the carafe.

### For Best Results

Always use fresh, cold water.

Freshly ground coffee is very important. We recommend that you grind your own beans just before making your coffee. Freshly ground beans will give you more flavor and aroma. Coffee beans can be stored in the freezer and ground while still frozen.

For best results use only medium fine ground coffee in this appliance.

# Caution

SALTON'S KM-44 is designed for household use only. Any servicing other than cleaning and user maintenance, should be performed by an authorized service representative.

To reduce the risk of fire or electric shock, do not remove the base. Repairs should be done by an authorized service representative.

#### DO NOT IMMERSE BASE IN WATER OR ANY OTHER LIQUID!!!

Use only cold water to fill the water reservoir. Never use warm or hot water. Never use any liquid other than water.

Allow the machine to cool down before adding more water to the water reservoir or before cleaning.

# Care and Cleaning of Your Salton KM-44

Always switch off and unplug your appliance before cleaning.

Always allow the unit to cool completely before cleaning.

All removable parts should be washed in warm soapy water and thoroughly rinsed in clean water. Dry thoroughly before reassembly. These parts are **NOT** dishwasher safe.

The balance of the machine should be wiped clean. **NEVER IMMERSE THE BODY OF YOUR KM-44 IN WATER OR ANY OTHER LIQUID.** 

Do not use abrasive cleaners of any kind.

The inside of the water reservoir should occasionally be rinsed out with clean cold water. Never clean with a cloth as this can leave lint.

# Decalcifying

Any appliance used for boiling water will inevitably become calcified in areas where the water contains lime. It may therefore be necessary to decalcify the appliance from time to time. For example when the filtering process takes noticeably longer than usual.

# Instructions for Decalcifying

- Dissolve 4 teaspoons plain white distilled vinegar (containing 3% acetic acid) in 2 cups of water.
- 2. Pour the vinegar/water solution into the water reservoir (this will allow the vinegar/water solution to run through the machine as though you were preparing coffee, but without the coffee). Plug in the appliance and press the switch to the "ON" lighted position.
- Repeat this operation two or three more times depending on the degree of calcification.
- 4. Now fill the appliance with fresh cold water (omit vinegar) and press the switch to the "ON" lighted position. Allow the water to circulate through your SALTON KM-44 in the same way as described for the vinegar water solution. Repeat the plain water operation 2-3 times to make sure that the machine is clean and free of any vinegar taste.

### LIMITED ONE YEAR WARRANTY

Warranty Coverage: This product is warranted to be free from defects in materials or workmanship for a period of one (1) year from the original purchase date. This product warranty is extended only to the original consumer purchaser of the product and is not transferable. For a period of one (1) year from the date of original purchase of the product, our Repair Center will, at its option, either (1) repair the product or (2) replace the product with a reconditioned comparable model. These remedies are the purchaser's exclusive remedies under this warranty.

**Warranty Service:** To obtain warranty service, you must call our warranty service number at 1-800-233-9054 for return instructions on how to deliver the product, in either the original packaging or packaging affording an equal degree of protection to the Repair Center specified below. You must enclose a copy of your sales receipt or other proof of purchase to demonstrate eligibility for warranty coverage.

To return the appliance, ship to:

ATTN: Repair Center

708 South Missouri Street Macon, MO 63552 USA

1-800-233-9054

To contact us, please write to, call, or email:

Consumer Relations Department

PO Box 7366

Columbia MO 65205-7366 USA

E-mail:

consumer\_relations@toastmaster.com

What Is Not Covered: This warranty does not cover damage resulting from misuse, accident, commercial use, improper service or any other damage caused by anything other than defects in material or workmanship during ordinary consumer use. This warranty is invalid if the serial number has been altered or removed from the product. This warranty is valid only in the United States and Canada.

LIMITATION ON DAMAGES: THERE SHALL BE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES AND CONDITIONS, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR USE ON THIS PRODUCT ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights under the laws of your jurisdiction.

For more information on our products, visit our website: www.maxim-toastmaster.com.

Made in China

11/06

Printed in China