 


White-Westinghouse™

***Full-Size
Steam Iron
with
Auto-Off
Feature***

OWNER'S MANUAL

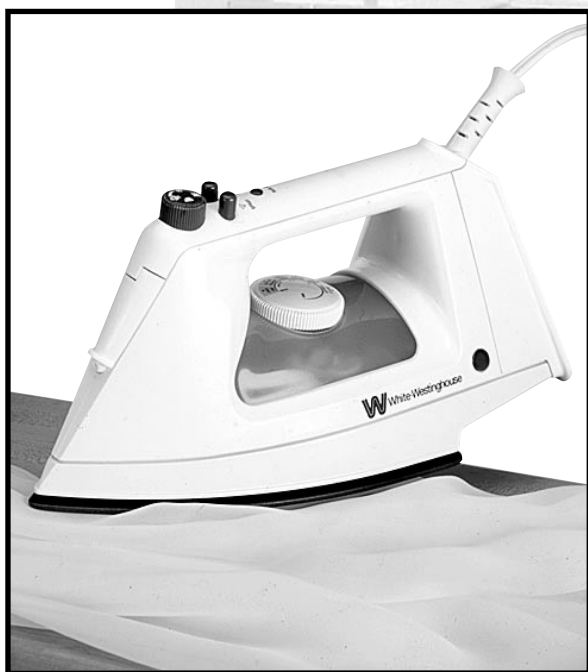

MODEL WSR2100A

IMPORTANT SAFETY INSTRUCTIONS

When using your flat iron, basic safety precautions should always be followed, including the following:

1. Read all instructions carefully.
2. Use iron only for its intended use.
3. To protect against risk of electrical shock, do not immerse the iron in water or other liquids.
4. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
5. Do not allow cord to touch hot surfaces. Let iron cool completely before putting away.
6. Always disconnect iron from electrical outlet when filling with water or emptying and when not in use.
7. Do not operate iron with a damaged cord, or after the iron has been dropped or damaged in any manner. To avoid the risk of electric shock, do not disassemble the iron. Return the iron to Service Center for examination and repair. Incorrect reassembly can cause the risk of electric shock when the iron is used.
8. Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
9. Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down; there may be hot water in the reservoir.

SPECIAL INSTRUCTIONS

1. To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a 12- ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

SAVE THESE INSTRUCTIONS

ADDITIONAL IMPORTANT SAFEGUARDS

 
1. Your White-Westinghouse™ Iron is designed to rest only on the heel rest. Do not rest iron on soleplate.
2. Never use the iron on an unstable surface or rest it on an unstable surface.
3. While the iron is hot, never set it on an unprotected surface, even if it is on its heel rest.
4. **WARNING! TO PREVENT ELECTRIC SHOCK OR OTHER INJURY, before filling the iron with water, make sure that the plug is removed from the outlet. Never pull cord from the outlet; instead, grasp plug and pull to disconnect.**
5. **CAUTION: Never fill the iron with fabric conditioner, starches or any other solution, as these will damage the steam mechanism. Do not use contaminated water.**
6. **WARNING! TO AVOID FIRE, never leave iron unattended while it is plugged in. Your White-Westinghouse™ Iron comes with the Safety Auto Shut-Off feature. However, this feature is not a substitute for your careful use of the iron.**
7. Do not use your White-Westinghouse™ Iron on hanging drapes or hanging fabric.
8. **WARNING! TO PREVENT ELECTRIC SHOCK, never immerse the iron in water or other liquid.**
9. **WARNING! TO PREVENT ELECTRIC SHOCK, never use the iron in a location where it can fall or be pulled into water or another liquid. If the iron falls into water or other liquid, unplug it immediately; do not reach into the water or liquid.**
10. **WARNING! TO PREVENT ELECTRIC SHOCK OR OTHER INJURY, never pour water into the steam valve hole.**
11. **CAUTION: Never use scouring pads, abrasives or chemical cleaners or solvents to clean your soleplate, as these will scratch and/or damage the surface.**
12. **CAUTION: Never use abrasives, chemical cleaners or solvents to clean the exterior of your iron, as these will damage the surface.**
13. Always store your iron on the heel rest, not on the soleplate. Even the smallest amount of moisture will cause corrosion and staining of the soleplate if the iron is stored face down.
14. **DANGER: Never use the iron if it is damaged or dropped. Using the iron when it is damaged could create the risks of fire, electric shock, injury or death.**

GETTING TO KNOW YOUR WHITE-WESTINGHOUSE™ IRON

Before using your White-Westingshouse™ Iron for the first time, remove any adhesive stickers from the soleplate. Make sure that all adhesive is removed by rubbing the soleplate with a damp cloth.


When turned on for the first time, your new iron may give off vapors for up to 10 minutes. This is due to the initial heating of the materials used. It is safe, not detrimental to the performance of the product, and will not reoccur.

Before using for the first time, familiarize yourself with all parts:


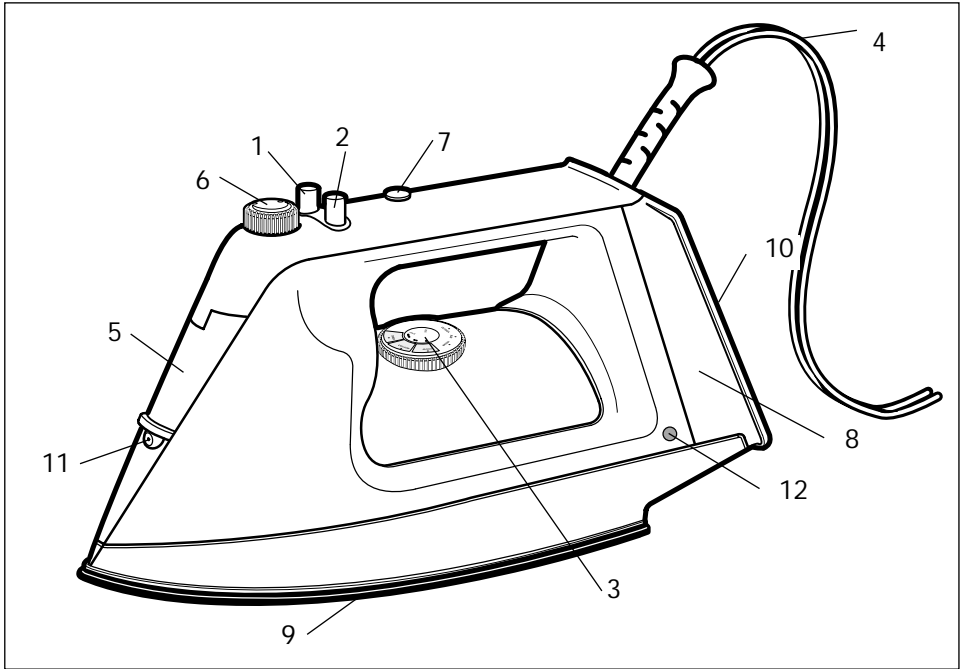


- | | |
|--------------------------|---------------------------------|
| 1. Burst-of-Steam Button | 6. Adjustable Steam Dial |
| 2. Atomizer Spray Button | 7. Safety Auto Shut-Off |
| 3. Temperature Dial | 8. Cord Winder |
| 4. Swivel Cord | 9. Soleplate |
| 5. Water Fill Port | 10. Heel Rest |
| | 11. Spray Nozzle |
| | 12. Ready Indicator Light (Red) |

 
FEATURES

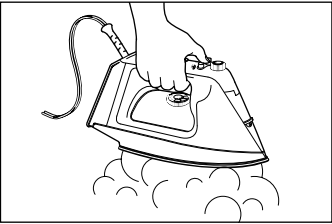

  
1. **BURST OF STEAM** Pushing the burst button provides a powerful blast of steam without dripping water.

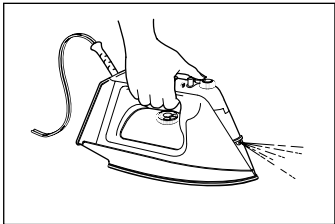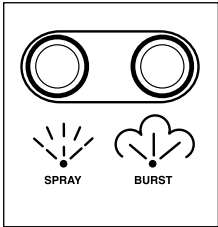

 
2. **ATOMIZER SPRAY** Pushing the spray button releases a jet of water.

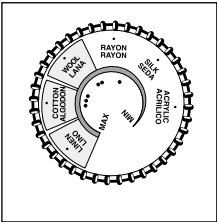

 
3. **TEMPERATURE DIAL**
Temperatures are selected depending on the type of fabric to be ironed.

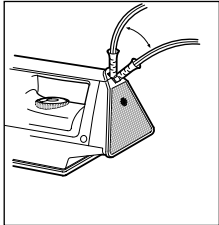

 
4. **SWIVEL CORD FOR LEFT- AND RIGHT-HANDED USERS** Pivots up and down and is supported to prevent dragging along the fabric. The flexible grommet protects the cord from fraying.

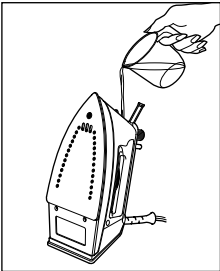

 
5. **WATER FILL PORT** Easy to fill for using steam or spray features.

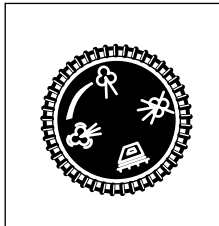

 6. **ADJUSTABLE STEAM DIAL**
For selecting dry ironing, turn to OFF. For steam ironing, adjust dial to preferred steam position.

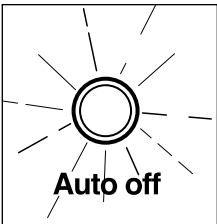

 7. **SAFETY AUTO SHUT-OFF** Iron shuts off after 30 seconds in the horizontal position and after 8 minutes in the vertical position. Auto off light will illuminate when the iron is on the Auto Shut off Mode.

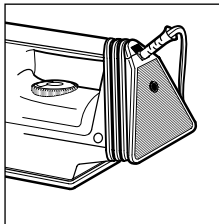

8. **CORD WINDER** Holds cord conveniently and safely when iron is stored.

OPERATING INSTRUCTIONS

DRY IRONING

1. Turn the steam dial to off. This will cut off the steam flow if water is in the tank.
2. Plug the cord into a 120V AC electrical outlet. The red indicator light will turn on.
3. Turn the temperature dial to the desired setting. (See ironing chart on page 10 for a guide to the temperature selection.)
4. While iron is warming to desired temperature, place iron on heel rest, on a stable, protected surface.
5. When the red light turns off, the iron is ready for use.

STEAM IRONING

WARNING! Before filling the iron with water, make sure the plug is removed from the wall socket. After the plug is removed from the wall socket, the iron may be filled while it is hot.

WARNING! TO PREVENT THE RISK OF BURNS, use caution when filling iron with water. Burns can occur from touching hot metal parts, hot water or steam.

1. Turn the **STEAM** dial to **Off**.
2. Pour water through the water fill hole until maximum level is reached. Do not fill above the maximum line of the water reservoir.

NOTE: Tap water may be used.

CAUTION: Never fill the iron with fabric conditioner, starches or any other solution, as these will damage the steam mechanism. Do not use contaminated water.

3. Plug the cord into a 120V AC electrical outlet to turn the appliance on. The red light will turn on to indicate power.
4. Turn the temperature dial to the "COTTON" or "LINEN" position. (If the temperature is set below these settings, it will be too low for steam and water may drip from the soleplate. Place iron on heel rest, on a stable, protected surface while it is warming. When the amber light goes off, the iron is ready for use.
5. Turn the steam dial and adjust for steam rate. When using maximum steam rate, the iron uses more water, and it may be necessary to fill the tank more often.

USING THE BURST OF STEAM

The **BURST OF STEAM** is useful when ironing denim, cotton and linens. It provides an extra blast of steam to remove stubborn wrinkles.

The **BURST OF STEAM** feature can be used with Dry or Steam ironing and when the temperature dial is set at "COTTON" or "LINEN" on the temperature dial.

1. Make sure the tank is at least 1/2 full of water.
2. Set the temperature dial in the steam range "COTTON" or "LINEN" while in a vertical position, resting on the heel rest or a stable, protected surface. When the red light goes off, the **BURST OF STEAM** is ready for use.
3. Press the **BURST OF STEAM** button several times with the iron in a horizontal position to prime the pump.

NOTE: If the tank has run dry, make sure the plug is removed from the wall outlet; then fill the iron with water and re-prime the pump. The iron may be filled with water while it is hot.

ATOMIZER SPRAY

The spray atomizer mist is useful on fabrics with stubborn wrinkles.

Use the spray at any temperature setting and during either steam or dry ironing.

1. Make sure water reservoir is filled with water.
2. Press steam button and a jet of water will come out.

USE OF WATER

Ordinary tap water may be used with the iron due to the special soleplate design. However, in very hard water areas, we recommend the use of distilled water or water that has been demineralized.

CAUTION: Never fill the iron with fabric conditioner, starches or any other solution, as these will damage the steam mechanism. Do not use contaminated water.

SAFETY AUTO SHUT-OFF

The **Safety Auto Shut-Off** is a safety feature designed to automatically turn the iron off if you forget to.

The iron will turn itself off after 30 seconds of inactivity if left in the horizontal position; it will turn itself off after 8 minutes of inactivity if left in the vertical position.

The Auto Shut-Off light (on handle) will turn on when the iron is in the Auto Shut-Off mode.

Note: The Auto Shut-Off feature is delayed approximately 2½ minutes when the iron is initially plugged in and turned on.

WARNING! TO PREVENT FIRE, DO NOT LEAVE IRON UNATTENDED WHILE CONNECTED. The Safety Auto Shut-Off is not a substitute for your careful use of the iron.

USER MAINTENANCE INSTRUCTIONS

1. Turn the **STEAM** dial to **Off**.
2. Turn the temperature dial to the "COTTON" or "LINEN" position and unplug from the electrical outlet.
3. Always allow the iron to cool **completely** before cleaning.
4. With soleplate facing away from you, carefully turn iron upside down over a sink and let remaining water empty out. Shake iron gently to remove all water from the reservoir.

CAUTION: WATER IN RESERVOIR MAY STILL BE HOT. AVOID CONTACT WITH SKIN.

5. Press the spray button to clear any water left inside.
6. The non-stick coating reduces sticking of fabrics and starches to the soleplate. Wipe the soleplate with a damp, soft cloth after each use.

 
CAUTION: Never use scouring pads, abrasives or chemical cleaners or solvents to clean your coated soleplate, as these will scratch and/or damage the surface.

7. When the water has drained, set the iron on the heel rest for any remaining moisture to evaporate.
8. Wrap cord around the heel rest and store. Always store your iron on the heel rest, not on the soleplate. Even the smallest amount of moisture will cause corrosion and staining of the soleplate if the iron is stored face down.

CAUTION: Never use scouring pads, abrasives, or chemical cleaners or solvents to clean the exterior of your iron, as these will damage the surface.

CLEANING SOLEPLATE VENTS

1. Fill water reservoir, following instructions under Steam Ironing.
2. Plug cord into an electrical outlet.
3. Turn temperature selector to "LINEN".
4. As soon as the amber ready light goes out, unplug the iron and hold over a sink.
5. Set the steam dial to steam-cleaning position. Steam will come out of the vents, bringing with it calcium and other mineral deposits.

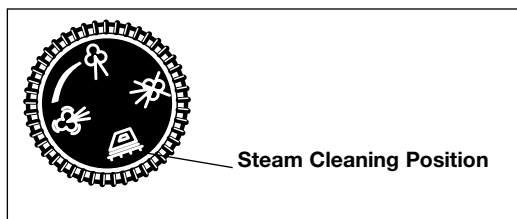

6. Repeat these steps until the water reservoir is completely empty.
7. Set the steam dial back to Off position.
8. Unplug the cord from the electrical outlet. Drain all the water out of the reservoir.

ONE-YEAR LIMITED WARRANTY

This White-Westinghouse product warranty extends to the original consumer purchaser of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished, or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied, and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a comparable model (at the store's option) when the product is returned to Kmart. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Important Notice

If any parts are missing or defective, return this product to the place of purchase, or contact our Consumer Service Department for assistance.

Consumer Service

This White-Westinghouse product is distributed by:

Salton/MAXIM Housewares, Inc.
708 South Missouri St.
Macon, MO 63552
E-mail: Salton550@aol.com

Any questions or comments can be directed to Salton/MAXIM's address, or call the Consumer Service Department:

1-800-233-9054
Monday-Friday
9 a.m. - 5 p.m. CST

You will be charged 95 cents per minute, with a maximum charge of \$3.80 for this call.

Trademark White-Westinghouse used under license.

©1997 White-Consolidated Industries, Inc.

Made in China for
Kmart Corporation
Troy, Michigan 48084
Printed in Hong Kong