


OWNER'S MANUAL



STAINLESS STEEL COFFEEMAKER

Model 238-49073

 KCP12

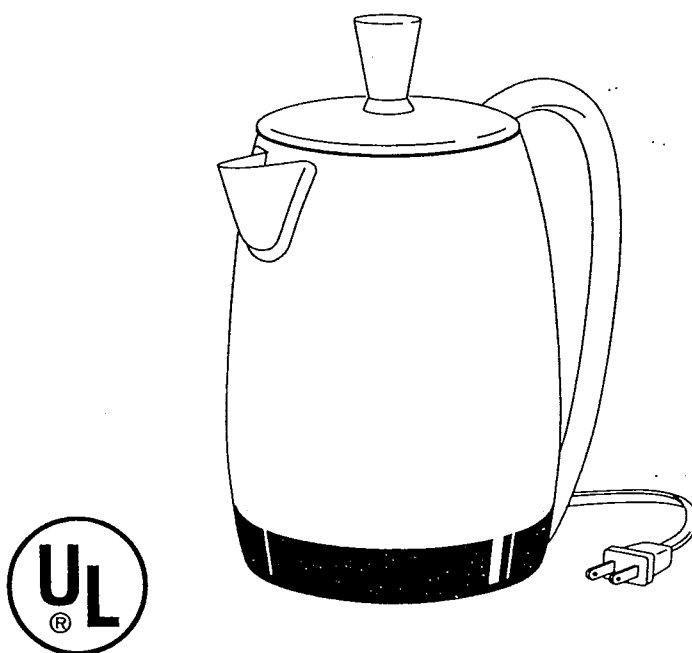

CAUTION:

Before using this Coffeemaker, read this manual and follow all its Safety Rules and Operating Instructions.

- Safety
- Operation
- Cleaning

SEARS WARRANTY

FULL ONE YEAR WARRANTY ON KENMORE STAINLESS STEEL COFFEEMAKER

If this Kenmore Stainless Steel Coffeemaker fails due to a defect in material or workmanship within one year from date of purchase, Sears will replace it free of charge.

WARRANTY SERVICE

To obtain replacement under this warranty, return this Kenmore Stainless Steel Coffeemaker to your nearest Sears Store in the United States.

This warranty applies only while this Kenmore Stainless Steel Coffeemaker is used in the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears, Roebuck and Co., Dept. 817WA, Hoffman Estates, IL 60179

Customer Service Department 1-800-233-9054

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

1. Do not touch hot surfaces. Use handles or knobs.
2. To protect against fire, electric shock and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
5. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
6. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
7. Do not use outdoors.
8. Do not let cord hang over edge of table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. When connecting an appliance, always take hold of the plug—never the cord—and attach to appliance first. Then, plug into the wall outlet. To disconnect, remove plug from wall outlet first, in the same manner.
11. Do not use appliance for other than intended use.
12. For household use only.
13. When replacing the cover, make sure it is seated all around the rim of the body. To remove, grasp knob and lift off.
14. Do not remove lid during brewing cycles. Scalding may occur if the lid is removed during the brewing cycles.

SAVE THESE INSTRUCTIONS

WARNINGS

TO AVOID ELECTRICAL SHOCK:

- To reduce the risk of fire or electric shock, do not remove any service covers. There are no user serviceable parts inside. Repair should be done by authorized personnel only.
- Keep your coffeemaker out of the reach of children.
- Do not run water or any other liquid over the coffeemaker.


TO OTHERWISE AVOID INJURY:

- Keep appliance from direct contact with steam.
- Do not use your Kenmore Stainless Steel Coffeemaker without water.
- Do not use your Kenmore Stainless Steel Coffeemaker if it is obviously leaking.
- Keep your hands and the cord away from hot coffeemaker parts during operation.
- Never clean with harsh cleansers or abrasive materials.

SHORT POWER CORD

The coffeemaker's power cord is short to reduce your risk of becoming entangled in or tripping over a long cord. You can obtain a longer, detachable power-supply cord or extension cord, but be careful when using a coffeemaker equipped with extra cord length. If you are using a longer detachable power-supply cord or extension cord, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and (2) arrange the longer cord so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

YOUR KENMORE STAINLESS STEEL COFFEEMAKER

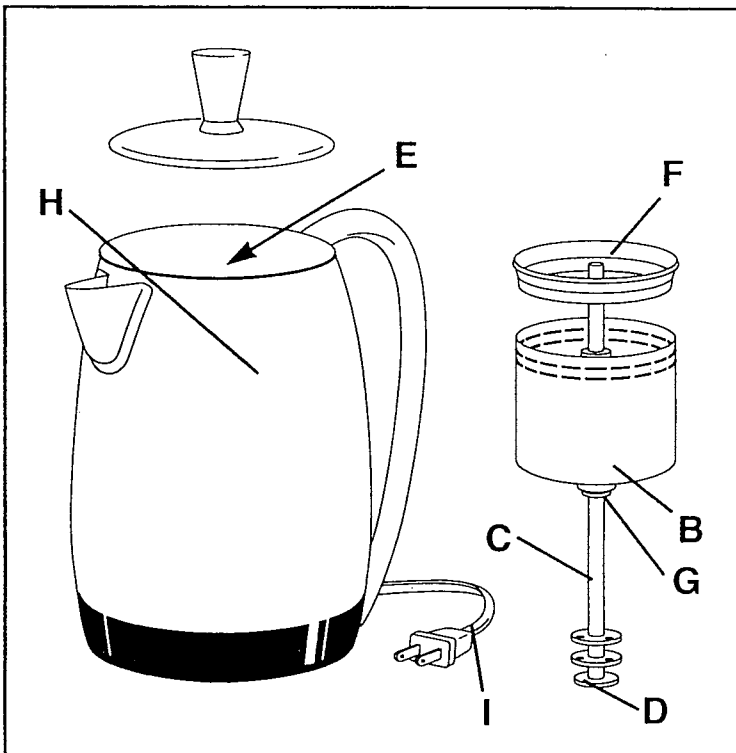

- A. Cover
- B. Basket
- C. Pump Tube
- D. Washer
- E. Center Well
- F. Spreader
- G. Spring
- H. Body
- I. Power Cord

OPERATING INSTRUCTIONS

BREWING COFFEE

The best-tasting coffee begins with quality beans. We recommend using coffee ground specifically for percolator-type coffeemakers. This type of coffee is prepared specifically for your coffeemaker's brewing system. Your Kenmore Stainless Steel Coffeemaker will brew up to 12 5-ounce cups of coffee at a time.

1. Wash coffeemaker parts thoroughly before first use. See "CARE AND CLEANING" section at the end of this manual for detailed cleaning instructions.
2. Remove cover, spreader, basket, and pump tube from coffeemaker body. Fill coffeemaker body with fresh, cold tap water to desired level (markings on inside of body). **NOTE:** The bottom of the spring marks the maximum water capacity of the coffeemaker.

CAUTION: Never operate your Kenmore Stainless Steel Coffeemaker with anything but cold water in the coffeemaker body.

3. Run coffee basket under water. This will help prevent small coffee particles from sifting through during the brewing cycles.

4. Place basket on pump tube. Add desired amount of regular or percolator grind coffee to basket. See "Coffee Measuring Chart" for more information.
5. Place pump tube/basket into coffeemaker so bottom of pump tube sits in center well of coffeemaker body.
6. Place spreader on top of basket.
7. Place cover onto coffeemaker. Be sure cover is seated all around the rim of the body.
8. Attach rounded end of power cord to receptacle on side of coffeemaker. Insert plug into a standard 120V AC electrical outlet. Brewing begins within seconds and continues for approximately one minute per cup of coffee.
9. The coffeemaker will stop percolating when coffee brewing is complete. The coffeemaker automatically switches to a "keep warm" setting which keeps coffee fresh-tasting, hot, and ready-to-serve.
10. For best flavor, remove coffee basket, spreader, and pump tube when brewing is complete. Always use protective kitchen gloves when handling hot coffeemaker parts.

CAUTION: Remove parts carefully; coffee, coffeemaker, and parts will be hot!

COFFEE MEASURING CHART

| CUPS TO BE BREWED | STANDARD COFFEE MEASURES | | |
|----------------------|--------------------------|--------|--------|
| | MILD | MEDIUM | STRONG |
| 12 | 6 | 8 | 10 |
| 10 | 5 | 7 | 9 |
| 8 | 4 | 6 | 8 |
| 6 | 3 | 4 | 6 |
| 5 | 2-3/4 | 3-1/2 | 5 |
| 4 | 2-1/4 | 3 | 4 |
| 3 | 1-3/4 | 2-3/4 | 3-1/2 |
| 2 | 1-1/2 | 2 | 2-1/2 |

1 standard coffee measure = 2 level tablespoons


1 cup brewed coffee = 5 fluid ounces

CARE AND CLEANING

WARNING: To avoid serious injury and electrical shock, you must unplug and allow your Kenmore Stainless Steel Coffeemaker to cool thoroughly before cleaning.

After each use:

1. Unplug the machine from wall outlet. Remove cord from coffeemaker. Allow machine to cool thoroughly before cleaning.
2. Remove cover, coffee basket, spreader, and pump tube carefully—grounds and remaining coffee may still be warm.
3. Wash cover, coffee basket, spreader, and pump tube (with spring) with warm water and a mild detergent or wash in the dishwasher. **NEVER IMMERSE COFFEEMAKER BODY IN WATER OR WASH IN DISHWASHER.**
4. Rinse all parts thoroughly and dry. Store coffeemaker with cover off coffeemaker body.
5. Check washer on bottom of pump tube. The washer should remain loose. If coffee grounds lodge in this area, remove grounds with running water or a wooden pick.

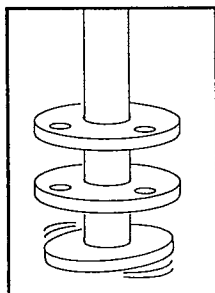

After repeated use:

Over time, oil and coffee stains can accumulate to create bitter-tasting coffee.

1. Use a special cleanser (such as "Dip-It") to remove accumulation of oil and coffee stains.
2. Follow package directions, filling coffeemaker body with water to 1-1/2" from top.
3. Be sure to rinse coffeemaker well.

Cleaning the exterior:

1. Wipe coffeemaker exterior with a soft cloth dampened with water. Wipe exterior dry with a soft cloth. If necessary, use a stainless steel cleaner to remove stains or other marks on the stainless steel.