


ELECTRIC TEAKETTLE

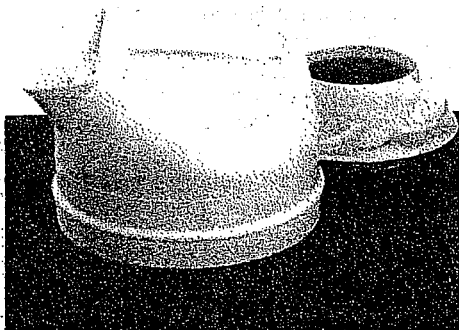

MODEL WST4003ZE

OWNER'S MANUAL



Westinghouse

IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards do not immerse cord, plugs, or the appliance in water or any liquid.
4. Close supervision is necessary when any appliance is used near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot liquids.
12. To disconnect remove plug from the wall outlet.
13. Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

STORAGE

Unplug unit; store in its box or in a clean, dry place. Never store it while it is hot or still plugged in. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

ADDITIONAL IMPORTANT SAFEGUARDS

WARNING: This appliance generates heat and escaping steam during use. Use proper precautions to prevent the risk of burns, fires, or other injury to persons or damage to property.

1. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. Use **water only** in this appliance! Do not put any other liquids or food products in this appliance. Do not mix or add anything to the water placed in this appliance, except as instructed in the User Maintenance Instructions to clean the appliance.
4. To avoid accidental scalding or burns, use extreme caution while moving this appliance when it contains hot water, and while pouring hot water from this appliance.
5. Keep appliance at least 4 inches away from walls or other objects during operation. Do not place any objects on top of appliance while it is operating. Place the appliance on a surface that is resistant to heat.
6. If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
7. If this appliance falls or accidentally becomes immersed in water or any other liquid, unplug it immediately. **Do not reach into the water! Do not use this appliance after it has fallen into or has become immersed in water.** Contact Consumer Service for examination and repair.
8. Do not leave this appliance unattended during use.
9. Always pour water into Kettle before plugging in and heating up the appliance. Never pour water into heated Kettle.
10. Be sure Kettle is filled with water to at least the "Min" marking level. Do not operate appliance without water or with an insufficient amount of water. Also, do not fill above the "MAX" water level. If the Kettle is overfilled, there is a risk that boiling water may be ejected.
11. Do not block the steam from emitting from the Spout during use.
12. Do not use this appliance if it is cracked or damaged. Contact Consumer Service for examination and repair.
13. Do not place this appliance in a microwave oven.

SHORT CORD INSTRUCTIONS


A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. The use of an extension cord is not recommended.

3-PRONG PLUG

This appliance is equipped with a grounded-type 3-wire cord (3-prong plug). This plug will only fit into an electrical outlet made for a 3-prong plug. This is a safety feature. If the plug should fail to fit the outlet, contact an electrician to replace the obsolete outlet. Do not attempt to defeat this safety feature. This is the purpose of the grounding pin as part of the 3-prong plug.

GETTING TO KNOW YOUR WESTINGHOUSE WST4003ZE ELECTRIC TEAKETTLE

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

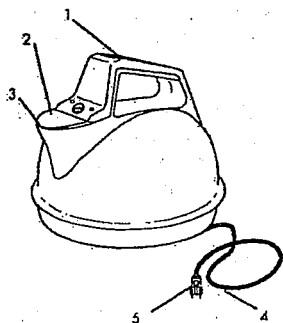

1. Handle
2. Spout
3. MIN/MAX Fill Lines
4. Electrical Cord
5. Three-prong plug

**DO NOT OVERFILL
KETTLE OR THE
WATER MAY BOIL
OVER!**

BEFORE USING FOR THE FIRST TIME

It is recommended that you clean your new kettle thoroughly before using it for the first time. To do this, fill the kettle with fresh water and boil. Discard the water and rinse the kettle with cold water. Follow the instructions as stated below.

CAUTION: Always disconnect the line cord before filling the kettle. Do not overfill the kettle or it may boil over.

FILLING THE KETTLE

With the line cord disconnected, fill the kettle with water well above the MIN FILL mark but not over the MAX FILL line.

CAUTION: Always add sufficient water to the kettle to ensure that the water level is well above the MIN FILL mark. This will ensure that the heating element is covered and will prevent the kettle from automatically shutting off due to the low-water safety feature. As a guide, we recommend that you always begin with at least four cups of water.

CAUTION: Do not overfill your kettle or it may boil over. A maximum fill line is inscribed on the inside of the spout.

OPERATING INSTRUCTIONS USING THE WHISTLE KETTLE

When the kettle is filled with the desired amount of water, plug it into the nearest wall receptacle. The kettle will whistle continuously when the water reaches a full boil. Unplug the kettle and pour the water into your cup or container.

NOTE: The whistle sound means that the kettle is actively boiling. Unplug the kettle promptly to avoid it boiling dry, as it will use up water quickly in the production of steam. Once it boils dry, the whistle reminder will cease and the kettle's safety features will cause it to cycle on and off until it has been disconnected.

CAUTION: Always unplug the kettle from the outlet before pouring water.

CAUTION: Do not plug in the kettle when it is empty or allow it to boil dry. If you do, the safety thermostat will automatically cycle on and off to prevent overheating until you disconnect the kettle from the wall receptacle. Should cycling occur, disconnect the kettle and allow to cool before refilling with water.

NOTE: The whistle loudness and pitch may change slightly with time and the fill level of the kettle.

USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

CARE AND MAINTENANCE

WARNING: To reduce the risk of fire or electric shock, do not remove bottom cover. No user serviceable parts inside. Repair should be done by authorized service personnel only.

CLEANING YOUR ELECTRIC KETTLE

1. Unplug the Kettle from the outlet and allow to cool before cleaning
2. Do not immerse the Kettle or any part of the Kettle in water or any other liquid.
3. There may be deposits of minerals that form inside the Kettle and flake off during use. Rinse out as needed.
4. Mineral deposits can form a coating over the heating elements and may cause an off flavor in the water and may lengthen boiling time. In a bowl, mix a diluted solution of one part vinegar to four parts water and pour into kettle.
5. Plug in Kettle and allow to boil. Unplug.
6. Pour out hot water and allow to cool. Repeat process with clean water to rinse.
7. The Kettle exterior may be cleaned with a sudsy cloth. Wipe with a damp cloth and dry thoroughly. Do not use abrasive cleaners they can scratch the surface.

ONE YEAR LIMITED WARRANTY

Warranty : This product is warranted to be free from defect in materials and workmanship for a period of one (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

Warranty Coverage: This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA or Canada, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Implied Warranties: ANY WARRANTIES IMPLIED WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states and provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a comparable model when the product is returned to Zellers. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement with the warranty period.

Important Notice

If any parts are missing or defective, return this product to the place of purchase.

Any question or comments can be directed to the Consumer Relations, Department. Please write to or call:

Consumer Relations Dept.
P. O. Box 6916
Columbia, Mo 65205-6916
1(800) 233-9054

Limitation of Remedies: No representative or person is authorized to assume for us any other liability in connection with the sale of our products. There shall be no claims for defect or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty, and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Legal Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state/province.

WESTINGHOUSE™, and "YOU CAN BE SURE...IF IT'S WESTINGHOUSE™" ARE TRADEMARKS OF WESTINGHOUSE ELECTRIC CORPORATION AND USED UNDER LICENSE BY Salton, Inc. In no event shall Salton Inc. be liable for any incidental or consequential damages, losses or expenses.