 
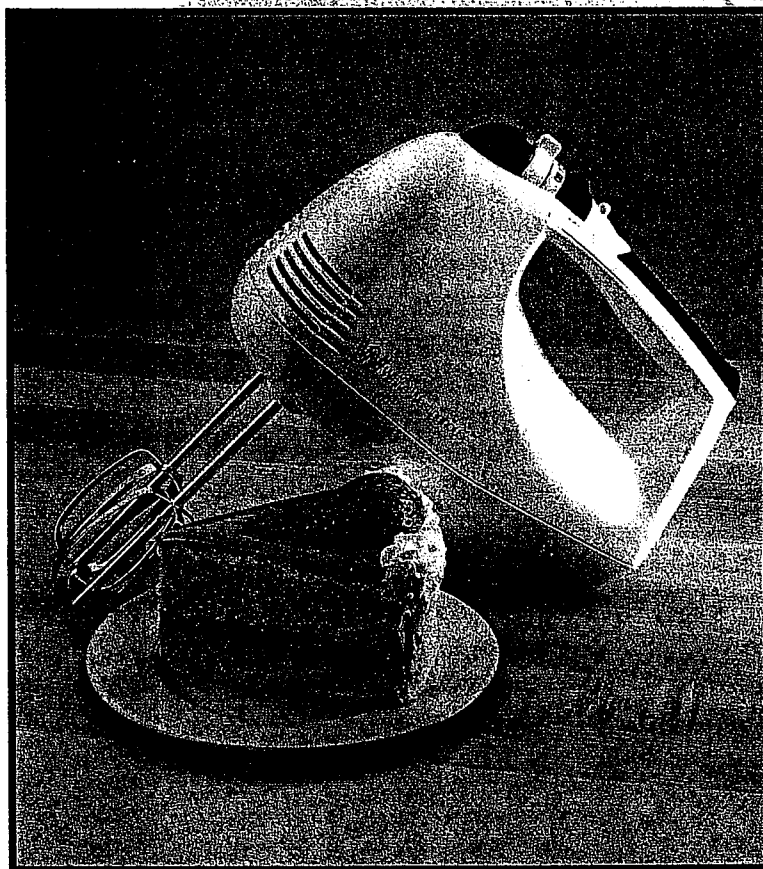 


WV
White-Westinghouse™

Deluxe 10-Speed Hand Mixer with Burst-of- Power

OWNER'S MANUAL

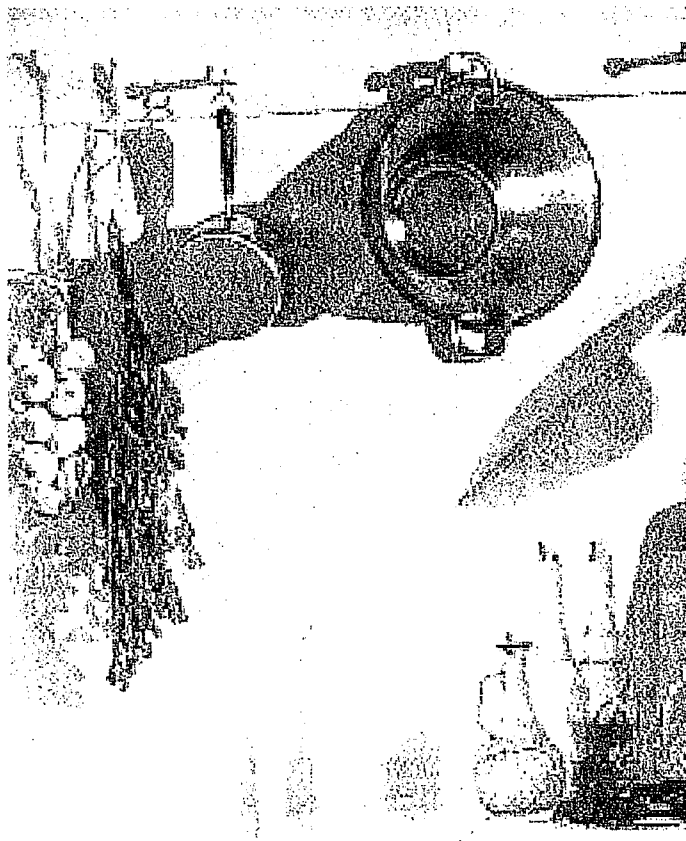

MODEL WWMX10S

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

 
1. Read all instructions.
2. To protect against electrical shock, do not submerge the Mixer or allow AC cord to come in contact with water or other liquids.
3. This appliance should not be used by children, and care should be taken when used near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contact with moving parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.
10. Keep hands and utensils out of container while mixing to prevent the possibility of severe injury to persons or damage to the unit. A scraper may be used, but must be used only when the unit is not running.
11. Remove Beaters or Dough Hooks from Mixer before washing.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

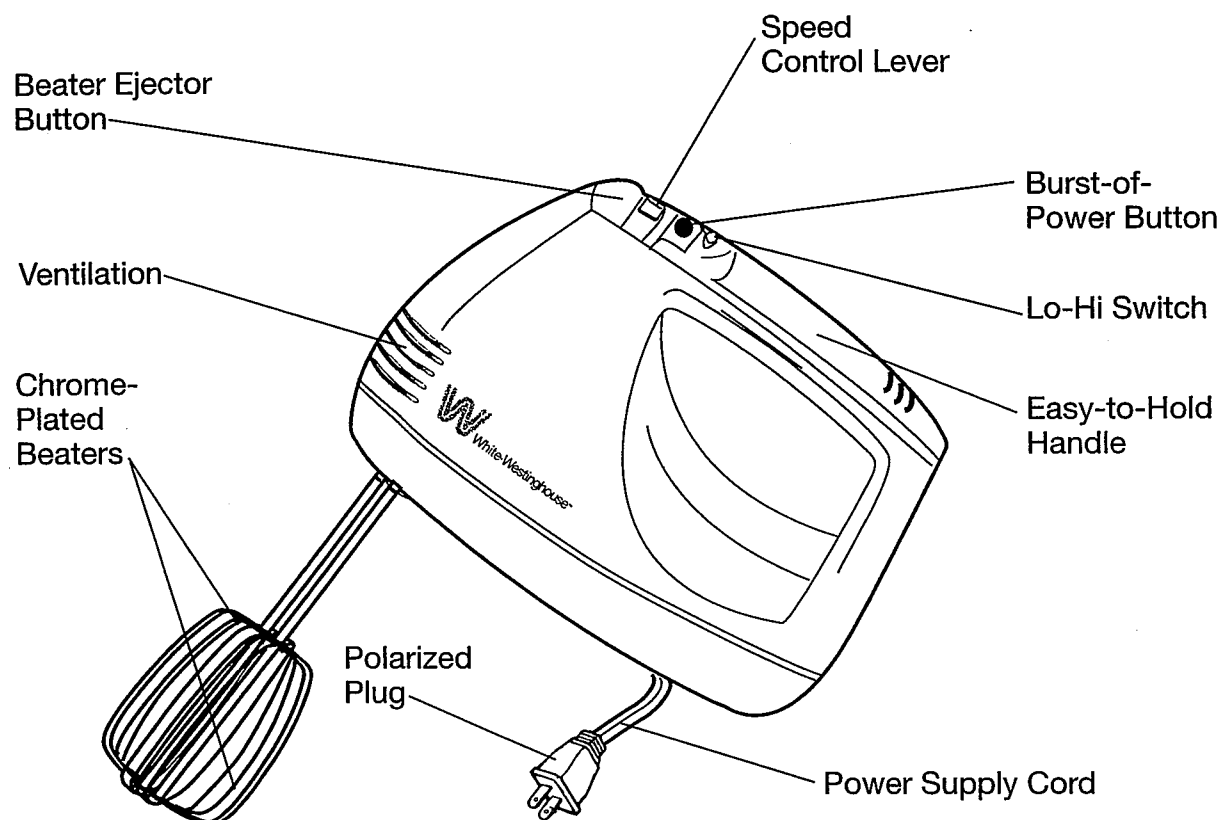

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SHORT CORD INSTRUCTIONS

A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.

Longer extension cords are available and may be used if care is exercised in their use.

If an extension cord is used, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and (2) the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

BEFORE USING YOUR DELUXE HAND MIXER

Carefully unpack Hand Mixer. Wash Beaters and Dough Hooks in warm, soapy water. Rinse well and dry thoroughly. Wipe Mixer with a soft, clean cloth or sponge. Never immerse your Hand Mixer in water or any other liquid.

ATTACHING BEATERS/DOUGH HOOKS

Before handling the Beaters/Dough Hooks, check to be sure the Mixer is unplugged from the electrical outlet and the Speed Control Lever is in the OFF position.

NOTE: One Beater/Dough Hook has a small, metal Washer-ring around the top of the Stem. The Beater/Dough Hook with the Washer-ring is the one you insert into the larger of the two holes in the Mixer.

1. Push the Beater or Dough Hook with the Washer-ring into the larger hole. Rotate the Beater until it locks into position. (See Figure 1.)
2. Push other Beater or Dough Hook (without Washer-ring) into smaller Mixer hole. Rotate the Beater until it locks into position. (See Figure 2.)
3. After installing the Beaters or Dough Hooks, gently pull on each Stem to be sure they are secured properly.

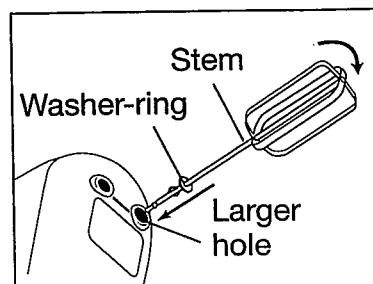 


Figure 1



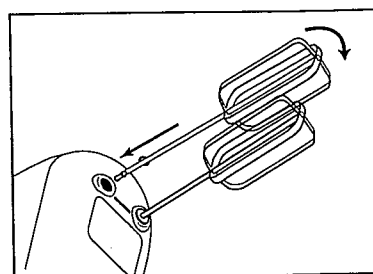 


Figure 2

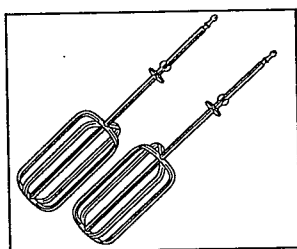 


HEAVY-DUTY BEATERS:

 Designed for all-purpose mixing. Cut through thick or thin batters with ease.

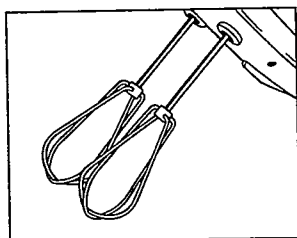

WIRE BEATERS:

 Spindly, thin Wire Beaters are ideal for whisking sauces or whipping light, fluffy ingredients.

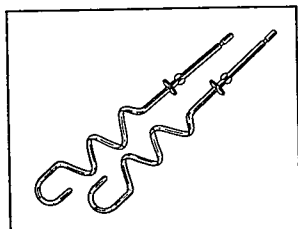

DOUGH HOOKS:

Spiral Dough Hooks are designed to mix or knead heavier batters or bread dough. Hooks may also be used for gently mixing pastry dough.

INSTRUCTIONS FOR USE

1. Make sure the Speed Control Lever is in the OFF position and plug the Power Supply Cord into a standard electrical outlet.
2. Place Beaters directly into container holding ingredients to be mixed.
3. Select the speed setting that matches your mixing task. (See "SPEED SETTINGS" for more information.)
4. After you have finished mixing, turn the Speed Control Lever to OFF and unplug the appliance.
5. Raise the Mixer head and press down on the Beater Ejector Button to eject the Beaters or Dough Hooks.
6. Scrape excess batter off the Beaters using a rubber or plastic spatula. DO NOT strike Beaters on the rim of the bowl.

SPEED SETTINGS

Your Deluxe Hand Mixer has 10 different speed settings. Each setting on the Lo-Hi Switch has 5 speeds/functions. Below is a guide which details each speed setting and its usage. Please note that the Burst-of-Power feature can be used at any speed setting by depressing the Burst-of-Power Button. Resume previously selected speed by releasing Burst-of-Power Button.

NOTE: DO NOT use Burst-of-Power feature for more than 2 minutes at a time as motor may overheat and damage the Mixer.

Speed	Function	Usage
Lo		
1	Fold	Use when you start mixing
2	Stir	For combining liquids with dry ingredients
3	Mix	For mixing batters and dough recipes
4	Blend	For blending sauces/gravies and kneading dough
5	Combine	For combining light mixtures; for fillings/puddings
Hi		
1	Beat	For cake mixes and other light mixtures
2	Cream	To cream ingredients for cookies
3	Mash	For making mashed potatoes
4	Fluff	To whip light, fluffy mixtures
5	Whip	For whipping cream and aerating eggs

USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified personnel if servicing is needed.

TO CLEAN: NEVER IMMERSE MOTOR HOUSING IN WATER.

First, be sure unit is unplugged. Eject Beaters or Dough Hooks from unit and wash normally. The Beaters and Dough Hooks are dishwasher safe. Wipe motor housing with a damp cloth or sponge.

TO STORE: Unplug unit; store in its box in a clean, dry place. Never store it while it is hot or still plugged in. **Never wrap cord tightly around the appliance.** Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

Easy Chocolate Bundt Cake

1 package (12 oz.) chocolate chip morsels
1/2 cup water
2-1/2 cups cake flour
2 teaspoons baking soda
1/2 teaspoon salt
1/2 cup butter or margarine
2 cups sugar
4 eggs
1 cup buttermilk

Melt chocolate in water in a saucepan or microwave oven; allow to cool slightly. Sift flour with baking powder and salt and set aside. Preheat oven to 350°. Grease and flour a 10-inch Bundt pan. Place butter and sugar in a medium mixing bowl. Start blending at a low speed, increasing to a slightly higher speed.

Use Burst-of-Power Button when needed. Adding one egg at a time, blend until the mixture is light and fluffy.

Slowly add chocolate to mixture and continue to beat on a high speed until all the chocolate is blended into the mixture. Add flour mixture, alternating with buttermilk, beginning and ending with flour mixture. Blend at a slow speed just until smooth. Pour batter into pan and bake for 35-40 min. or until a toothpick inserted in center of the cake comes out clean. Cool. Frost with Vanilla or Chocolate Butter Cream Frosting or top with powdered sugar.

Makes: 1 10-inch Bundt cake

Vanilla Butter Cream Frosting

1/2 cup butter or margarine, softened
2 teaspoon vanilla extract
3 cups 10x confectioners sugar
4 Tablespoons cream

Place all ingredients in a large mixing bowl. Starting at the lowest speed, begin incorporating sugar into other ingredients. Gradually increase to a higher speed, and whip until frosting reaches a spreading consistency. Add more sugar if mixture is too thin and more cream if it is too thick.

Makes: 2 cups Frosts: 1 Bundt cake or two 8-inch layers.

Chocolate Butter Cream Frosting

Add 1/3 cup cocoa and increase sugar to 3-1/2 cups.

ONE-YEAR LIMITED WARRANTY

This White-Westinghouse product warranty extends to the original consumer purchaser of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished, or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied, and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a comparable model (at the store's option) when the product is returned to Kmart. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Important Notice

If any parts are missing or defective, return this product to the place of purchase.

Consumer Service

This White-Westinghouse product is distributed by:

SALTON HOUSEWARES
708 SOUTH MISSOURI ST.

MACON, MO 63552

E-mail: White-Westinghouse@saltonusa.com

Any questions or comments can be directed to Salton's address, or call the Consumer Service Department:

1-800-233-9054

Monday-Friday

8 a.m. - 5 p.m. CST

White-Westinghouse trademark used under license.
©1999 White Consolidated Industries, Inc.

Made in China for
Kmart Corporation
Troy, Michigan 48084

Printed in China

P/N 60431