


OWNER'S MANUAL

MODEL NO. SR-200

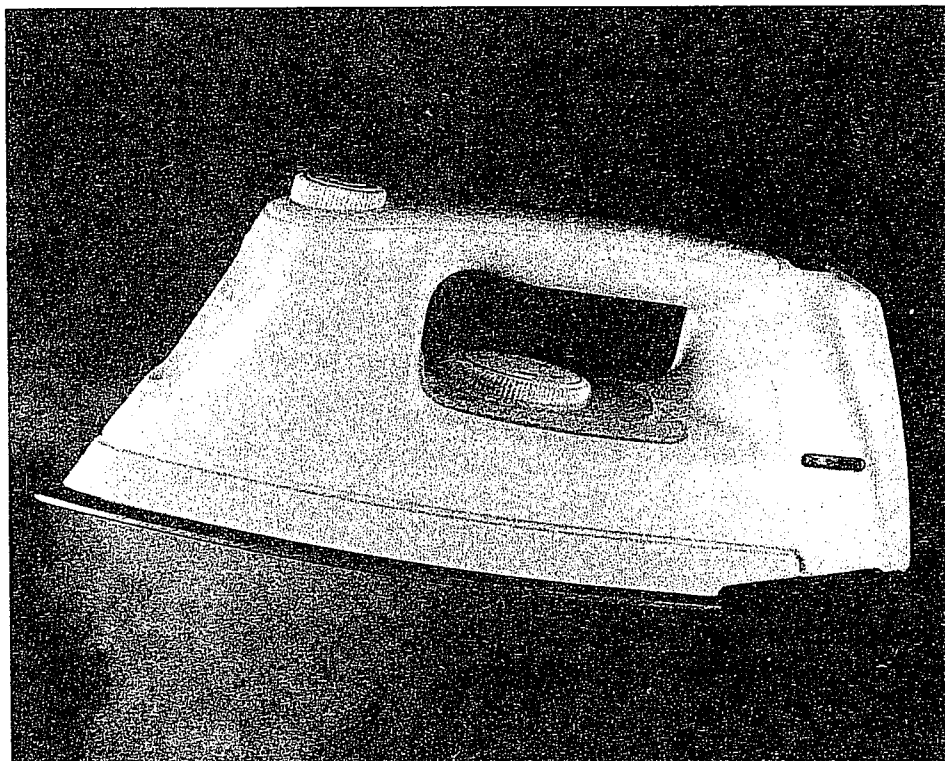

salton®

Get a taste of the good life with Salton

IMPORTANT SAFEGUARDS

When using your flatiron, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Use iron only for its intended use.
3. To protect against a risk of electric shock, do not immerse the iron in water or other liquids.
4. The iron should always be turned to off before plugging or unplugging from outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
5. Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
6. Always disconnect iron from electrical outlet when filling with water or emptying and when not in use.
7. Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron. Return the iron to Salton/Maxim Housewares Inc. for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
8. Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
9. Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down - there may be hot water in the reservoir.
10. If the malfunction indicator goes on, the flatiron is not operating normally. Disconnect from the power supply and have the flatiron serviced by qualified service personnel.

SPECIAL INSTRUCTIONS

1. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a 10-ampere cord should be used. Cords rated for less amperage may over-heat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

SAVE THESE INSTRUCTIONS

Additional Important Precautions


1. Your Salton iron is designed to rest only on the heel rest. Do not rest iron on sole plate.
2. Never use the iron on an unstable surface, or rest on unstable surface.
3. While the iron is hot, never set it on an unprotected surface, even if it is on its heel rest.
4. **WARNING!** TO PREVENT ELECTRIC SHOCK OR OTHER INJURY, before filling the iron with water, make sure that the plug is removed from the outlet; instead, grasp plug and pull to disconnect.
5. **CAUTION:** Never fill the iron with fabric conditioner, starches or any other solution, as these will damage the steam mechanism. Do not use contaminated water.
6. **WARNING!** TO AVOID FIRE, never leave iron unattended while it is plugged in. Your Salton iron comes with the Safety Auto Cut-Out feature. However, this feature is not a substitute for your careful use of the iron.
7. Do not use your Salton iron on hanging drapes or hanging fabric.
8. **WARNING!** TO PREVENT ELECTRIC SHOCK, never immerse the iron in water or other liquid.
9. **WARNING!** TO PREVENT ELECTRIC SHOCK, never use the iron in a location where it can fall or be pulled into water or another liquid. If the iron falls into water or other liquid, unplug it immediately, do not reach into the water or liquid.
10. **WARNING!** TO PREVENT ELECTRIC SHOCK OR OTHER INJURY, Pour water only through the fill opening.
11. **CAUTION:** Never use scouring pads, abrasives or chemical cleaners or solvents to clean your coated sole plate as these will scratch and/or damage the surface.
12. **CAUTION:** Never use abrasives, chemical cleaners or solvents to clean the exterior of your iron, as these will damage the surface.
13. Always store your iron on the heel rest, not on the sole plate. Even the smallest amount of moisture will cause corrosion and staining of the sole plate if the iron is stored face down.
14. **DANGER:** *Never use the iron if it is damaged if dropped, using the iron when it is damaged could create the risks of fire, electric shock, injury or death.*

GETTING TO KNOW YOUR SR-200

Before using your Salton **POWERSTEAM** iron for the first time, remove any adhesive stickers from the sole plate. Make sure that all adhesive is removed by rubbing the sole plate with a damp cloth.

When turned on for the first time, your new iron may give off vapors for up to 10 minutes. This is due to initial heating of the product, and will not reoccur.

Before using for the first time, familiarize yourself with all the parts:

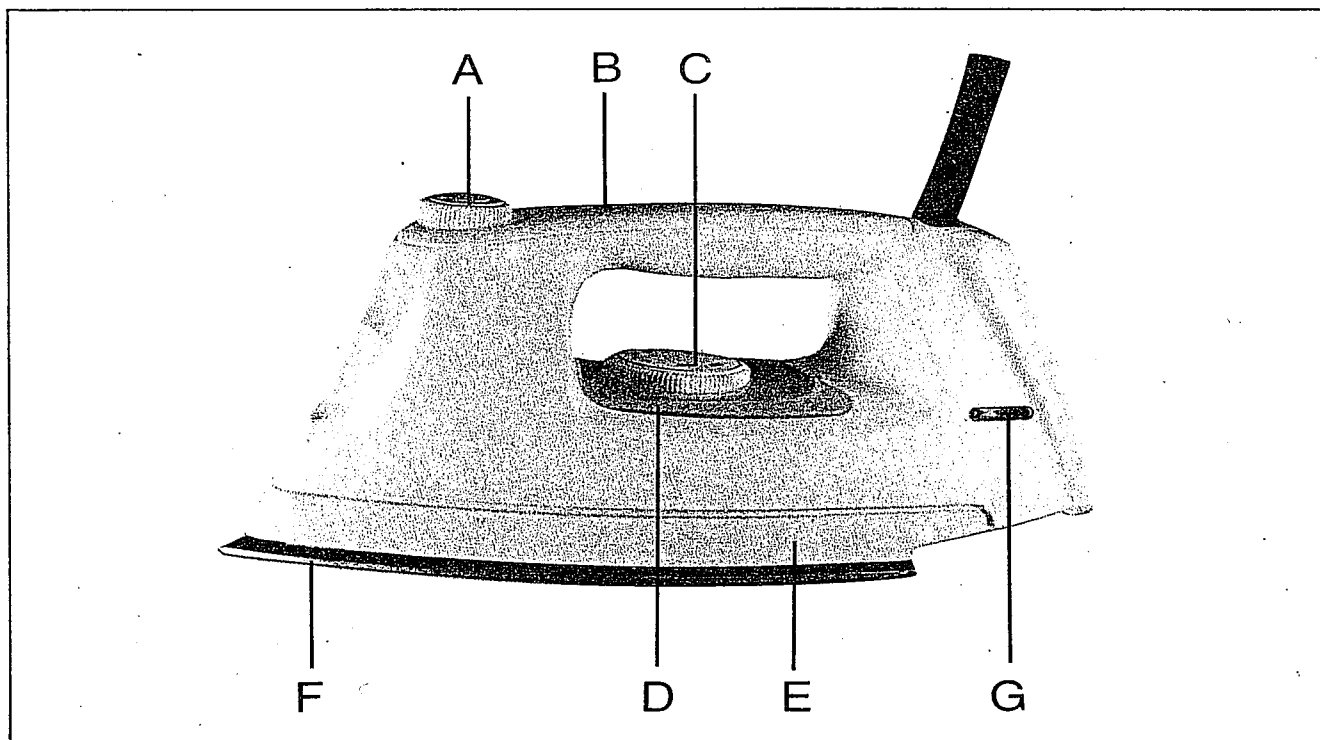

A. Variable steam/dry dial
B. Auto-Shut Off Light
C. Temperature Dial
D. Water Level Window

E. Skirt
F. Soleplate
G. Ready Light

Operating Instruction

1. Plug the cord into a 120V AC electrical outlet.
2. Turn the temperature dial to desired setting. Ready light will be on.
3. While iron is warming to desired temperature, place iron on heel rest on a stable, protected surface.
4. Ready light will go off when desired temperature is reached.

Dry Ironing

1. Plug into electrical outlet.-120V AC
2. Set Temperature Dial for the desired fabric (See Temperature Dial.)
3. Note: Be sure to check the garment label for Fiber content and set for the fabric requiring the lowest temperature. Steam may be used during Drying Pressing providing the Temperature Dial is set within the steam Range COTTON/LINEN. Turn the Variable Steam/Dry Dial counterclockwise to the desired amount of steam.
4. Set iron on Heel Rest and wait until ready light is off. (See Ready Light.)

Steam Ironing

WARNING! *Before filling the iron with water, make sure the plug is removed from the wall socket. After the plug is removed from the wall socket, the iron may be filled while it is hot.*

WARNING! *TO PREVENT THE RISK OF BURNS, use caution when filling iron with water. Burns can occur from touching hot metal parts, hot water or steam.*

1. Turn Temperature Dial to "Min." and Variable Steam/Dry Dial to steam symbol.
2. Place the iron on its heel and using a measuring cup, tip iron slightly and fill Tank through the Fill Opening until the water level reaches the top in the Water Window. Note: Never fill above top and **NEVER FILL WITH ANYTHING BUT WATER.** NOTE: Never fill the iron with fabric conditioner, starches or any other solution, as these will damage the steam mechanism. Do not use contaminated water.
3. Plug the cord into a 120V AC electrical outlet and turn the appliance on.
4. Turn the Temperature Dial clockwise until "●" falls within the steam range-COTTON/LINEN. (See Temperature Dial.)
5. Set iron on Heel Rest and wait until ready light is off. (See Ready Light.)

FEATURES

Temperature Dial...

Allows you to set your iron for the fabric you are ironing. (See Fabric Chart.)

- Turn Temperature Dial clockwise until the "V" mark aligns with the desired temperature setting for the fabric. Note: Be sure to check the garment label for fiber content and set for the fabric requiring the lowest temperature.

Variable Steam/Dry Dial...

To set for dry ironing:

- Turn Variable Steam/Dry dial counter clockwise until the "◇" aligns with the "▲" on the iron handle.

To set for variable amounts of steam:

- The temperature dial must be turned clockwise to the maximum temperature setting before adjusting amount of steam.
- Turn Variable Steam/Dry Dial counter clockwise for desired amount of steam. **NOTE: Be sure to check the garment label for care instructions. Some fabrics may be damaged when exposed to steam or water.**
- Set the temperature Dial within the steam range COTTON/LINEN. If temperature setting is too low, water may drip from soleplate.

Ready Light...

- Temperature Dial is first turned to desired setting and the iron is plugged into a wall outlet, the ready light will come on.
- NOTE: If the desired temperature is lowered from higher temperature wait until the ready light comes back on. This will assure you that the Soleplate has cooled to the new lower temperature.
- The ready light will go out when Soleplate is heating up to the selected temperature, and/or Auto Shut-Off feature is in operation.

To prevent scratching the soleplate, do not allow soleplate to directly contact abrasive objects such as zippers and buttons. Instead, cover the area with a press cloth and then iron.

Ironing Hints

Sort articles to be ironed according to the type of fabric. This will reduce the need to adjust the temperature to suit varying garment.

If you are not sure of the fiber content of a garment, test a small area such as a seam or inside hem section before ironing a visible area. Start with a low temperature and gradually increase the heat to find the best setting

When reducing the temperature to iron sensitive fabrics, please see ready light instructions (pt.3) page no.6

Fabrics such as velour, wool, linen and silk are best ironed with an ironing cloth to prevent shine marks.

IRONING CHART

Fabric	Temperature Setting	Ironing Recommendations
Acrylic	●	Dry iron inside out
Acetate	●	Dry iron inside out while still damp.
Silk	● ●	Iron inside out. Use an ironing cloth to prevent shine marks.
Nylon		Iron inside out while still damp.
Polyester	● ●	Iron inside out while still damp.
Rayon	● ●	Iron inside out.
Visose	● ●	Mainly dry iron. Steam can be used under manufacturer's instructions.
Wool		Steam iron inside out or use an ironing cloth.
Wool Blends	● ●	Steam iron inside out or use an ironing cloth.
Cotton Blends	● ●	Check label and follow manufacturer's instructions. Use setting for the fiber requiring the lowest setting.
Corduroy		Steam iron inside out or using ironing cloth and brush to raise the pile.
Cotton	● ● ●	Dry iron while still damp or use Steam 2.
Linen		Iron inside out or use an ironing cloth to prevent shine marks, especially with dark colors. Dry iron while still damp or use steam.
Denim	● ● ●	Use full Steam.

O Dry Ironing at any setting

Use of Water

Ordinary tap water may be used with this iron. However, in very hard water areas, we recommend the use of distilled water or water that has been demineralized.

CAUTION: *Never fill iron with fabric conditioner, starches or any other solution, as these will damage the steam mechanism. Do not use contaminated water.*

Automatic Shut-Off

Turns off electrical power to the iron if you leave it plugged into an outlet and leave it immobile in the ironing position for more than 30 seconds OR,

leave it resting on heel rest for more than 8 minutes.

The red Auto Shut-Off Light on the handle will come on, the Soleplate will no longer be heated, and the iron must be reactivated.

To resume ironing grasp iron handle:

move iron in rapid ironing motion or rock the iron from heel-to-toe-to-heel. **NOTE: Even if Temperature Dial has been turned to 'Min.' the Auto-Shut-Off feature will still operate as long as iron is still plugged in.**

User Maintenance Instructions

(CARE AND CLEANING)

To extend the life and maintain the performance of your iron follow these steps:

Polarized Plug

This appliance has a **polarized plug** (one blade is wider than the other), as a safety feature. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

Draining and Storing Iron

1. Turn Temperature Dial to 'Min.' and unplug the iron from the outlet.
2. With Soleplate facing away from you, carefully turn iron upside down over sink to empty water. **CAUTION: Water from tank may be hot.** Avoid contact with water and steam.
3. Once all the water has been drained, store the hot iron on its Heel Rest so that any remaining moisture will evaporate.
4. When Soleplate is completely cool, wrap the electrical cord around the cord wrap section of the iron body.

LIMITED WARRANTY

Products distributed by Salton/MAXIM Housewares, Inc. are warranted for one year from date of purchase against defects in workmanship and material. During that period these defects will be repaired or the product will be replaced at Salton/MAXIM's options, without charge. This warranty covers normal consumer usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, neglect, installation, commercial use or improper maintenance. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton/MAXIM Housewares, Inc., or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible. This warranty does not cover damage which results from unauthorized repairs.

Service and Repair

Do not attempt to repair your SALTON IRON. Attempts to repair this appliance yourself may render it dangerous to use. Should the appliance malfunction, you should first call toll free 1-800-233-9054 between the hours of 9:00 am and 5:00 pm. Central Standard Time and ask for CONSUMER CUSTOMER SERVICE stating that you are a consumer with a problem. If the problem cannot be resolved, you will be asked to return the appliance to the factory for repair. Under no circumstances should you attempt to open the housing and repair the appliance. Should you do this, your warranty will be voided.

To Return for Service

1. Securely package and return the products, PREPAID to: Salton/MAXIM Housewares, Inc., Repair Department. 550 Business Center Drive, Mt. Prospect, IL 60056
Be sure to enclose:
 2. a. Your name, address and phone number.
 - b. The date of purchase (or receipt as a gift.)
 - c. An explanation of the malfunction or reason for return.
 - d. Eight dollars (\$8.00) Check or Money Order payable to Salton/MAXIM Housewares, Inc., for return postage and handling.
 - e. To insure prompt "In-Warranty" service be sure to include proof of date of purchase. We recommend you take the necessary precaution of insuring the parcel.
3. Toll Free Number: 1-800-233-9054