


OWNER'S MANUAL  
MODEL No. MW-3C

**Commuter Hot Spot**<sup>TM</sup>  
HOT COFFEE ON THE ROAD

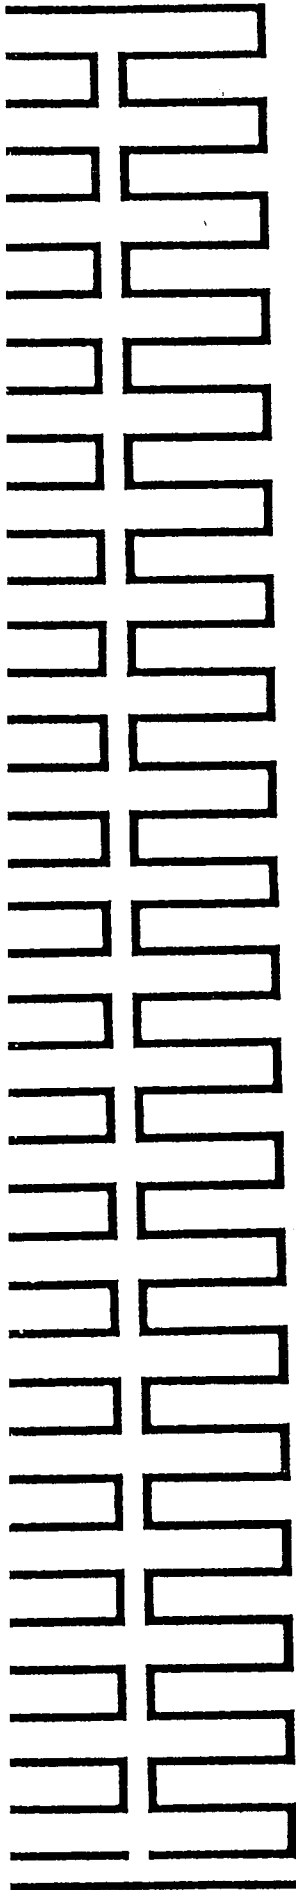

**salton**<sup>TM</sup>



*Get a taste of the good life with Salton.*

# IMPORTANT SAFEGUARDS

When using your Commuter Hot Spot™ or any electrical appliance, these basic safety precautions should be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Handle by plastic sides only.
3. To protect against electrical hazard, do not immerse cord, plug, or base unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet and allow to cool before cleaning.
6. Do not operate appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return appliance to Salton Housewares, Inc. for examination or repair.
7. The use of accessories or attachments not recommended by Salton Housewares, Inc. may cause fire, electric shock, or injury.
8. Do not let cord hang over edge of table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not move appliance when supporting a container of hot liquids.
11. To disconnect, slide switch to "off," then remove the plug from car cigarette socket.
12. Do not use appliance for other than intended use.
13. To reduce the risk of injury, DO NOT drape cord over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.
- 13a. To avoid depleting your vehicle's battery, disconnect your Commuter Hot Spot™ when your vehicle's engine is not running.
- 13b. Use your Commuter Hot Spot™ beverage set safely!
14. Please remember that operating a motor vehicle calls for your full attention and concentration. Fill, empty and adjust your Commuter Hot Spot™ only when you are stopped. Do not take your eyes off the road while drinking. If traffic laws or ordinances in your area place restrictions on eating or drinking while driving, please use your Commuter Hot Spot™ in accordance with applicable law.
15. Use caution when drinking hot beverages to protect against burns and scalding.

## SAVE THESE INSTRUCTIONS

# Instructions For Use

Connect the plug into the cigarette/accessory outlet socket (12 volt, D.C. only).

The Salton Commuter Hot Spot™ has a switch to turn the unit on and off. When the unit is "ON" the light indicator will be lit. Slide the switch to "OFF" position when not in use.

Use the provided cup with no spill sip-lid with your Commuter Hot Spot™. Not intended for use with plastic or styrofoam cups.

To lift the cup for drinking, turn handle of cup in clockwise direction. To lock the cup, return cup to warmer and turn in counter-clockwise direction.

# Instructions For Mounting

Select a suitable flat surface in your vehicle. Make sure that the surface is clean and dry.

Stick one side of the Velcro tape (either hook or loop side) to the bottom of the warmer; and the other side to the selected flat surface.

If a flat surface is not available in your vehicle, use the supplied metal bracket to secure your Commuter Hot Spot™.

There are two methods of mounting the bracket.

1. The first is to stick one side of the Velcro tape to the bracket, and the other to the selected surface in your vehicle.
2. The second method is to use the provided screws to mount the bracket.

After the bracket is mounted to the selected surface in your vehicle, it should be bent in either direction so that your Commuter Hot Spot™ will be in a horizontal position.

# Care and Cleaning

Salton's Commuter Hot Spot™ requires very little care and cleaning. Periodically, wipe the surface of the unit off (Be sure unit is cold and disconnected) with a soft damp cloth or sponge. **Do not use automotive or abrasive cleansers on this product.**

## LIMITED WARRANTY

Machines distributed by Salton Housewares, Inc. are warranted for one year from date of purchase against defects in workmanship and material. During that period these defects will be repaired or the product will be replaced at Salton's option, without charge. This warranty covers normal consumer usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, neglect, installation, commercial use or improper maintenance. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton Housewares, Inc., or to units which have been altered or modified without authorization of Salton Housewares, Inc., or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

## Service and Repair

DO NOT attempt to repair your SALTON MW-3C Commuter Hot Spot.™ Should the appliance malfunction, you should first call toll free 1-800-233-9054 between the hours of 9 am and 5:00 pm Central Standard Time and ask for CONSUMER CUSTOMER SERVICE stating that you are a consumer with a problem. If the problem cannot be resolved, you will be asked to return the machine to the factory for repair. Under no circumstances should you attempt to open the housing and repair the machine. Should you do this, your warranty will be voided.

## To Return for Service


Securely package and return the product, PREPAID to: Salton Housewares, Inc., Repair Department, 550 Business Center Drive, Mt. Prospect, IL 60056

Be sure to enclose:

- Your name, address and phone number.
- The date of purchase (or receipt as a gift).
- An explanation of the malfunction or reason for return.
- Six dollars (\$6.00) Check or Money Order payable to Salton Housewares, Inc. for return postage and handling.
- To insure prompt "In-Warranty" service, be sure to include proof of date of purchase.

We recommend you take the necessary precaution of insuring the parcel.

Toll Free Number: 1-800-233-9054.

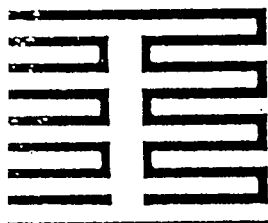

**salton™**