 


RELAXOR[®]

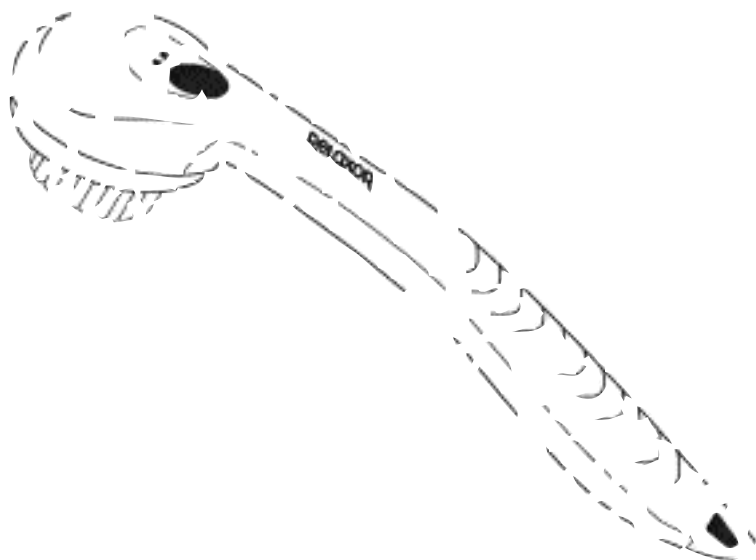

Massaging Bath Brush

OWNER'S MANUAL &
OPERATING INSTRUCTIONS

Model BB8P

SPA THERAPY™

IMPORTANT SAFEGUARDS

When using your Massaging Bath Brush, especially when children are present, basic safety precautions should always be followed, including the following.

READ ALL INSTRUCTIONS BEFORE USING

 
- 1. If you are under a physician's care and/or have a condition requiring the use of a medical device, please contact your health care provider prior to using this product.*
- 2. Close supervision is necessary when this appliance is used by, on or near children, invalids or disabled persons.*
- 3. Do not use Attachments other than those provided by the manufacturer.*
- 4. Do not use your Massaging Bath Brush for any purpose other than those described in these instructions.*
- 5. Do not expose your Massaging Bath Brush to extreme temperatures, such as found near a hot radiator, stove or in a car parked in direct sunlight.*

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

ADDITIONAL IMPORTANT SAFEGUARDS

- 1. Do not use the Massaging Bath Brush on areas affected by skin infections, varicose veins, poor circulation, acute rheumatoid arthritis, acute inflammation, open wounds, sores, fractures or recent sprains/injuries (within 3 weeks of their occurrence).*
- 2. Keep the Massaging Bath Brush away from throat, eyes, eyelids, lips and other sensitive areas.*
- 3. As your Massaging Bath Brush will be in prolonged and intimate contact with your body, it should not be shared with anyone else.*
- 4. Do not submerge in water.*
- 5. Do not replace the batteries when the Massaging Bath Brush is wet.*

**Congratulations on owning the Relaxor®
Massaging Bath Brush, a unique development in the field of
massage and the latest in a long line of personal care products
brought to you by Relaxor.®**

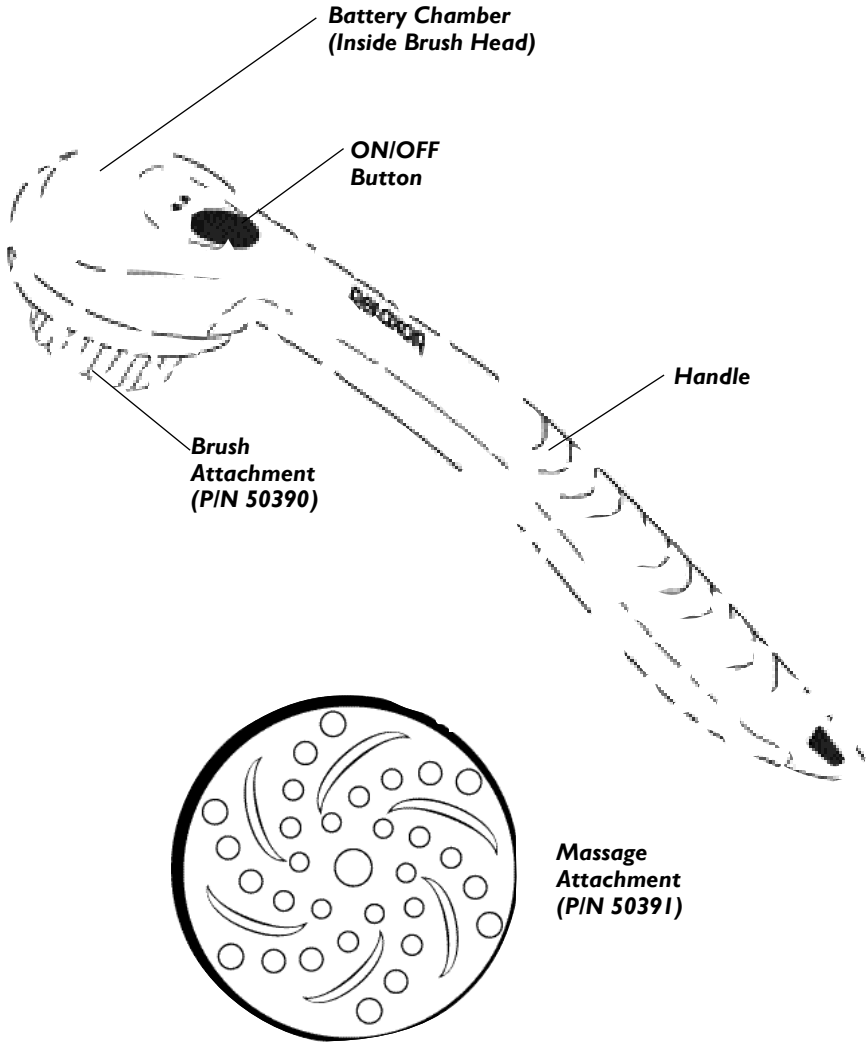

INSTALLING BATTERIES

 
1. To insert batteries, first remove Brush Head or Massage Head Attachment by twisting it counter-clockwise.
2. Open the Battery Chamber by twisting the Handle on the Battery Chamber counter-clockwise until the open padlock symbol is lined up with the Center Mark.
3. Lift the Cover off the Battery Chamber.
4. Insert two AA batteries into Battery Chamber. Refer to the + and - signs inside Battery Chamber for correct battery placement.

Do not mix old and new batteries.

Do not mix alkaline, standard or rechargeable batteries.

5. Replace Battery Chamber Cover and twist it clockwise until the closed padlock symbol is lined up with the Center Mark.

Battery Chamber Cover (PIN 50392)

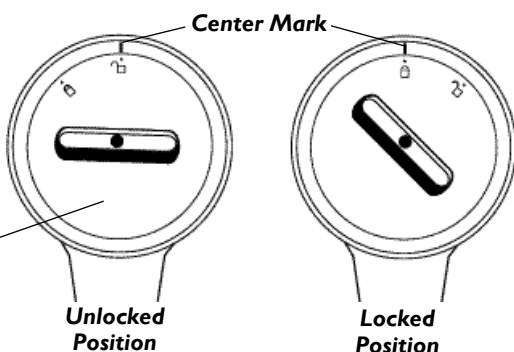

BATTERY CAUTIONS & DISPOSAL

1. To avoid leakage, check the batteries often for deterioration, remove exhausted batteries, and remove the batteries if the Massaging Bath Brush is not used for a long time.
2. Discard leaky batteries immediately. Leaking batteries can cause skin burns and other personal injuries.
3. Dispose of batteries in compliance with your national or local regulations for environmental protection and recycling of raw materials.
4. Do not dispose of batteries by burning or incineration.
5. Do not attempt to recharge the batteries unless they are clearly marked as rechargeable.

INSTRUCTIONS FOR USE

SELECT ATTACHMENT

This unit comes with two Attachments, the Brush Attachment and the Massage Attachment. Attachments can be removed by unscrewing them in a counter-clockwise direction. To secure Attachments, place selected Attachment on Brush Head and twist clockwise until it is firmly in place.

BRUSH ATTACHMENT

The Brush Attachment can be used to clean and massage your body. It can be used in a shower or tub to provide maximum relaxation and thorough cleaning.

- 1. Be sure the Brush Attachment is securely twisted into place.*
- 2. Turn the unit ON by pressing the ON/OFF Button. Run the Brush over a bar of soap, or squeeze your favorite shower gel onto the Brush and cleanse yourself.*
- 3. When finished, press the ON/OFF Button a second time to deactivate.*
- 4. To rinse out the Brush, simply run it under water and rub the bristles gently.*

Allow the Brush to air dry when you have finished using it.

MASSAGE ATTACHMENT

The Massage Attachment provides a concentrated, deep massage. It gives a stimulating, refreshing massage anytime, anywhere; after a shower, after exercise or after a long day at work.

- 1. Be sure the Massage Attachment is securely twisted into place.*
- 2. Turn the unit ON by pressing the ON/OFF Button.*
- 3. Move the Massage Attachment over your sore muscles, massaging gently.*
- 4. When finished, press the ON/OFF Button a second time to deactivate.*

MAINTENANCE AND CLEANING

This unit has no user serviceable parts. If the unit is damaged, refer to a qualified repair technician or our consumer service department.

CLEANING

Use a damp cloth or sponge to wipe the exterior of the Massaging Bath Brush.

Never use abrasive cleaners, as they may scratch the surface.

Clean Attachments in warm, soapy water and dry thoroughly.

STORAGE

Store unit in its box or in a clean, dry place.

LIMITED ONE YEAR WARRANTY

Warranty: This Relaxor® product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

Warranty Coverage: This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Implied Warranties: ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair: Should the appliance malfunction, you should first call toll-free 1 (800) 233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number BB8P when you call.

In-Warranty Service (USA): For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization 1 (800) 233-9054.

Out-of Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$6.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

For Products Purchased in the USA, but Used in Canada: You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

Risk During Shipment: We cannot assume responsibility for loss or damage during incoming shipment.

For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

To return the appliance, ship to:

ATTN: Repair Center
Salton, Inc.
708 South Missouri Street
Macon, MO 63552

To contact us, please write to, call, or email:

Salton, Inc.
P.O. Box 1637
Columbia, MO 65205-1637
1-800-233-9054
E-mail: Salton@Saltonusa.com

Limitation of Remedies: No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and in no event shall Salton be liable for any incidental or consequential damages, losses or expenses. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Legal Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For more information on Salton products: visit our website: www.salton-maxim.com

©2002 Salton, Inc. All rights reserved.

Made in China

P/N 61068

05/02