 


OWNER'S MANUAL

Model CM-4

A U T O M A T I C

Coffee Mill

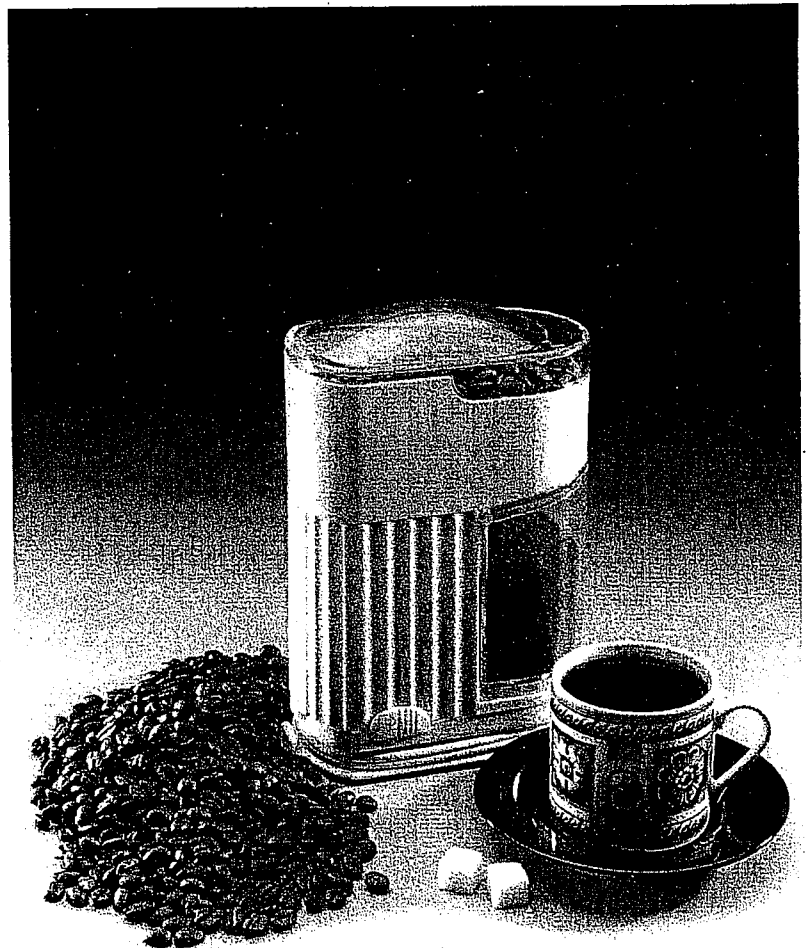

salton[®]

Get a taste of the good life with Salton.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1.** Read all instructions carefully.
- 2.** To protect against risk of electrical shock, do not immerse the appliance in water or other liquid.
- 3.** Close supervision is necessary when any appliance is used by or near children.
- 4.** Unplug from electrical outlet when not in use, before putting on or taking off parts, and before cleaning.
- 5.** Avoid contacting moving parts.
- 6.** Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to Salton/MAXIM Housewares, Inc. for examination, repair, electrical or mechanical adjustment.
- 7.** The use of attachments not recommended or sold by Salton/MAXIM may cause fire, electrical shock, or injury.
- 8.** Do not use outdoors.
- 9.** Do not let cord hang over edge of table or counter or touch hot surfaces.
- 10.** Check bean chamber for presence of foreign objects before using.
- 11.** Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS

This appliance is for household use only.

Additional Important Instructions

1. If this appliance falls or accidentally becomes immersed in water, unplug it immediately. **Do not reach into the water!** Do not use this appliance after it has fallen into or becomes immersed in water. Return it to the Salton/MAXIM Service Center for examination, repair or adjustment.
2. To reduce the risk of injury to persons or property, never use this appliance in an unstable position. Make sure that the lid, removable storage chamber, and the grinding wheel are **securely** assembled into the appliance before use.
3. This appliance should not be operated or cleaned by children. Keep this appliance out of the reach of children.
4. This appliance should be plugged into a 120V AC electrical outlet only.
5. Always check the bean chamber for the presence of foreign objects before using.
6. Only coffee beans should be placed into the bean chamber.
7. **WARNING!** *To avoid serious injury, never place fingers or objects through the receptacle at the bottom of the bean chamber or through the spout through which ground coffee is emptied into the storage chamber.*
8. **READ THIS ENTIRE OWNER'S MANUAL BEFORE CLEANING OR OPERATING THIS APPLIANCE!**

 
Short Cord Instructions

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

If a longer detachable power-supply cord or extension cord is used, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and (2) the cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

Description of Parts

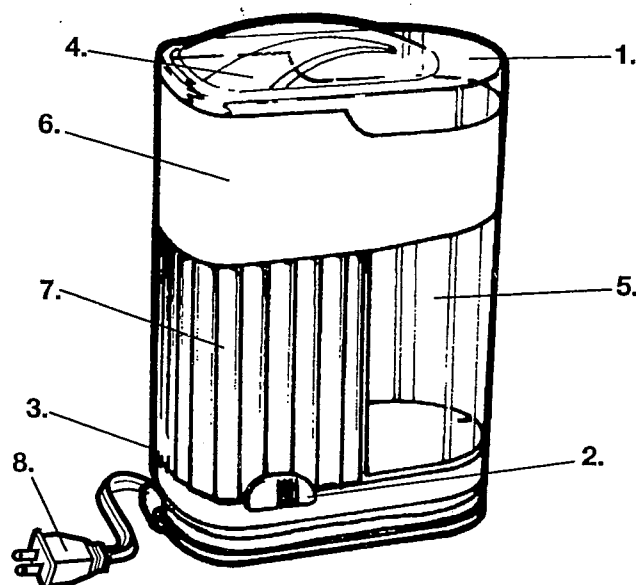

1. Lid
2. On/Off Switch
3. Fineness Selector
4. Bean Chamber
5. Removable Storage Chamber with Lid
6. Grinding Wheel
7. Housing Unit
8. Cord Set with Plug

Before Using for the First Time

Before using your Salton® **Coffee Mill** for the first time, make sure it is unplugged. Then wipe the storage chamber, the lid and bean chamber with a damp cloth. Allow to dry completely before using.

CAUTION: THE LID AND STORAGE CHAMBER ARE NOT DISHWASHER SAFE.

WARNING! TO AVOID ELECTRIC SHOCK, NEVER IMMERSE THIS APPLIANCE IN WATER OR IN ANY OTHER LIQUID.

Fine Adjustment

The desired degree of grinding — course, medium, fine — can be altered by adjusting the rotary switch on the side of the unit.



Instructions for Use

1. Remove lid, make sure the bean chamber is empty and clean.
2. Put the coffee beans into the bean chamber on top of the unit and replace the lid. The bean chamber will hold 4 oz. of coffee beans which is approximately the amount for 18 cups of coffee.
3. Plug the cord into a 120V AC electrical outlet.

Instructions for Use *(continued)*

4. Place the storage chamber with the cover in position into the unit and make sure it snaps in securely.
5. Set fineness selector switch for the desired fineness/coarseness.
6. Push the on/off switch to start the coffee mill.
7. The grinder will grind the desired amount of coffee and will then switch off automatically when the on/off switch is released.

CAUTION: *The motor should not be left switched on for longer than 1 minute without interruption.*

8. Remove the storage chamber.
9. Unplug the appliance.

 
User Maintenance Instructions

1. Before cleaning, unplug the appliance from electrical outlet.
2. Wash the lid and storage chamber in warm, soapy water. Rinse and dry.

CAUTION: *THE LID AND STORAGE CHAMBER ARE NOT DISHWASHER SAFE.*

WARNING! *TO AVOID ELECTRIC SHOCK, NEVER IMMERSE THIS APPLIANCE IN WATER OR IN ANY OTHER LIQUID.*

3. Remove the plug from the socket. Unlock the grinding wheel by turning the wheel in the direction of the arrow. Remove carefully. Clean the bean chamber with a brush to remove any residual coffee. ***Make sure to lock the grinding wheel again before using the coffee mill the next time.***

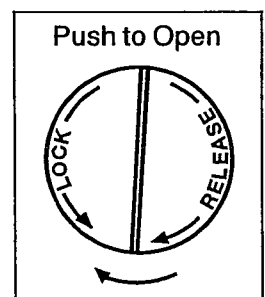

GRINDING WHEEL
Unlock and remove
to clean.

4. The motor base may be wiped with a damp cloth.
5. **THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.**
6. There are no user serviceable parts inside the **Coffee Mill**. Never attempt to repair the **Coffee Mill** yourself. See additional instructions in "Service and Repair" section.

IMPORTANT NOTICE

If any parts are missing or defective **DO NOT** return this product.

Please call our Customer Service Department for assistance.

800-233-9054

Monday - Friday
9am - 5pm CST

Thank You

Polarized Plug :

If this appliance has a polarized plug (one blade is wider than the other) , to reduce the risk of electric shock . This plug is intended to fit in a polarized outlet only one way. If the plug does not fully fit into the outlet , reverse the plug . If it still does not fit , contact a qualified electrician . Do not attempt to modify the plug in any way .

ONE-YEAR LIMITED WARRANTY

This Salton/MAXIM product warranty extends to the original consumer purchaser of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton/MAXIM Housewares, Inc., or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for Salton/MAXIM Housewares, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at Salton/MAXIM's option) when the product is returned to the Salton/MAXIM facility. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair

Should the appliance malfunction, you should first call toll-free 1-800-233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER CUSTOMER SERVICE stating that you are a consumer with a problem.

In-Warranty Service: For an appliance covered under the warranty period, no charge is made for service or postage. Call for pre-paid return mailing label. (U.S. Customers Only)

Out-of Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$6.00 for return shipping and handling.

Salton/MAXIM cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem; your full return address and daytime phone number; a note describing the problem you experienced; a **copy of your sales receipt or other proof of purchase** to determine warranty status. C.O.D. shipments cannot be accepted.

Return the appliance to:

ATTN: Repair Department
Salton/Maxim Housewares, Inc.
550 Business Center Drive
Mt. Prospect, Illinois 60056