 


Model No. MMHB1G

glamour™

 
BONNET DRYER
WITH REMOTE CONTROL

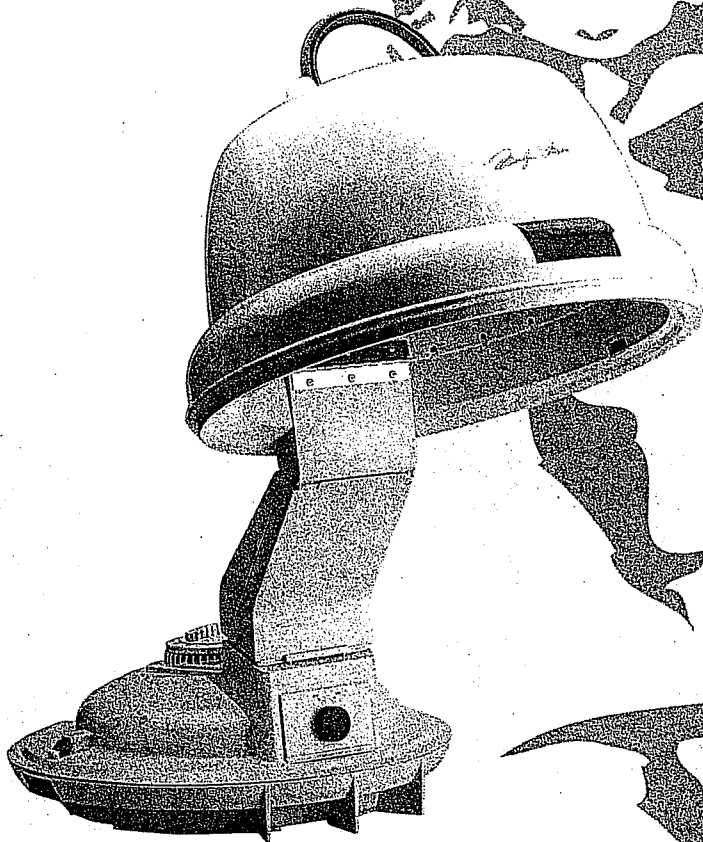

salton®

The Archives of
Milton H. Greene, L.L.C.

Burlyn Morse™

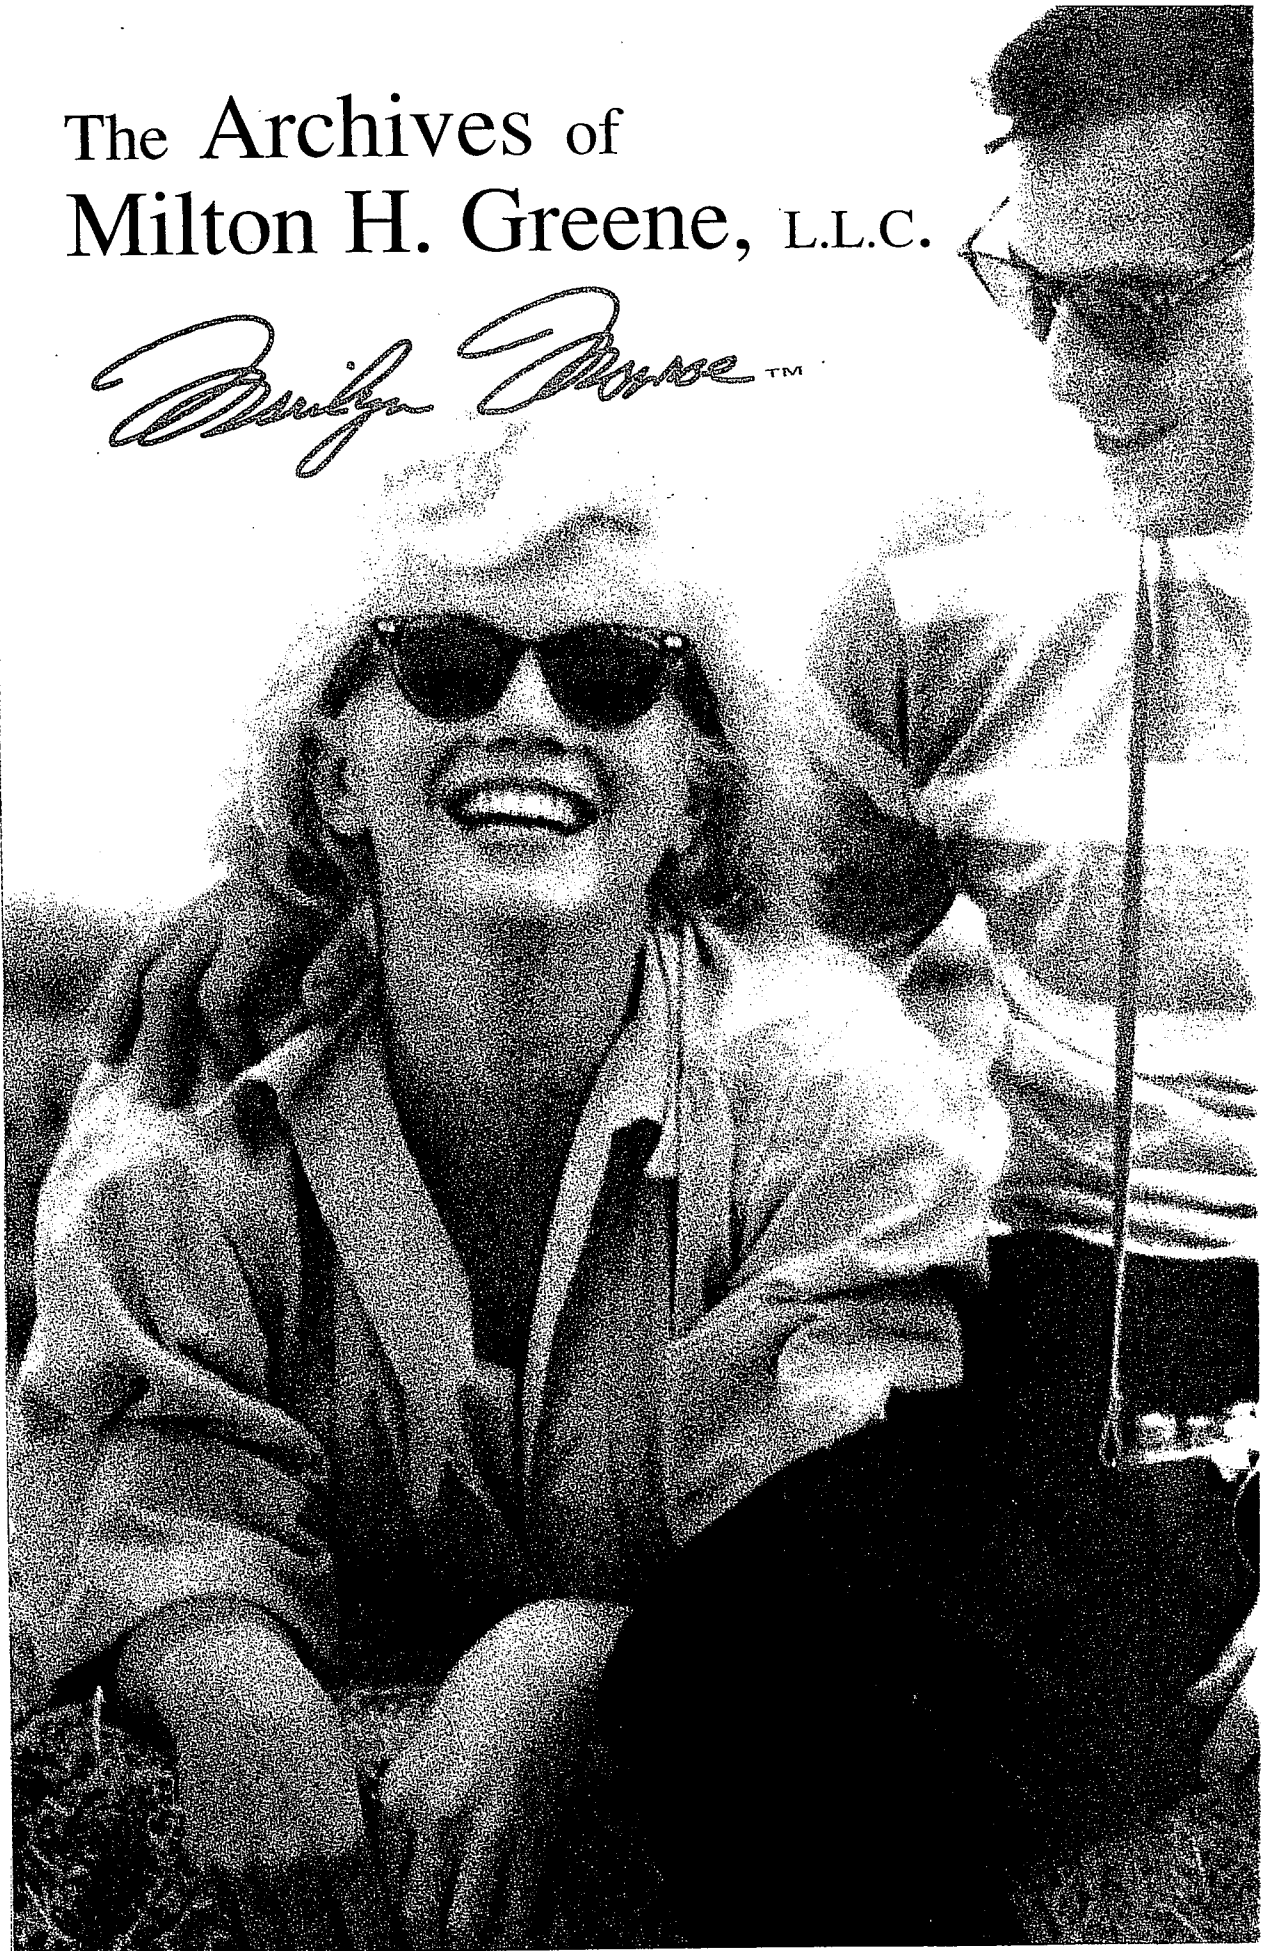



Marilyn Monroe stands as one of the 20th century's most enduring images, an icon reborn, it seems, with each new generation. The man who best understood and captured - some say invented - this phenomenon was her friend and partner, the late Milton H. Greene.

It was Greene's unique personal friendship and business relationship with Marilyn Monroe that allowed the extraordinary photographs, recording her moods, beauty, talent and spirit, for which he is most widely remembered. The Monroe collection contains more than 2,000 never before seen photographs of the screen legend.

Greene's remarkable portraits of our most beloved artists, musicians, and personalities are legendary. Some of his subjects are Marlene Dietrich, Frank Sinatra, Judy Garland, Sammy Davis Jr., Ava Gardner, Cary Grant, Bette Davis, Tony Curtis, Paul Newman, Steve McQueen, Audrey Hepburn, Gene Kelly and Sophia Loren.

In a return to an era of lost elegance, The Archives, headed by Milton's eldest son Joshua, is preserving the vision and timeless works of the celebrated photographer. The Archives is dedicated to the restoration, license and sale of an unprecedented wealth of fine photography for use in traditional and interactive marketing, mass media, merchandising, exhibition and private collections.

The Archives, working in conjunction with Salton®, specifically restored and made available the Monroe images used in the packaging of these products.

We invite you to visit our website at www.archivesmhg.com or feel free to contact us.

The Archives of
Milton H. Greene, LLC
278 Maple Street Suite E
Florence, OR 97439
541-997-4970 fax: 541-997-5795

IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER.

DANGER: *As with most electrical appliances, electrical parts are electrically live even when the switch is off.*

WARNING: *To reduce the risk of death by electrical shock:*

1. Always unplug the appliance immediately after each use.
2. Do not use while bathing.
3. Do not place or store the appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or any other liquid.
5. If the appliance falls into water, unplug it immediately. Do not reach into the water.

IMPORTANT SAFEGUARDS (cont.)

WARNING: *To reduce the risk of burns, electrocution, fire or injury to persons:*

1. Do not leave appliance unattended while it is operating or plugged in.
2. Close supervision is necessary when this appliance is being used by or near children or invalids.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged plug or cord, if it is not working properly, if it has been dropped or damaged in any manner, or dropped into water. Take appliance to nearest service facility for examination and repair, or mechanical adjustment.
5. Keep the cord away from hot or heated surfaces. Do not wrap the cord around the appliance.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed, pillow or couch, where the air openings may be blocked. Keep air openings free of lint, dust, hair, etc.
7. Never use while drowsy.
8. Never drop or insert any object into any opening.
9. Do not use outdoors or operate where aerosol (spray) products are being used. Do not operate where oxygen is being administered.
10. Do not use an extension cord with this appliance.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

ADDITIONAL SAFEGUARDS:

Never block the Air Intake Grill, as this could cause the Dryer to overheat. If the Dryer should overheat, a built-in safety system will operate and the unit will begin to blow cool air. Turn the Power Switch to the OFF position and clear away the obstruction from the Air Intake Grill. Wait 10 minutes before trying to operate the Dryer again. If the Dryer fails to operate again, it may indicate that it has extensive internal damage. Do not try to repair the Dryer yourself. Take it to an electrical service facility.

 
NOTE: The Dryer is made with a protective coating around the heating coils. During the first few minutes of initial use, the Dryer may begin to smoke. This is normal and represents no danger. Allow the Dryer to continue working until the smoke dissipates. This should last approximately 30 seconds.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

GETTING TO KNOW YOUR Salton *Bonnet Dryer* *with Remote Control*

Before attempting to use your Salton Bonnet Dryer, you should become familiar with all of the parts. Read all of the instructions and safeguards carefully.

Identify all parts of your Salton Bonnet Dryer according to the drawing below, so that you have no doubts when reading the instructions that follow.

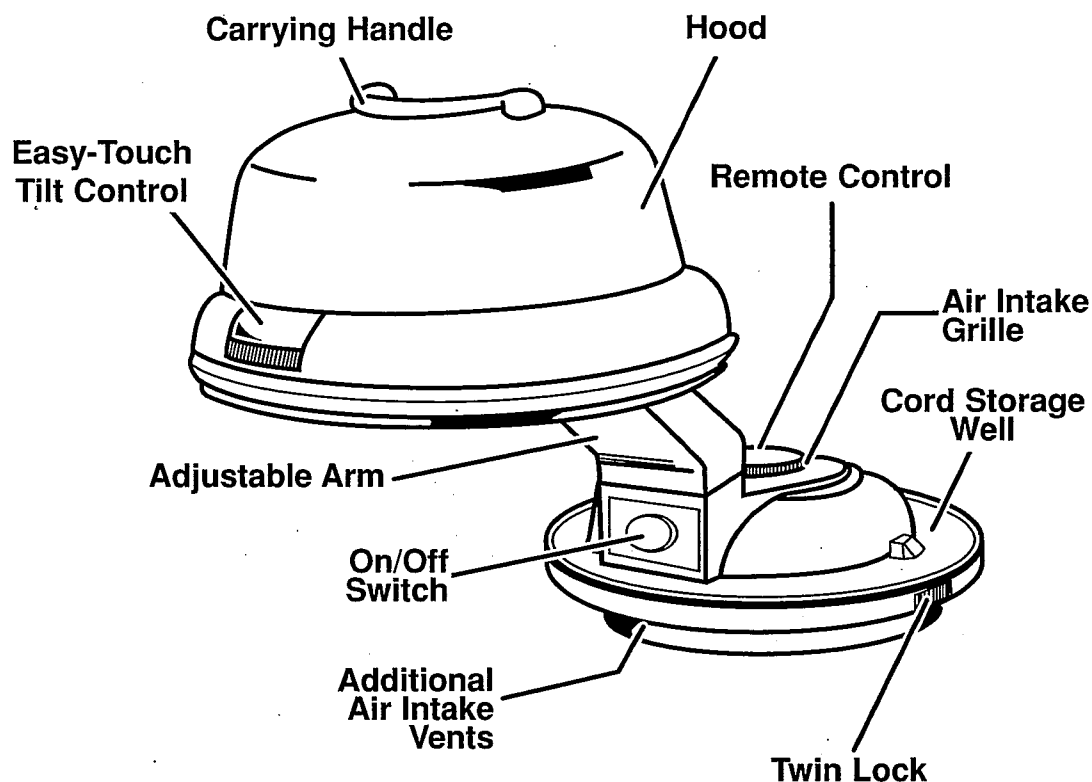

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug fits into a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

INSTRUCTIONS FOR USE

1. Place the Dryer on a hard, smooth surface.
2. Push the Twin Locks, located on either side of the Dryer Base, at the same time and lift the Hood straight up and out forward (Fig. 1).

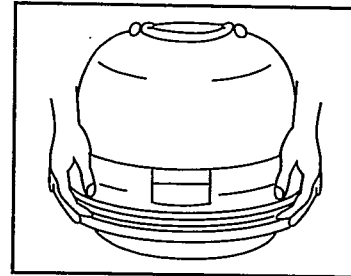 


Figure 1

3. Place one hand on the Dryer Base for support, and with the thumb of your other hand, press the Tilt Control Button. With the Tilt Control Button pressed, pull the Hood forward until it locks into place (Fig. 2).

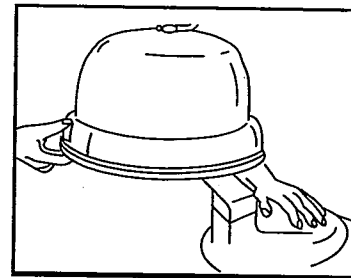 


Figure 2

4. To adjust the Hood to the most comfortable position, place one hand on the Adjustable Arm near the Dryer Base and the other hand on the Adjustable Arm near the Hood and pull up gently until it is in desired position (Fig. 3).

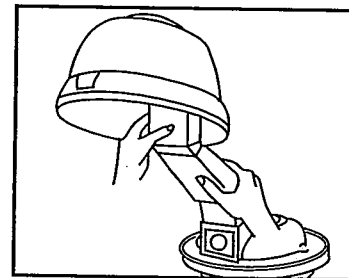 


Figure 3

INSTRUCTIONS FOR USE

(cont.)

5. With the Power Switch in OFF position, plug the Dryer into an electrical outlet.

6. To make it easier to sit down under the Hood, press the Tilt Control Button and tilt the Hood upward (Fig. 4). Leaving the Hood in a high tilted position allows you to watch TV, read or talk with others more freely. Or, you may fully lower the Hood by pressing the Tilt Control Button and gently pulling the Hood down to the preferred position.

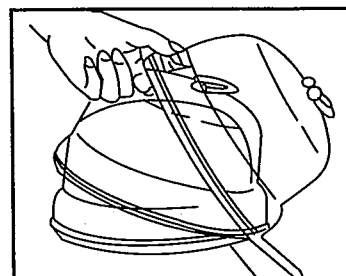 


Figure 4

7. Use the MAX setting for very wet hair. Reduce the heat to a lower setting as hair dries.

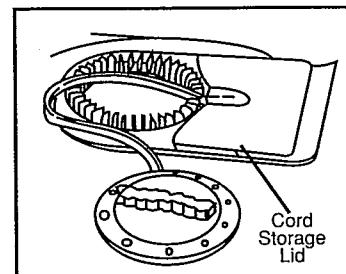 


Figure 5

8. To extend the life of the Dryer, it is advisable to switch it to the lowest setting for a few seconds before shutting it OFF.

9. To close the Dryer, simply press the Tilt Control Button and push the Hood back and down onto the base.

REMOTE CONTROL

Lift the Cord Storage Lid and pull out the cord attached to the Remote Control (Fig. 5). While you sit comfortably under the Dryer, you can adjust the air/heat settings as you desire by using the Remote Control. The air/heat settings range from MIN (200 watts) to MAX (1400 watts). Use the MAX setting for very wet hair; reduce the heat to a lower setting as hair dries.

Special Note: If you are drying a synthetic hairpiece or wig, always use the MIN setting. Natural hairpieces and wigs should be dried on the lower settings. The use of higher settings could cause damage to a wig or hairpiece.



USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance and contains no user serviceable parts. Refer service, if necessary, to qualified personnel.

TO CLEAN: NEVER IMMERSE UNIT IN WATER OR ANY OTHER LIQUID. Unplug appliance and allow it to cool. Use a soft, slightly damp cloth or sponge to wipe the surfaces. Never use abrasive cleaners or solvents, as they may scratch the surface. The Air Intake Grill must be periodically cleared of lint, hair or dust by using a small brush.

TO STORE: Unplug appliance, allow it to cool, and store in its box or in a clean, dry place. Never store unit while it is hot or still plugged in. Never wrap the cord tightly around the Dryer. For best results, coil up cord and place into the Cord Storage Well. Do not put any stress on the cord, especially where it enters the Dryer, as this could cause the cord to fray and break.

SERVICE NOTE: Before returning your Dryer for servicing, make sure that the Air Intake Grill is free of lint, hair and dust. If the Air Intake Grill is not clean, simply clear away any debris with a small brush and try to operate Dryer again.

ONE YEAR LIMITED WARRANTY

This Salton Product warranty extends to the original consumer of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violations of written instructions furnished by Salton, Inc., or to units that have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract, or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one-year limited warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at Salton, Inc.'s option), when the product is returned to the Salton, Inc. facility. The repaired or replacement product will be in warranty for the balance of the one year warranty period and an additional one month period. No charge will be made for such repair or replacement.

Service and Repair

Should the appliance malfunction, you should first call toll-free 1-800-233-9054 between the hours of 9:00am and 5:00pm Central Standard Time and ask for Customer Service stating that you are a consumer with a problem.

In-Warranty Service: For an appliance covered under the warranty period, no charge is made for service or postage. Call for a pre-paid return mailing label (U.S. customers only).

Out-of-Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$8.00 for return shipping and handling. Salton, Inc. cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem; your full return address and day-time phone number; a note describing the problem you experienced; a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

ATTN: Repair Department, Salton, Inc.
550 Business Center Dr.
Mt. Prospect, IL 60056



For more information on Salton/Maxim products:
visit our website: <http://www.salton-maxim.com>
or email us at: salton@saltonusa.com