

# RELAXOR®



## SOUND MAGIC™ MASSAGE CHAIR

OWNER'S MANUAL &  
OPERATING INSTRUCTIONS

Model FBM8MMC

---

FULL BODY MAT

---

# IMPORTANT SAFEGUARDS

*When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:*

## **READ ALL INSTRUCTIONS BEFORE USING**

### **DANGER - To reduce the risk of electric shock:**

- 1. Always unplug this appliance from the electrical outlet immediately after using and before cleaning.*
- 2. Never use pins or other metallic fasteners with this appliance.*
- 3. Carefully examine the covering before each use. Discard the appliance if the covering shows any sign of deterioration, such as checking, blistering, or cracking.*
- 4. Keep Dry - Do not operate in a wet or moist condition.*

### **WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:**

- 1. An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.*
- 2. Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.*
- 3. Close supervision is necessary when this appliance is used by or near children, invalids, or disabled persons.*
- 4. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.*
- 5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged in any manner, or dropped into water. Take appliance to the nearest authorized service center for examination and repair.*
- 6. Do not carry this appliance by supply cord or use cord as a handle.*
- 7. Keep the cord away from heated surfaces.*
- 8. Never block the air openings of the appliance or place it on a soft surface such as a bed, pillow or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.*

# IMPORTANT SAFEGUARDS *(Cont.)*

- 9. Never use while sleeping.*
- 10. Do not use outdoors.*
- 11. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.*
- 12. To disconnect, turn all controls to the OFF position, then remove plug from outlet.*
- 13. Use heated surfaces carefully. May cause serious burns. Do not use over insensitive skin areas or in the presence of poor circulation. The unattended use of heat by children or incapacitated persons may be dangerous.*

## SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

 
### POLARIZED PLUG

*This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug fits into a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.*

# GETTING TO KNOW YOUR RELAXOR® SOUND MAGIC™ MASSAGE CHAIR

*Before attempting to use your RELAXOR® Sound Magic™ Massage Chair, you should become familiar with all of the parts. Read all of the instructions and safeguards carefully.*

*Identify all parts of your RELAXOR® Sound Magic™ Massage Chair according to the drawing below so that you have no doubts when reading the instructions that follow.*

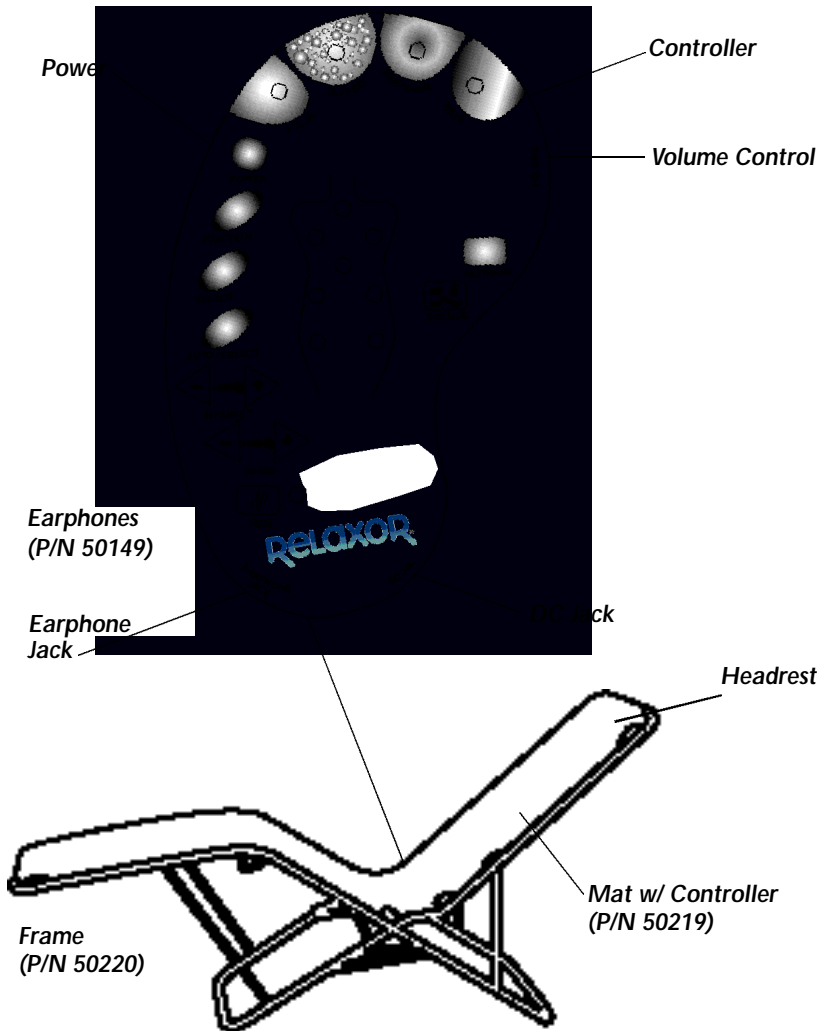

## RECOMMENDED MASSAGE TIME

*Generally, massage should last only 10-15 minutes on any muscle of the body. For safety purposes and to ensure that overheating does not occur, this appliance will automatically shut off after 15 minutes of use. Allow unit to cool before using it again. To restart the Massage Chair, simply press the POWER Button. It is recommended that the Massage Chair not be used for more than 30 minutes in one session. This is to prevent muscles and nerves from being over-stimulated, causing an adverse effect. This appliance should only be used once or twice a day.*

## FOR BEST RESULTS

*If you are pregnant or receiving medical treatment for an illness or disease, please consult a doctor before using this appliance.*

*Do not step or stand on this unit, as you may cause internal damage to the components.*

*Do not use this appliance on any part of the body that is swollen, burned or inflamed, or where skin eruptions or sores are present.*

*If you feel that the Massage Chair gives you too much stimulation, try placing a cloth or towel between you and the Chair. This may act as a buffer to the massaging action.*

*Massage should be pleasant and comfortable. Should pain or discomfort result, discontinue use and consult your doctor.*

# INSTRUCTIONS FOR USE

*You will now be able to enjoy the full benefits of the Massage Chair that helps relieve the tension of stressful living and provides an overall dimension of quality relaxation. The Mat can be used separately on any soft surface - such as a bed or sofa - or with the Chair provided with the unit. To use, simply plug the Adapter jack into the DC JACK socket on the Controller. Then, plug the Adapter into a 120V AC electrical outlet. Use only the Adapter supplied with this product. (P/N 50106)*

**POWER:** Press this Button to turn Massage Chair ON and begin your massage. When you have finished your massage, press Button again to turn Chair OFF, and then unplug the Adapter from wall outlet.



**FUNCTION:** There are 8 individual motors to massage away stress from your neck, shoulders, lower back, thighs and calves. There are 5 FUNCTION programs, and each consists of different massage motor sequences. Please note that the first FUNCTION program (FUNCTION 1) is immediately activated when the Massage Chair is first turned ON. Each subsequent press of the FUNCTION Button will activate the next programmed FUNCTION. (For example, pressing the FUNCTION Button once will activate FUNCTION 2) The LED light(s) corresponding to the massage motor(s) operating will illuminate to indicate the FUNCTION selected. Referring to the diagram below, the FUNCTION descriptions are as follows:



**FUNCTION 1** Massage motor sequences:

8 > 5 > 4 > 3 > 1 > 2 > 6 > 7 > 7 > 6 > 2...

**FUNCTION 2** Massage motor sequences:

7,8 > 5,6 > 4 > 2,3 > 1 > 1 > 2,3 > 4...

**FUNCTION 3** Massage motor sequences:

 
2,5,7 > 3,6,8 > 1,4 > 1,4 > 3,6,8 > 2,5,7...

**FUNCTION 4** Massage motor sequences:

7,8 > 5,6 > 2,3,4 > 1 > 1 > 2,3,4 > 5,6...

**FUNCTION 5** Massage motor sequences:

7,8 > 4,5,6 > 1,2,3 > 1,2,3 > 4,5,6...

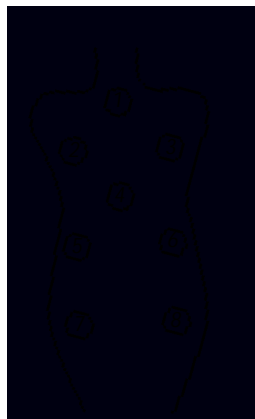

## INSTRUCTIONS FOR USE (Continued)

**SELECT:** The *SELECT* Button works in conjunction with the *AUTO/SELECT* Button in order to target a specific tense area. You must first press the *AUTO/SELECT* Button, then press the *SELECT* Button until you have chosen the exact body location you want continuously massaged. The corresponding LED light will illuminate to indicate the area you've targeted. The massage will remain in the area you have selected until you press *AUTO/SELECT* again, which reactivates the cycling action according to the current Function.



**AUTO/SELECT:** This Button works in conjunction with the *SELECT* Button in order to target a specific tense area. You must first press the *AUTO/SELECT* Button, then press the *SELECT* Button until you have chosen the exact body location you want continuously massaged - see above for further instructions. Press *AUTO/SELECT* again to reactivate the cycling action according to the current Function.



**INTENSITY:** Choose the strength of your massage. Press "+" to increase the *INTENSITY*. Press "-" to decrease the *INTENSITY*. There are 3 strengths for each key.



**SPEED:** Control the cycle speed of the massage motors. Press "+" to increase the *SPEED*. Press "-" to slow the *SPEED* down. There are 3 speeds for each key.



## INSTRUCTIONS FOR USE (Continued)

**HEAT:** Press this Button to add a soothing, penetrating heat to the lower back area; press again to turn off. The corresponding LED light will illuminate when the HEAT function is operating.



**NOTE:** When selecting the HEAT function in conjunction with the massaging action, there will be a slight decrease in the strength of the Massage output. This adjustment is perfectly normal and should not be interpreted as a defect.

**PATTERNS:** There are 4 Patterns to choose from. The PULSE feature, in which the massage motors pulsate on and off, is immediately activated when the Massage Chair is first turned ON. Press the PATTERNS Button once to activate the TAPPING massage, twice for a KNEADING Shiatsu-like massage, and a third time to have the massage motors cycle up and down in a WAVE sensation. The corresponding LED light will indicate your selection.



**SOUNDS:** Press this Button to select from 6 different relaxing sounds: Sea waves, bubbling brook, birds, crickets, white noise, and rain. The Speaker is located in the Headrest of the unit, and you may use the SOUNDS feature with or without the included Earphones. The Earphones plug into the EARPHONE JACK socket on the Controller. Adjust VOLUME as desired by using the VOLUME control located on the Controller.





# USER MAINTENANCE INSTRUCTIONS

 
 
 
*This appliance contains no user serviceable parts. Do not try to repair it yourself. Refer service, if necessary, to qualified service personnel.*

## **CLEANING**

*NEVER IMMERSE UNIT IN WATER OR ANY OTHER LIQUID. Unplug appliance and allow it to cool. Use a soft, slightly damp cloth or sponge to wipe the Mat surface. Never use abrasive cleaners or solvents, as they may damage the surface.*

## **STORAGE**

*Unplug appliance, allow it to cool, and store in its box or in a clean, dry place. The Chair has a space saving, foldable design for easy storage. Remove Mat from Chair prior to storing. The Mat can be folded in half at the crease for compact storage and portability. Avoid contact with sharp edges or pointed objects that might cut or puncture the fabric surface. Never store unit while it is hot or still plugged in. Never put any stress on the cord where it enters the unit, as this could cause the cord to fray and break.*

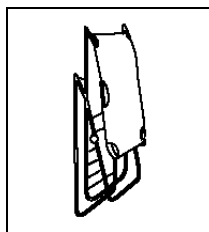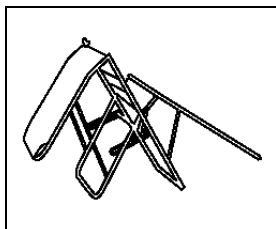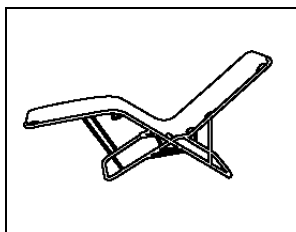

[illegible]

[illegible]

# LIMITED ONE YEAR WARRANTY

**Warranty:** This Relaxor® product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

**Warranty Coverage:** This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**Implied Warranties:** ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

**Warranty Performance:** During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

**Service and Repair:** Should the appliance malfunction, you should first call toll-free 1 (800) 233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number FBM8MMC when you call.

**In-Warranty Service (USA):** For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization 1 (800) 233-9054.

**Out-of Warranty Service:** A flat rate charge by model is made for out-of-warranty service. Include \$15.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

**For Products Purchased in the USA, but Used in Canada:** You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

**Risk During Shipment:** We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

**To return the appliance, ship to:**

ATTN: Repair Center  
Salton, Inc.  
708 South Missouri Street  
Macon, MO 63552

**To contact us, please write to, call, or email:**

Salton, Inc.  
P.O. Box 1637  
Columbia, MO 65205-1637  
1-800-233-9054  
E-mail: Salton@Saltonusa.com

**Limitation of Remedies:** No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and **in no event shall Salton be liable for any incidental or consequential damages, losses or expenses.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

**Legal Rights:** This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For more information on Salton products: visit our website: [www.salton-maxim.com](http://www.salton-maxim.com)

©2001 Salton, Inc. All rights reserved.

Made in China

P/N 60738

06/01