

White-Westinghouse™

Steam and Dry Iron

OWNER'S MANUAL



MODEL WWSR7510



IMPORTANT SAFEGUARDS

When using your Iron, basic safety precautions should always be followed, including the following:

1. Read all instructions before using.
2. Use Iron only for its intended use.
3. To protect against a risk of electric shock, do not immerse the Iron in water or other liquids.
4. The Iron should always be turned to **MIN** before plugging or unplugging from outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
5. Do not allow cord to touch hot surfaces. Let Iron cool completely before putting away. Loop cord loosely around Iron when storing.
6. Always disconnect Iron from electrical outlet when filling with water or emptying, and when not in use.
7. Do not operate with a damaged cord, or if the Iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the Iron; take it to a qualified service person for examination and repair. Incorrect reassembly can cause a risk of electric shock when the Iron is used.
8. Close supervision is necessary for any appliance being used by or near children. Do not leave Iron unattended while connected or on an ironing board.
9. Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a Steam Iron upside down — there may be hot water in the reservoir.

SPECIAL INSTRUCTIONS

1. This is a high wattage appliance. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a 15-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.


SAVE THESE INSTRUCTIONS
THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

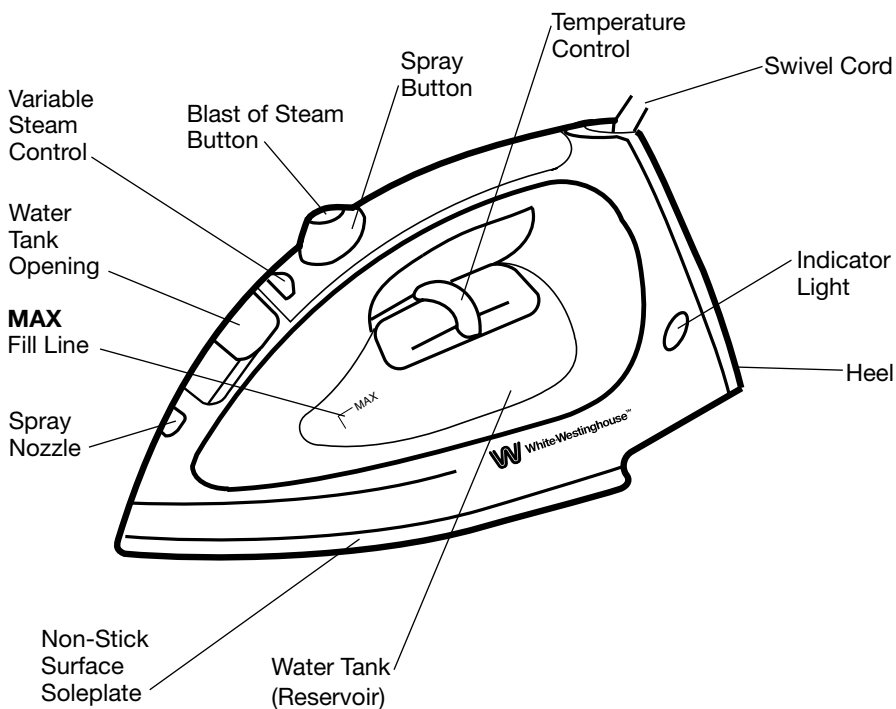

INSTRUCTIONS FOR USE

NOTE: Before you use your Iron for the first time, test on an old piece of fabric to ensure that the Soleplate and Water Tank are completely clean.

NOTE: The Iron may smoke slightly when switched on for the first time. This is normal and will soon cease.

IRONING TEMPERATURE

- Always check first to see whether a label with ironing instructions is attached to the article to be ironed. Follow these instructions in all cases.
- If ironing instructions are missing but you do know the kind of fabric, refer to the Fabric Chart.
- Sort the laundry out first: wool with wool, cotton with cotton, etc. Start ironing the fabrics requiring the lowest temperature and progress to the highest ones because the Iron heats up quicker than it cools down.
- If the fabric consists of various kinds of fibers (i.e. cotton with polyester), you must always select the lowest ironing temperature of the composition of those fibers.
- Slide the Temperature Control to the correct temperature as indicated on the ironing instructions or on the label.
- The correct temperature will be reached when the Indicator Light has turned off. The Indicator Light will illuminate on and off from time to time indicating that the selected temperature is being maintained.


WARNING: To prevent fire, do not leave Iron unattended while plugged in.

FABRIC CHART

	FABRIC	TEMP. SETTING
MIN	Synthetics, Nylon, Acrylics, Polyester, Rayon	•
	Wool Silk	• •
MAX	Cotton Linen	• • •


FILLING THE WATER TANK

This Iron can be used with normal tap water. If the water in your area is particularly hard, it is advisable to use distilled or demineralized water to prevent scale from forming on the critical point of the Iron. Do not use chemically de-scaled water.

1. With the unit **UNPLUGGED**, turn the Variable Steam Control to  **NO STEAM**.
2. Hold the Iron in horizontal position (Soleplate down).
3. Slide open the Water Tank Opening and carefully pour water into the Water Tank Opening. Do not fill higher than the **MAX** Line shown on the Water Tank, in order to avoid spilling water.
4. Close the Water Filling Outlet and ensure that it is secured firmly. If you have to refill the water while ironing, remove the plug from the wall socket and allow Iron to cool before filling.
5. Pour any remaining water out after use.

CAUTION: Never fill Iron with fabric conditioner, starches, or any other solution as these will damage the steam mechanism. Do not use contaminated water.


USING THE SPRAY BUTTON

For a mist of water to moisten dry and difficult fabrics such as linen, cotton or wool, or to handle stubborn wrinkles, press the Spray Button . The Spray Function is also handy to moisten creases accidentally ironed into the fabric.

NOTE: You may have to pump the Spray Button several times the first time your use the Iron in order to start the spraying action.

BLAST OF STEAM


The “Blast of Steam” is very useful for removing stubborn creases from fabrics when ironing at higher temperatures.

1. Fill Water Tank and set Temperature Control to either “• •” or “• • •” for moderate steam. For maximum steam, set the Temperature Control to “• • •” or “LINEN **MAX**.”
2. Press down on the Blast of Steam  Button to emit steam from the Soleplate.

NOTE: If the temperature setting is too low, water may drip from Soleplate. To obtain a good flow of steam, press Blast of Steam Button several times, pausing 5 seconds between each blast to allow Iron to reheat.

IRONING WITHOUT STEAM

The Iron can be used with or without water in the Tank. However, it is best to avoid having the Tank too full of water while ironing without steam.



1. Position Temperature Control to the lowest **MIN** setting.
2. Turn the Variable Steam Control to  **NO STEAM**.
3. Stand the Iron on its Heel in an upright position on an iron-safe surface and plug it in.
4. Slide the Temperature Control to the desired setting.
5. When the Indicator Light turns off, the Iron has reached the desired temperature.
6. If desired, you may still use the Spray Button or Blast of Steam Button as long as there is water in the Tank.
7. When finished, turn Temperature Control to the lowest **MIN** setting and unplug. Allow the Iron to cool before cleaning the exterior or before storing.

NOTE: During ironing, the Indicator Light may turn on again which indicates that the Iron is heating up to maintain the proper temperature.

CAUTION: If the Iron has been used for a long period of time and is hot, **DO NOT** fill it with water, allow to cool, then refill and resume ironing.

IRONING WITH STEAM

When using as a Steam Iron, be sure the temperature setting on the Temperature Control is within the **STEAM** range (**COTTON** or **LINEN** setting).to avoid water spotting on a garment.

1. Position Temperature Control to the lowest **MIN** setting.
2. With the unit **UNPLUGGED**, fill the Iron's Water Tank to the Maximum Fill Line.
3. Stand the Iron on its Heel in an upright position on an iron-safe surface and plug it in.
4. Slide the Temperature Control to the **COTTON** or **LINEN** setting.
5. Allow approximately 2 minutes for the Iron to reach the desired temperature.
6. Turn the Variable Steam Control to  for Moderate Steam or  for Maximum Steam. As soon as the Iron is held horizontally, steam will flow through the Vents. If the iron fails to steam, gently tap the Soleplate on the Iron surface. Placing the Iron on its Heel in an upright position interrupts the flow of steam.
7. When finished, turn the Temperature Control to **MIN** and unplug. Allow Iron to cool fully before cleaning the exterior of the Iron or before storing.

CAUTION: Avoid coming into contact with escaping steam.

CAUTION: If the Iron has been used for a long period of time and is hot, **DO NOT** fill it with water. Allow to cool, then refill and resume ironing.

EMPTYING THE WATER TANK

The Water Tank should be emptied after each use.

1. Unplug Iron from the electrical outlet.
2. While the Iron is still warm, hold the Iron over a sink and allow the Iron to drain by tipping the point of the Iron down.
3. Gently shake the Iron to loosen any water drops that may be trapped. The warmth of the Iron should dry out any remaining water.

NOTE: If you empty the Water Tank after the Iron has cooled, set the Iron in an upright position on its Heel. Plug it in and set the Temperature Control Dial to **MAX** heat for 2 minutes. Then unplug the Iron and let it cool before storing.

USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance and contains no user serviceable parts. Do not try to fix it yourself. Refer it to qualified service personnel if servicing is needed.

TO CLEAN SOLEPLATE

The Iron should be fully cooled before Soleplate cleaning begins. Make sure the Iron is unplugged before cleaning. Empty the Water Tank of any remaining water. Apply a small amount of mild cleaner to a damp cloth. Gently rub Soleplate, then wipe with a moist cloth. **NEVER USE** scouring pads or abrasive cleaners on the Soleplate, as this may scratch the surface.

NOTE: Do not use vinegar or other de-scaling solutions.

Wipe all other surfaces with a slightly damp cloth. Never allow water or any other liquid to get into the unit, except when filling the Water Tank. **NEVER** put any chemical cleaning agents or solvents in the Water Tank.

BEFORE USING AGAIN, preheat and move Iron over an old cloth several times to remove any residue from the Soleplate.

TO STORE

Unplug appliance and allow to cool. **STORE IN UPRIGHT POSITION ON HEEL REST.** Never store Iron lying on the Soleplate. Never store it while it is hot or still plugged in. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

ONE-YEAR LIMITED WARRANTY

This White-Westinghouse product warranty extends to the original consumer purchaser of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished, or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied, and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a comparable model (at the store's option) when the product is returned to Kmart. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Important Notice

If any parts are missing or defective, return this product to the place of purchase.

Consumer Service

This White-Westinghouse product is distributed by:

Salton, Inc.
708 South Missouri Street
Macon, MO 63552
E-mail: White-Westinghouse@saltonusa.com

Any questions or comments can be directed to Salton's address, or call the Consumer Service Department:

1-800-233-9054
Monday-Friday
8 a.m. - 5 p.m. CST

White-Westinghouse trademark used under license.
©2001 White Consolidated Industries, Inc.

Made in China for
Kmart Corporation
Troy, Michigan 48084

Printed in China

P/N 60663