



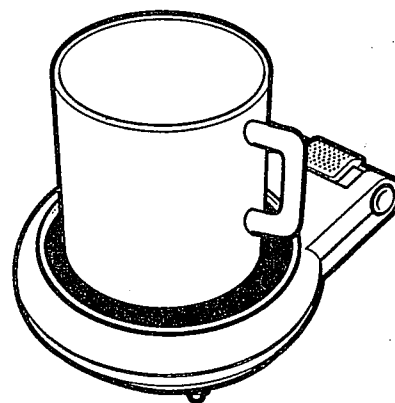

**Hot Spot™
Set
Beverage
Warmer and
Mug Set**

OWNER'S MANUAL

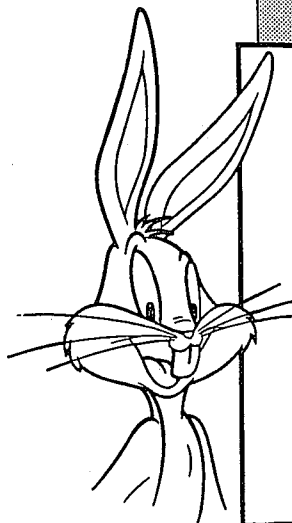

salton®

MODEL MW6LTBKA
MODEL MW6LTBLA
MODEL MW6LTWA

IMPORTANT SAFEGUARDS

When using your MAXIM Mug Warmer or any electrical appliance, these basic safety precautions should be followed, including the following:

THIS IS NOT A TOY

1. Read all instructions.
2. Do not touch hot surfaces. Handle by plastic sides only.
3. To protect against electrical hazard, do not immerse cord, plug or base unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet and allow to cool before cleaning.
6. Do not operate appliance with a damaged cord or plug or after the appliance, malfunctions, or has been damaged in any manner. Return appliance to MAXIM for examination or repair.
7. The use of accessories or attachments not recommended by MAXIM may cause fire, electric shock, or injury.
8. Do not use outdoors; this product is for household use.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not move appliance when supporting a container of hot liquids.
12. To disconnect, turn control to "off," then remove the plug from wall outlet.
13. Do not use appliance for other than intended use.
14. To reduce the risk of injury, DO NOT drape cord over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.


SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY



OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

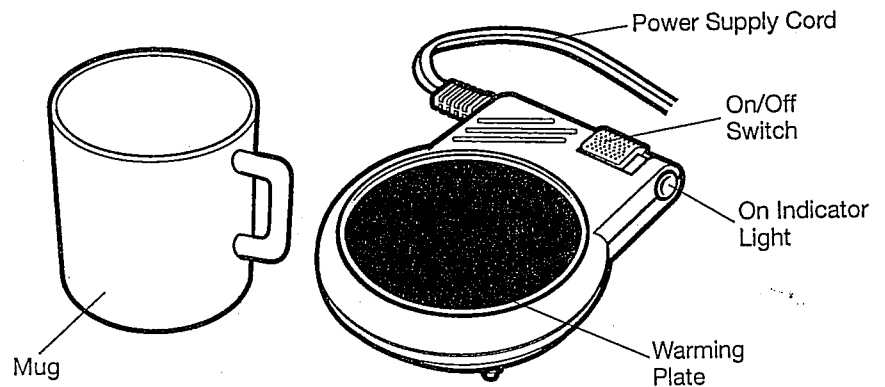

This appliance is for HOUSEHOLD USE ONLY. It may be plugged into any 120-volt AC electrical outlet (ordinary household current). Do not use any other type of electrical outlet.

NOTE:

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug fits in a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

BEFORE INITIAL USE

Before using your beverage warmer and mug for the first time, wash mug in warm, soapy water. Rinse well and dry thoroughly. Wipe unit with a clean, soft cloth or sponge to remove any packaging dust.

Never immerse unit in water or any other liquid. Do not use harsh detergents or abrasive cleaners to clean the unit or mug.

HOW TO USE

Enjoy a cup of coffee or any hot beverage or soup at your leisure. Simply plug the warmer in and switch On. The power indicator light will glow, letting you know the unit is operating. Place your cup on the warmer to maintain the hot beverage at a perfect temperature.

NOTE: The warmer is not intended to heat cold liquids, only to maintain temperature. Do not use plastic, Styrofoam or paper cups on warmer. Be sure to switch unit off when not in use.

CARE AND MAINTENANCE

This appliance requires little maintenance. It contains no user serviceable parts. Refer service to qualified personnel.

TO CLEAN: NEVER IMMERSE UNIT IN WATER OR ANY OTHER LIQUID. Unplug appliance and allow to cool. Use a soft, slightly damp cloth to wipe the surfaces. Wash mug in warm, soapy water and rinse well after each use. Use only mild dishwashing detergent and a soft cloth or sponge. Do not use harsh detergents or scouring pads to clean the mug, as this will scratch the surface and damage the design.

TO STORE: Unplug appliance, allow to cool, and store in its box or in a dry place. Never store it while it is hot or still plugged in.

ONE-YEAR LIMITED WARRANTY

This Salton Maxim product warranty extends to the original consumer purchaser of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA and Canada, and does not extend to any units which have been used in violation of written instructions furnished by Salton/MAXIM Housewares, Inc., or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for Salton/MAXIM Housewares, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at Salton/MAXIM's option) when the product is returned to the Salton/MAXIM facility. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair

Should the appliance malfunction, you should first call toll-free 1-800-233-9054, between the hours of 9:00 am and 5:00 pm, Central Standard Time, and ask for CONSUMER CUSTOMER SERVICE stating that you are a consumer with a problem.

In-Warranty Service (USA) for an appliance covered under the warranty period, no charge is made for service or postage. Call for a pre-paid return mailing label. (U.S. Customers Only)

In-Warranty Service (Canada) for an appliance covered under the warranty period, no charge is made for service and return postage. Please return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the address listed below. Customs duty/brokerage fee, if any, must be paid by the consumer.

Out-of-Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$8.00 (U.S.) for return shipping and handling.

Salton/Maxim cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance; any accessories related to your problem; your full return address and daytime phone number; a note describing the problem you experienced; a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

Return the appliance to:

ATTN: Repair Department
Salton/MAXIM Housewares, Inc.
550 Business Center Drive
Mt. Prospect, IL 60056

For more information on Salton/MAXIM products:

visit our website: URL <http://WWW.salton-maxim.com> or E-mail us at Salton@Saltonusa.com

LOONEY TUNES™, characters, names
and all related indicia are
trademarks of Warner Bros.® 1998

Printed in Hong Kong