


**MAXIM®**

BB4

# INSTRUCTION MANUAL

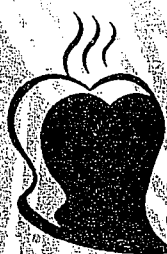

*Simply Bread™*





## TABLE OF CONTENTS

Important Safeguards .....	1
Your MAXIM® Simply Bread™ Machine .....	2
Control Panel .....	3
Using the Simply Bread™ Machine .....	4 - 5
Kneading and Baking Cycles .....	6
Making Dough and Baking Bread .....	7 - 11
Using the Timer .....	12 - 13
Cleaning Instructions .....	14
Trouble-Shooting .....	15 - 17
Specifications .....	18
Guarantee/Warranty .....	19



## IMPORTANT SAFEGUARDS

When using the MAXIM®Simply Bread™ Automatic Bread Baker, basic safety precautions should always be followed, particularly the following:

**1. READ ALL INSTRUCTIONS BEFORE USE.**

2. Do not touch hot surfaces. Use handles or knobs. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning.
3. Unplug this product from wall outlet when not in use and before cleaning. Allow to cool thoroughly before putting on or taking off parts.
4. Do not immerse appliance in water or any other liquid.
5. Close supervision is always necessary when this or any appliance is used by or near children.
6. Do not allow anything to rest on the power cord. Do not plug in cord where persons may walk or trip on it.
7. Do not operate this or any appliance with a frayed or damaged cord, or after the appliance malfunctions, or has been damaged in any manner. Return the appliance to Salton/MAXIM Housewares, Inc. Repair Dept. for examination and repair.
8. Avoid contact with any moving parts.
9. Do not use attachments not recommended by Salton/MAXIM Housewares, Inc.; they may damage the appliance or cause injury.
10. This appliance is intended for household use only. Do not use outdoors or for commercial purposes.

11. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces. Do not place on an unsteady or cloth-covered surface.
12. Do not place the appliance near a hot gas or electric burner, in a heated oven or in a microwave.
13. Keep the unit at least 2 inches away from walls or any other objects when using it.
14. To disconnect, grip the plug and pull the plug from the wall outlet. Never pull on the cord.

## SAVE THESE INSTRUCTIONS


**Note:**

- A. A short power-supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord.
- B. Extension cords are available and may be used, but special care must be exercised in use.
- C. If an extension cord is used:
  - (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and
  - (2) the cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

**CAUTION:** During use, the internal parts of the Simply Bread™ and the area around the Steam Vent are **HOT. Keep out of reach of children to avoid possible injury.**




## YOUR MAXIM® SIMPLY BREAD™ MACHINE

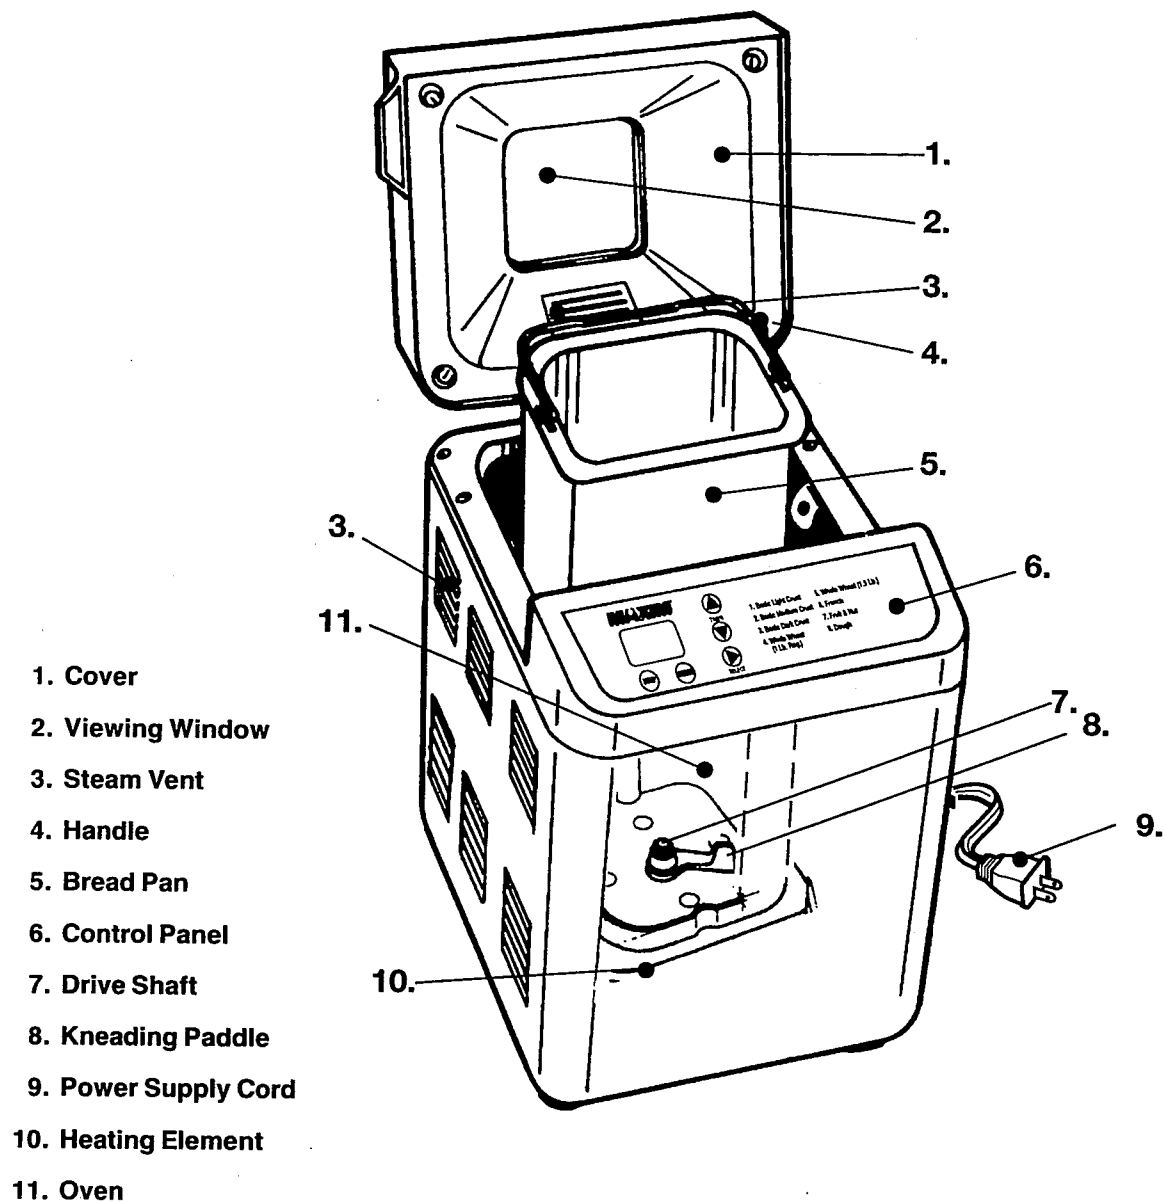



## CONTROL PANEL

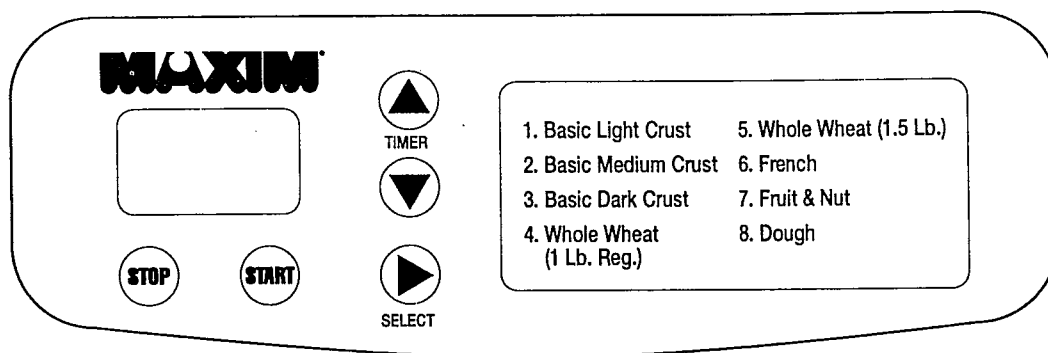

### A. Display Window

Shows your selection and Timer setting.

### B. Selection Options

Select from these bread choices:

Basic Light Crust  
Basic Medium Crust  
Basic Dark Crust  
Whole Wheat (1 lb. Reg.)  
Whole Wheat (1.5 lb.)  
French  
Fruit & Nut  
Dough

### C. Timer

Use this pair of buttons to add or subtract time displayed in the Display Window.

▲ Each time you press this button, the Timer advances 10 minutes.  
(Hint: Hold down the button for speedier results.)

▼ Each time you press this button, the Timer is set back 10 minutes.

### D. Select

Press this button to select the Baking cycle you want. Each time you press this button, the indicator light moves to the next selection. Press this button until your choice is indicated.

### E. Start

Press this button to start the Baking cycle you choose, or to start the Timer.

### F. Stop

Press this button for a full second to turn off power, to reset the Baking cycle or Timer setting, or to stop baking.

***When you press the Timer, Select, Start, or Stop button, you should hear a beep. This lets you know you've pressed hard enough and your selection was made.***

***\*See page 12 for detailed instructions.***



## USING THE MAXIM® SIMPLY BREAD™ MACHINE

With your new MAXIM® Simply Bread™ Machine,

- You can use pre-packaged bread mixes. Recipe instructions are on each package.
- You can bake a loaf of bread from scratch. See the Recipe and Menu Planner included with your Simply Bread™ Machine for lots of tasty options.
- You can make dough for rolls or shaped loaves you'll bake in your oven. Use the Simply Bread™ Machine's Dough cycle to do the mixing and kneading for you, then shape and bake the bread yourself.

### **Inserting and Removing the Bread Pan**

- To insert the Bread Pan in the Bread Baker, seat it in place with the marking "Front" facing the front of the machine. Press down until it snaps into place.

Remember to insert the Kneading Paddle first, then add all your ingredients BEFORE inserting the Bread Pan into the oven of the machine.

- To remove the Bread Pan from the Oven, hold the Handle with a mitt and lift gently.

When you remove the Bread Pan after baking, BE SURE TO WEAR OVEN MITTS to prevent burning. After you remove the loaf by turning the Bread Pan upside down and shaking gently, check to see that the Kneading Paddle is removed from the loaf. If it is stuck in your bread, use a non-metal utensil to gently remove it, taking care not to scratch the Kneading Paddle.

### **Operating Tips**

- Use oven mitts when working with bread or any part of the Simply Bread™ Machine that is hot from baking.
- Wipe off crumbs and clean the Simply Bread™ Machine, as needed, after baking.
- Unplug the Simply Bread™ Machine when you are not using it.



- **It is normal for the Viewing Window to collect moisture during the beginning of the Baking cycle.** As your bread bakes, the moisture soon will evaporate so you can watch your bread's baking progress.
- **Don't open the Lid during baking.** This causes the bread to bake improperly.
- **Don't unplug the Simply Bread™ Machine during Kneading or Baking.** This will stop the operation.
- **NOTE:**  
This appliance has a **polarized plug** (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## Caution

- To protect young children, keep the Simply Bread™ Machine out of their reach when you're not there to supervise — especially during the Kneading and Baking cycles.
- Use the Simply Bread™ Machine on a flat, hard surface. Don't place it near a flame or heat, or on a soft surface (such as a carpet). Avoid placing it where it may tip over during use. Dropping the Simply Bread™ Machine could cause it to malfunction.
- To avoid burns, stay clear of the Steam Vent during kneading and baking. Also, don't touch the Viewing Window — it gets very hot.
- After baking, wait for the Simply Bread™ Machine to cool down before touching or cleaning the Bread Pan or internals of the machine without oven mitts.
- Never use metal utensils with the Simply Bread™ Machine. These can scratch the non-stick surface of the Bread Pan.
- Avoid electric shock by unplugging before using a damp cloth or sponge to wipe the interior of the Oven.
- Never use the Bread Pan on a gas or electric cooktop or on an open flame.
- Avoid covering the Steam Vent during Kneading and Baking cycles. This could cause the Simply Bread™ Machine to warp or discolor.





## KNEADING AND BAKING CYCLES

The MAXIM® Simply Bread™ Automatic Bread Baker has several baking cycles from which you can choose:

- The Light, Medium, and Dark Crust Baking cycles let you choose your favorite crust for most bread varieties, including rye, and white breads.
- Fruit & Nut beeper is for breads such as apple walnut, banana, and raisin bread.
- The French cycle is for breads with crisper crusts, especially those that are lowest in sweeteners, such as French and Italian breads.
- The add-in Beeper for fruits and nuts happens approximately 30 minutes into the Basic Light, Medium, Dark cycles and Fruit & Nut cycle only. Whole Wheat, French and Dough cycles do not beep for fruit and nut add-in.

This table shows how long each part of the Baking cycle takes:

BAKING PHASE	SELECTION							
	Basic Light Crust	Basic Med. Crust	Basic Dark Crust	Whole Wheat* 1 lb. Reg.	Whole Wheat* 1.5 lb. Reg.	French	Fruit & Nut	Dough Only
Rest	—	—	—	30 min.	30 min.	—	—	—
Knead 1	6 min.	6 min.	6 min.	6 min.	6 min.	6 min.	6 min.	6 min.
Knead 2	30 min.	31 min.	30 min.	13 min.	18 min.	22 min.	31 min.	24 min.
First Rise	23 min.	23 min.	23 min.	70 min.	76 min.	34 min.	35 min.	60 min.
Punch	—	—	—	8 sec.	10 sec.	20 sec.	20 sec.	—
Rest	—	—	—	26 m. 52 s.	26 m. 50 s.	23 m. 40 s.	23 m. 40 s.	—
Shape	20 sec.	20 sec.	20 sec.	3 sec.	3 sec.	20 sec.	20 sec.	—
Second Rise	63 m. 40 s.	63 m. 40 s.	63 m. 40 s.	71 m. 57 s.	57 m. 57 s.	58 m. 40 s.	53 m. 40 s.	—
Bake	37 min.	46 min.	57 min.	37 min.	45 min.	55 min.	45 min.	—
**Auto Cool Down	60 min.	60 min.	60 min.	60 min.	60 min.	60 min.	60 min.	—
Total Baking Time	2:40	2:50	3:00	4:15	4:20	3:20	3:15	1:30


\*For Whole Wheat cycles, the mix initially rests for up to 30 minutes. No movement occurs in the pan. This is normal.

\*\*Note: If bread is not removed immediately after baking, and Stop button is not pressed, a controlled Keep Warm phase will begin for each selection (except Dough). While this will help reduce condensation between loaf and Bread Pan, it is best to remove bread as soon as possible after completion of the Baking phase.



## MAKING DOUGH AND BAKING BREAD

Here's how to bake bread with your Simply Bread™ Machine:

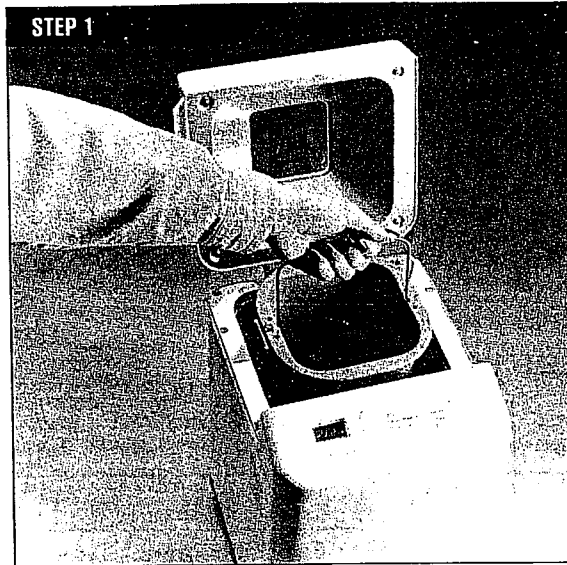

### **Open the Lid and remove the Bread Pan.**

Lift the Bread Pan. (The arrow marked "Front" on the Bread Pan reminds you which way the pan should face.)



### **Position the Kneading Paddle on the Drive Shaft as shown.**


Match the flat side of the Drive Shaft to the flat part of the hole in the Kneading Paddle. Make sure the paddle is secure.



**Place the ingredients into the Bread Pan.**


For best results, add all liquid ingredients first. Then, add all dry ingredients EXCEPT yeast.

**ALWAYS ADD YEAST LAST.**

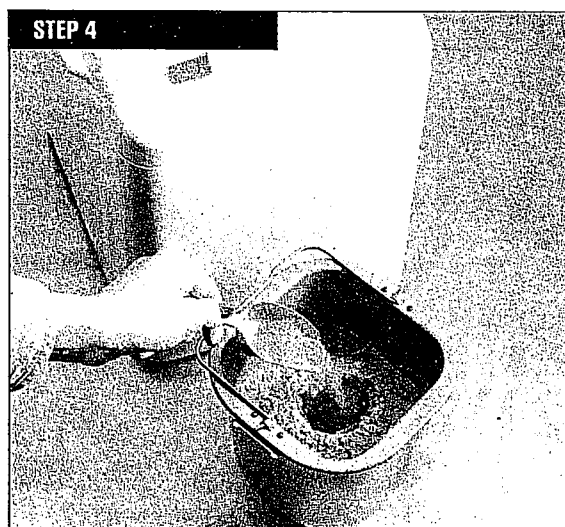

**Make a small indentation on top of the dry ingredients (not so deep it reaches the wet layer) and add the yeast to the indentation.**

This order of adding ingredients is important, especially when using the Timer, because it keeps the yeast away from the liquid ingredients until it's time to knead them together. (Liquid ingredients will activate the yeast.)

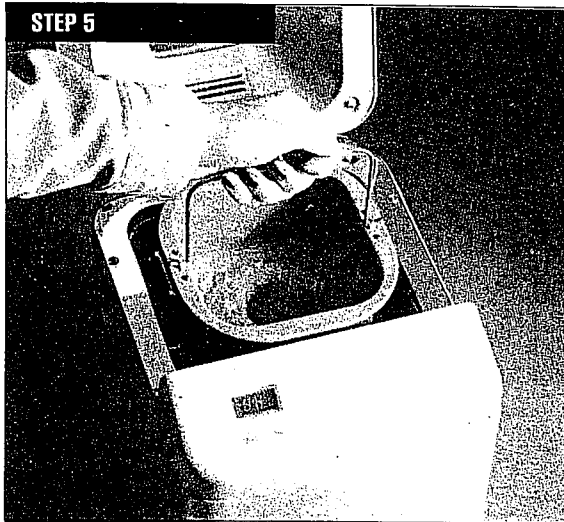


**Insert the Bread Pan in the Simply Bread™ Machine.**

To insert the Bread Pan into the machine, seat it in place with the marking "Front" facing the front of the machine. Press down until it snaps into place

**Close the Lid and plug in the Simply Bread™ Machine.**

When you plug it in, the Simply Bread™ Machine flashes "000" in the Display Window.

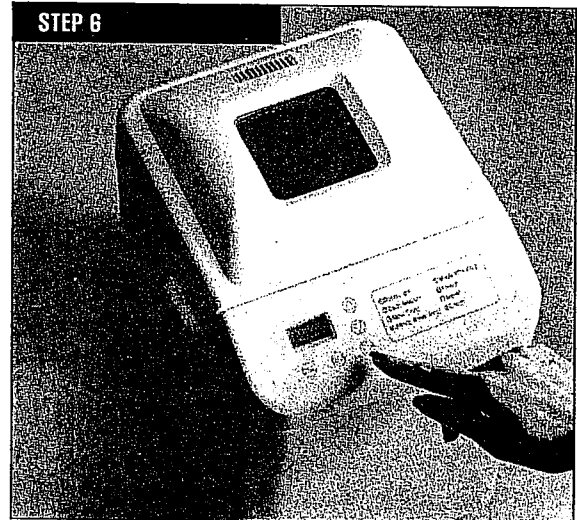


**Press the Select button to choose the cycle you want.**

Press Select once to choose Basic Light Crust. Each time you press Select again, the indicator moves to the next selection, in this order:

- Basic Medium Crust
- Basic Dark Crust
- Whole Wheat (1 lb. Reg.)\*
- Whole Wheat (1.5 lb.)\*
- French Bread
- Fruit & Nut
- Dough

\*Whole Wheat cycles will have a rest period for up to 30 minutes before kneading begins. No movement occurs in the pan. This is normal.

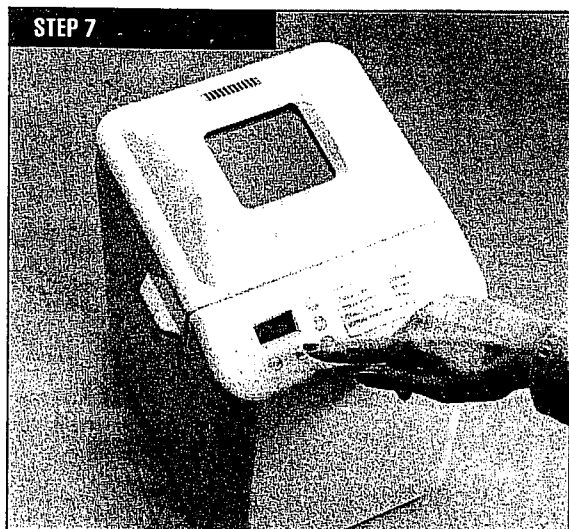

**Press Start to begin the Kneading and/or Baking cycle.**

First, the Simply Bread™ Machine mixes the ingredients.\* Then, it begins the Kneading process. During this process, the yeast begins to activate, and normally the Viewing Window begins to fog. (This will clear so you can see the progress of your loaf.) The Simply Bread™ Machine will stop Kneading after a few minutes to let the dough rise before Baking.


Before the end of the Kneading process, for Basic and Fruit & Nut cycles, the Simply Bread™ Machine beeps several times to let you know this is the time to add any fruit and nuts.

If you chose Dough, the Simply Bread™ Machine beeps to let you know when the dough is ready to be removed. Then it's up to you to shape it, give it time for a final rising period, and bake it in a conventional oven.

For other cycles, Simply Bread™ Machine continues to the Baking process.

Twenty minutes prior to the end of the entire cycle, the unit will beep.

\*Whole Wheat cycle will have a rest period for up to 30 minutes before kneading begins. No movement occurs in the pan. This is normal.

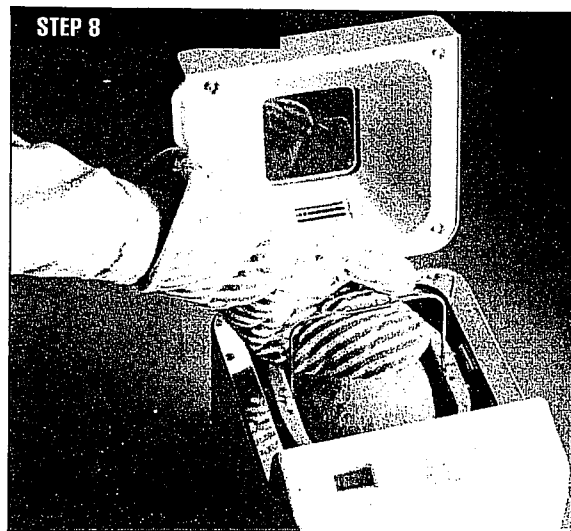


**When your bread is done, the Simply Bread™ Machine will beep. This indicates that the baking phase is completed. Press the Stop button, then put on your oven mitts and remove the Bread Pan.**

Remember that the Bread Pan and your loaf are both very hot! Be careful not to place either on a tablecloth, plastic surface, or other surface that might scorch or melt.

***\*For the Basic, Whole Wheat, French and Fruit & Nut cycles:***

If the bread is not removed immediately after baking and if the Stop button is not pressed, a controlled Holding Keep Warm cycle will begin and the machine will automatically shut off after 3 hours. While this will help prevent the bread from becoming soggy, **for best results**, remove bread immediately after Baking cycle is complete.

The Keep Warm / Convection Holding Cycle does not apply to Dough cycle.

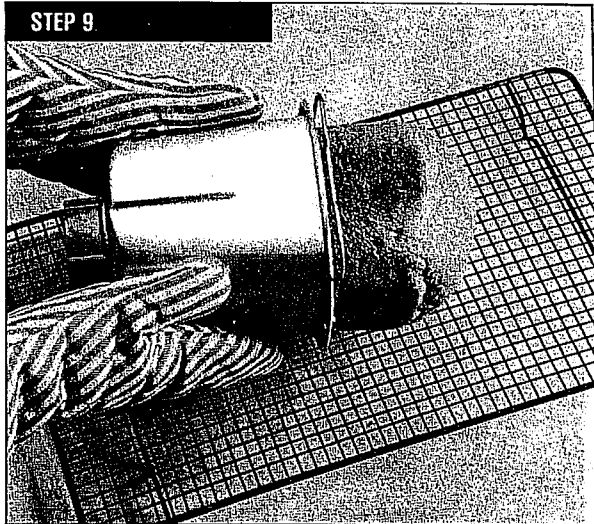

**Remove the loaf from the Bread Pan.**

Turn over the Bread Pan a few inches from the countertop and gently shake out the loaf. It's best to remove the loaf as soon as the Simply Bread™ Machine is done baking.

Place the loaf on a wire rack or other aerated cooling surface to cool. Bread should be cooled slightly (15 to 30 minutes) before it is sliced.

**If necessary, remove the Kneading Paddle from the loaf.**

Sometimes the Kneading Paddle will stick in a loaf of bread. If it does, use a non-metal utensil to gently remove it, taking care not to scratch the Kneading Paddle.

When you are done using the Simply Bread™ Machine, be sure to unplug it.



## USING THE TIMER

You can preset your Simply Bread™ Machine to cook bread from 2 hours and 40 minutes to 12 hours and 5 minutes in advance. Two hours and 40 minutes is the time it takes for the Basic Light Crust baking cycle. The Fruit & Nut and Whole Wheat (1 lb. Reg.) cycles can be preset for 12 hours and 5 minutes.

**Note:** *Don't use the Timer if your recipe includes eggs, fresh milk or other ingredients that may spoil. The Simply Bread™ Machine Timer should not be used for Fruit & Nut or Dough cycles.*

To preset your Simply Bread™ Machine, follow these steps:

1. Add the ingredients as usual, taking care not to let the yeast and liquid ingredients contact one another.
2. Close the Simply Bread™ Machine Lid and plug it in.
3. Select the Baking cycle you want. The time needed for the selected Baking cycle program appears in the Display Window.

Program Cycle	Length of Baking Cycle	Program Cycle	Length of Baking Cycle
Basic Light Crust	2:40 (2 hrs., 40 min.)	Whole Wheat (1.5 lb.)	4:20
Basic Medium Crust	2:50	French	3:20
Basic Dark Crust	3:00	Fruit & Nut	3:15
Whole Wheat (1 lb. Reg.)	4:15		

4. Press the ▲ Timer button once for each 10 minutes you want to add. (Use the ▼ button to subtract time from the Timer.) The amount of time you set is shown in the Display Window.
  - To fast forward time, continually press the ▲ button. To fast reverse, continually press the ▼ pad.
  - For example, if it is 8 o'clock and you want a loaf of bread ready at 1 o'clock, press the ▲ Timer button until the display reads 5:00, meaning it will finish baking in five hours.

**Note:** *Actual baking times will not change.*

5. Press Start to begin the Timer. The colon (:) in the time displayed begins to flash, letting you know the Timer is started. When the Display Window indicates 0:00, baking is completed.
6. If you make an error after you've activated the program and want to start over, unplug the unit, plug it in and start over. The Timer will clear and you can begin again.

**Note:** *When using the Fruit & Nut and Basic cycles, an audible signal (several beeps) will sound 5 minutes before the end of the second kneading. This tells you to add the additional ingredients (i.e. raisins or vegetables) required in the specialty bread recipes.*



### **For Best Results**

- Take care to measure ingredients accurately, using a good set of measuring cups and spoons, or a good scale. Make sure to level all dry ingredients as you measure them. Inaccurate measuring could cause unexpected results in your loaf of bread.
- In particular, be precise in measuring the water.
- Take care not to add more than 3¼ cups of flour per loaf. Excess flour will cause the bread to bake incompletely and the dough to stick to the inside of the Lid.
- After placing all the ingredients in the Baking Pan, wait 10 minutes before pressing Start, or use the Timer to add 10 minutes to the total processing cycle.

*\*See page 12 for detailed instructions.*

- Use fresh ingredients.
- Since moisture is an enemy to flour, be sure to store your flour in an airtight container.
- To keep your yeast active, store it in an airtight container in your refrigerator.
- Speaking of fresh — when using the Timer, we recommend setting it for as short a time as possible. Because ingredients are partially combined in the Bread Pan, the dough may tend to deteriorate if left too many hours, especially on a warm or humid day.
- Although you can preset the Simply Bread™ Machine for Dough, we only recommend this for prepackaged mixes only. Eggs and dairy products can easily spoil.
- Keep the Lid closed during the Baking cycle. Opening it causes uneven baking.
- After your bread has cooled completely, store it in a plastic bag or plastic wrap to prevent it from drying out.





## CLEANING INSTRUCTIONS

The Bread Pan and Kneading Paddle have non-stick surfaces that make cleaning easy.

1. After baking each loaf of bread, unplug the Simply Bread™ Machine and discard any crumbs.
2. Remove the Bread Pan from the Simply Bread™ Machine Oven and the Kneading Paddle from the Bread Pan. Then, as needed, wash the Bread Pan and Kneading Paddle inside and out with warm, soapy water. Avoid scratching the non-stick surfaces.

***DO NOT PUT THE PAN IN A DISHWASHER OR SOAK IT IN WATER.***

If the Kneading Paddle is stuck to the Drive Shaft, pour warm water in the Pan to loosen it. **DO NOT USE EXCESSIVE FORCE.**

3. Wipe the inside of the Lid and Oven with a damp cloth or sponge. If any residue has scorched on the heating plate or elsewhere, wipe with a non-abrasive scrubbing pad and wipe clean. The Lid can be removed for cleaning.

***DO NOT PUT THE LID IN A DISHWASHER.***

*This can cause the lid to warp.*

Do not use vinegar, bleach, or harsh chemicals to clean the Simply Bread™ Machine.

Do not soak the Pan for a long period of time — this could interfere with the free working of the Drive Shaft.

Be sure the Simply Bread™ Machine is completely cooled before storing.

The inner casing contains the heating element and drive base. Therefore, when cleaning, **NEVER** pour water, solvents or cleaning solutions into this area.

### Caution

**To avoid electric shock, unplug the Simply Bread™ Machine before cleaning!**



## TROUBLE-SHOOTING

Symptom	Possible Solutions
Bread has an offensive odor	<p>Check to be sure you added the correct amount of yeast. Measure carefully — too much yeast will cause an unpleasant odor and may cause the loaf to rise too high.</p> <p>Be sure to use only fresh ingredients.</p>
Baked bread is soggy or the bread's surface is sticky	<p>Remove the bread from the Bread Pan as soon as it is done baking. Leaving it in the pan allows condensation to collect on the sides touching the pan.</p> <p>Also be sure to cool the loaf on a wire rack; cooling it on a countertop causes the side next to the counter to become soggy.</p>
Start button doesn't start the machine	<p>Make sure the machine is plugged in.</p> <p>If nothing appears in the Display Window, press Select to choose your Baking cycle. (<b>You must select a Baking cycle before pressing Start.</b>)</p> <p>If the baking area is too hot, the Simply Bread™ will not start because of an automatic safety feature. Remove the Bread Pan with your ingredients, and wait until the Simply Bread™ cools down — about 20 minutes — before starting a new loaf.</p>
The Simply Bread™ stopped and “000” flashes	<p>This happens if you press the Stop button, if you unplug the machine, or if there is a power outage. In each case, the Simply Bread™ can't be restarted for this cycle. Discard the contents of the Bread Pan and start again with new ingredients.</p>
The Kneading Paddle was stuck in the bread	<p>Make sure the Kneading Paddle is mounted properly before adding ingredients to the Bread Pan and baking.</p> <p>Sometimes denser or crustier loaves of bread may pull the Kneading Paddle out with them when you remove the loaves after baking. When this happens, use a non-metal utensil and gently remove the blade from the bottom of the loaf.</p>



## TROUBLE-SHOOTING *(continued)*

Symptom	Possible Solutions
The bread rose too high	Make sure not to add too much yeast, water or flour. Too much of any of these may cause the loaf to rise more than it should.
The bread didn't rise enough	<p>Make sure not to add too little yeast, water or sweetener.</p> <p>Make sure to add ingredients in the proper order: liquids, dry ingredients, yeast. Make sure yeast doesn't get wet until the Simply Bread™ Machine mixes the ingredients together.</p> <p><i>Note: Typically, bread made with whole grain flours will not rise as high as bread made with refined flours.</i></p>
The dough looks like batter, or the dough ball is still sticky, not smooth and round.	During the Kneading process, add 1 tablespoon of flour at a time, letting it mix in well. For most breads, your dough ball should become round, smooth, not sticky to the touch, and should bounce back when you press it with your finger.
The dough ball is lumpy or too dry	During the Kneading process, add 1 tablespoon of water at a time, letting it mix in well.
The bread didn't rise at all	Make sure yeast is not left out. Also check the date code on the yeast and that it is always the last ingredient put into the pan. Make sure the yeast doesn't come into contact with any liquid ingredients.
The bread is caved in	Make sure liquids are measured correctly. Next time, reduce your liquids by 2 tablespoons. If you're adding fruits or vegetables, make sure they are well drained.



## TROUBLE-SHOOTING *(continued)*

Symptom	Possible Solutions
E:01 displays when you press Start button	The Simply Bread™ Machine is too hot (over 100°F/38°C) to begin preparing another loaf. Remove the Bread Pan with your ingredients, and wait until it cools down — about 20 minutes — before preparing a new loaf.
E:02 displays when you press Start button	The Simply Bread™ Machine is too cold. Unplug the machine and allow it to heat up to room temperature, then try again.
E:03 E:04 E:05 E:08 displays when you press Start button	Unplug the Simply Bread™ Machine and contact Salton/MAXIM Service Department at 1-800-233-9054.



## SPECIFICATIONS

Model	BB4
Power Requirements	120V AC
Power Consumption	<u>430 watts</u>
Capacity (Flour)	3¼ cups
Timer Range	2 hours 40 minutes (2:40) to 12 hours 5 minutes (12:05)
Dimensions	8.9" x 10.9" x 12.6"
Window	3.3" x 3.3"
Added Features	<ul style="list-style-type: none"><li>• Non-stick Bread Pan</li><li>• Removable, heavy gauge, non-stick Kneading Paddle</li><li>• Fruit and Nut add-in Beeper</li><li>• Extra large Viewing Window</li><li>• French Bread Cycle</li></ul>
Holding Cycle	If bread is not removed after Baking cycle, the Simply Bread™ Machine shifts into a controlled rate Auto Cool Down cycle which reduces the bread temperature gradually. Shuts off after 60 minutes.*

\*Except for Dough functions.

# ONE-YEAR LIMITED WARRANTY

This Salton/MAXIM product warranty extends to the original consumer purchaser of the product.

**Warranty Duration:** This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date except for the Bread Pan and Kneading Paddle which are warranted for 90 days.

**Warranty Coverage:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Salton/MAXIM Housewares, Inc., or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible. Wear and tear for Bread Pans and Paddles is not considered a manufacturer's defect.

**Warranty Disclaimers:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for Salton/MAXIM Housewares, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

**Warranty Performance:** During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at Salton/MAXIM's option) when the product is returned to the Salton/MAXIM facility. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

## Service and Repair

Should the appliance malfunction, you should first call toll-free 1-800-233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER CUSTOMER SERVICE stating that you are a consumer with a problem.

**In-Warranty Service:** For an appliance covered under the warranty period, no charge is made for service or postage. Call for pre-paid return mailing label. (U.S. Customers Only)

**Out-of-Warranty Service:** A flat rate charge by model is made for out-of-warranty service. Include \$15.00 for return shipping and handling.

Salton/MAXIM cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem; your full return address and daytime phone number; a note describing the problem you experienced; a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

Return the appliance to:

ATTN: Repair Department  
Salton/Maxim Housewares, Inc.

708 SOUTH MISSOURI ST.

MACON, MO 63552

For more information on Salton/MAXIM products:

visit our website: URL <http://www.breadman.com> or E-mail us at [SALTON550@aol.com](mailto:SALTON550@aol.com)

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

If after reading this instruction  
booklet you still have questions about  
using the Simply Bread™ Machine, please write or call:

**Salton/MAXIM Housewares, Inc.**

550 Business Center Drive

Mt. Prospect, IL 60056

1-800-233-9054

Monday - Friday 9am - 5pm CST

or visit our website:

<http://www.homecreations.com>

Part No. 60131 A 12/95

Printed in China  
BB4