


Relaxor[®]

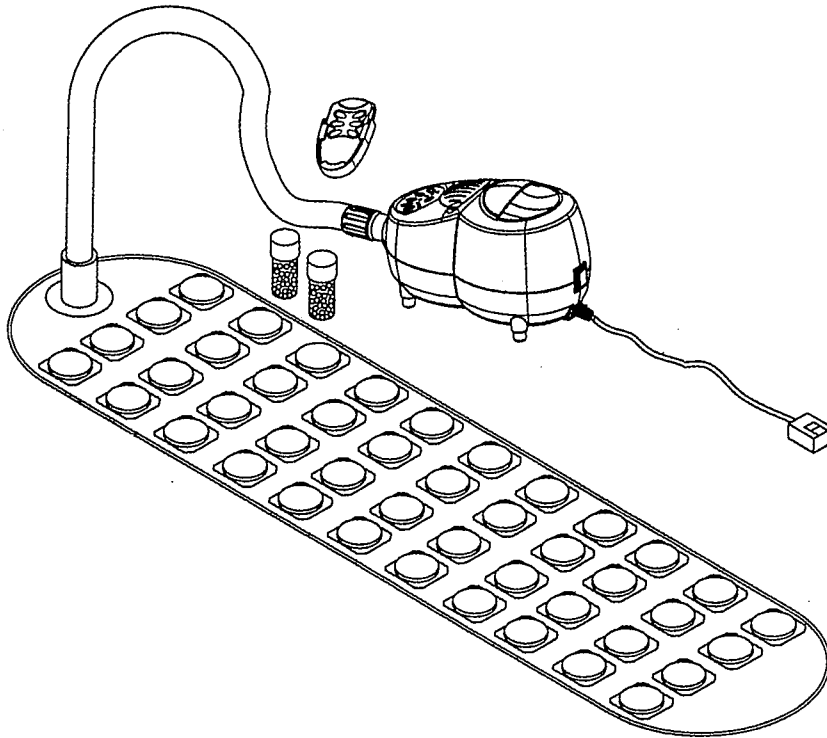

Bath Spa Mat WITH HEAT

OWNER'S MANUAL &
OPERATING INSTRUCTIONS

Model BSM8RE

SPA THERAPY[™]

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

Read all instructions before using the appliance.

CAUTION:

1. Do not allow the Control Unit to become wet. Only the Hose and Mat should come into contact with water.
2. Do not obstruct any opening of the Control Unit.
3. Disconnect the Hose and Mat after use.
4. Mat may move when entering or exiting bathtub.

DANGER: To reduce the risk of electrical shock:

5. Always unplug from outlet immediately after using and before cleaning.
6. Control Unit should never be placed in water.
7. Do not reach for an appliance that has fallen into water. Unplug it immediately.
8. Do not place or store appliance where it can be pulled into a tub or sink. Do not place in or drop into water or other liquid. Store in a dry place
9. Do not attempt to plug or unplug unit while you are in the water.

WARNING: To reduce the risk of burns, fire, electric shock or injury to persons:

1. An appliance should never be left unattended when plugged in. Unplug unit from outlet when not in use and before putting on or taking off attachments.
2. Do not leave plugged in when not in use.
3. Close supervision is necessary when this appliance is used by, on, or near children, invalids or disabled persons.
4. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Relaxor®.
5. Never operate this appliance if it has a damaged cord or plug, if it has been dropped or damaged, or dropped into water. Refer to the warranty section of this manual. Do not use appliance if it is not working properly.
6. Do not operate under a blanket or pillow. Excessive heating may occur and cause fire, shock or injury to persons.
7. Keep cord away from heated surfaces.

IMPORTANT SAFEGUARDS (Con't.)

8. Continued operation for more than 30 minutes is not recommended. Extensive use could lead to the product's overheating. In the event of overheating, discontinue use and allow the unit to cool before operation.
9. Disconnect the power cord by gripping the plug, not by gripping the cord itself.
10. Never block the air openings of the appliance, or place it on a soft surface such as a bed or couch. Keep openings free of lint, hair, dust, etc.
11. Never drop or insert any object into air openings or hose unless specified by Relaxor®.
12. Never use while sleeping. Do not fall asleep while using.
13. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
14. Do not stand on appliance.
15. Do not carry this appliance by the Power Cord or use the cord as a handle.
16. Never operate this appliance near an electrical oven or any heat source.
17. This appliance is designed for household use only.
18. Do not use if you have sensitive skin or poor circulation. The use by unattended children or incapacitated persons may be dangerous.
19. Never use while sleepy or drowsy.

CAUTION:

1. Never use this appliance as a substitute for medical attention. Persistent ailments and symptoms could indicate a more serious condition.
2. This unit should not be used in the following cases: Tuberculosis, benign and malignant tumors, hemorrhages, inflammations of the skin, phlebitis and thrombosis, open and fresh wounds, bruises, broken skin or varicose veins, or undetermined calf pain.
3. Consult your physician if you have any therapeutic questions regarding its use.
4. Do not use on any unexplained pain; consult your physician.
5. Discontinue use if pain or swelling occurs after application.
6. Do not use on any part of the body that is anesthetized.
7. Do not use on any part of the body where surgery was performed.

IMPORTANT SAFEGUARDS (Con't.)

8. Not to be used by children under 12 years of age.
9. Do not use if pregnant.
10. Do not use if you have high blood pressure or a history of heart problems.
11. Do not use in inflatable tubs or pools.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). This plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet reverse the plug. If it still does not fit contact a qualified electrician. Do not attempt to modify the plug in any way.

ALCI SAFETY FEATURE

This unit's plug is equipped with an Appliance Leakage Circuit Interrupter (ALCI), a safety feature that renders it inoperable under some abnormal conditions, such as immersion in water. To make sure that the ALCI is functioning properly perform the following test:

1. Plug in appliance and press POWER, then press the TEST Button on the plug.
2. The appliance should stop functioning. There will be an audible click and the RESET Button will pop out.
3. To reset for use, press RESET Button on plug while the unit is unplugged. Unit is now ready for use.
4. If ALCI is not functioning properly, return the unit to an authorized service center.
5. Be sure to perform this test each time you wish to use this appliance.
6. If the ALCI activates and turns off the unit while in use, this could indicate a malfunction with the appliance. If this occurs return the unit to an authorized service center.

**Congratulations on your purchase of the Relaxor®
Bath Spa Mat.**

Your Bath Spa Mat is an ideal way to truly relax while enjoying an invigorating massage in the tub.

SETTING UP YOUR BATH MAT

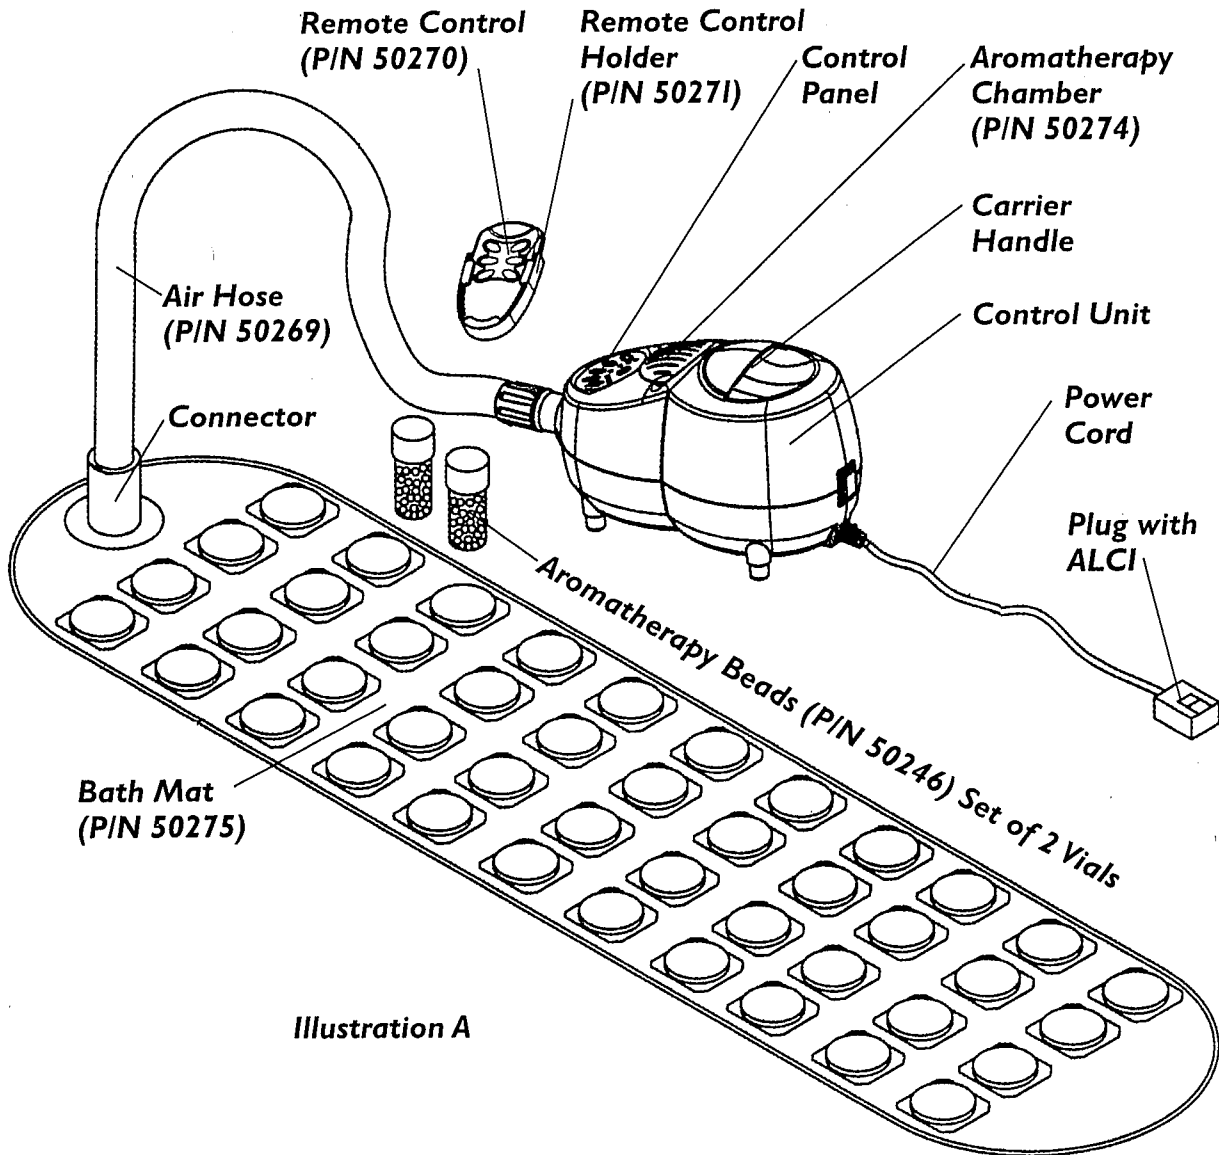


Illustration A

SETTING UP YOUR BATH MAT (Continued)

1. Remove unit and all accessories from box. (See Illustration A.)
2. Be sure the Control Unit is unplugged. Place Control Unit on the floor or a level, sturdy surface near your bathtub. Do not place unit where it can fall into the bathtub.
3. Insert the Air Hose into the Connector on the Bath Mat.
4. Using the Suction Cups, place Bath Mat on the floor of your bathtub. Dampening the surface with a small amount of water will help the adhesion of the Suction Cups. (See Illustration B.)

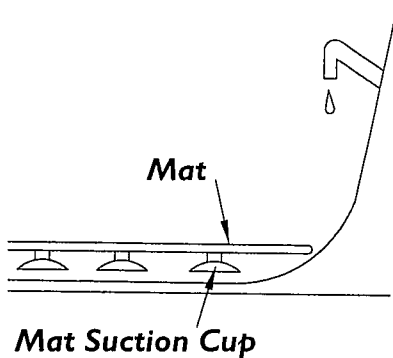


Illustration B

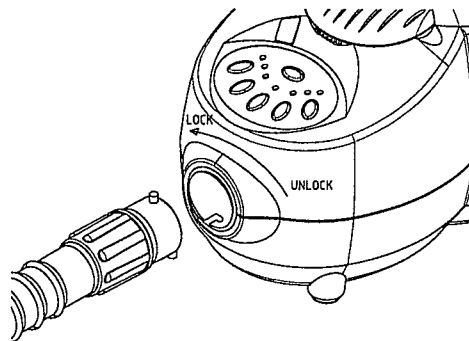


Illustration C

5. Insert the Air Hose into the Control Unit and turn counterclockwise to lock in place. (See Illustration C.)

DANGER! Please install Aroma Container and Lid on the unit always (even if empty) to avoid damage to the Control Unit.

6. DRY HANDS THOROUGHLY
7. Plug unit into standard household 120V electrical outlet.
8. Fill tub to a comfortable level with water, do not overfill. (See Illustration D.)
9. Slowly and carefully enter tub and lie down on Mat.


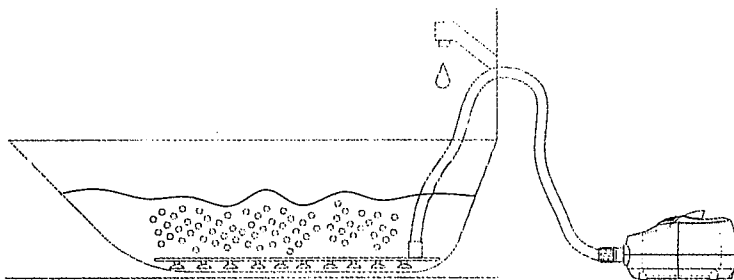


Illustration D

CAUTION: Mat may shift slightly while you are entering tub.

INSTRUCTIONS FOR USE


1. Press **POWER** Button to activate the unit. The corresponding **INTENSITY LED** will illuminate. Unit will activate in the default **LOW INTENSITY** Mode.
2. Press **INTENSITY** Button to toggle through the various intensities: **LOW, MEDIUM** and **HIGH**. Corresponding **LED Indicators** will light to indicate which mode the unit is in. Both Indicators will illuminate to denote **HIGH**.
3. When finished, press the **POWER** Button to turn unit off. Make sure hands are dry and unplug unit from outlet.

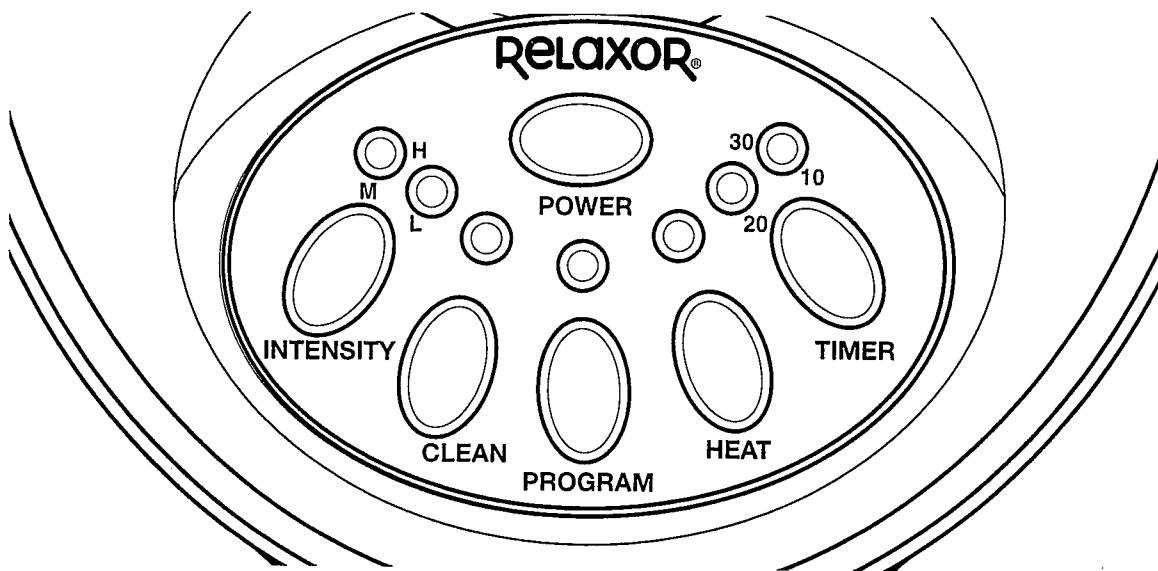

FEATURES

REMOTE CONTROL

This unit can be operated with the Remote Control. All the Buttons on the Remote correspond to a function of the unit. Use the Remote just as you would the Control Panel, however, the Remote Control does not provide an LED illumination of selections as does the Control Unit. Also, the Remote comes with a Holder that can be mounted. Simply wet the Suction Cup and press firmly against bathroom wall or to the side of the bathtub.

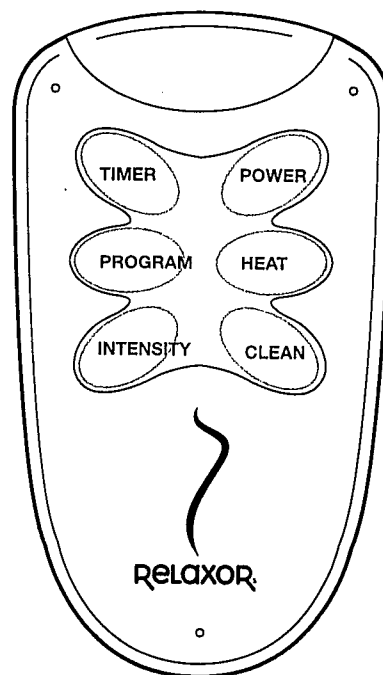

FEATURES (Continued)

TIMER

When the **POWER** Button is pressed, the unit automatically activates the default 10 Minute Timer. The **TIMER** Function automatically shuts off the unit after a predetermined period of: 10, 20 or 30 minutes. The two Timer LED Indicators illuminate to denote amount of time remaining.

To operate:

1. When the unit is turned on it automatically activates the default 10 Minute Timer. The LED on the right will flash, indicating that the 10 Minute Timer has been selected.
2. To select the 20 Minute Timer, press the **TIMER** Button once. The LED on the left will flash, indicating that the 20 Minute Timer has been selected.
3. To select the 30 Minute Timer, press the **TIMER** Button a second time. Both LED's will flash, indicating that the 30 Minute Timer has been selected.
4. To deactivate the Timer, press the **TIMER** Button a third time. Both of the Timer LED's will turn off indicating that the **TIMER** Function has been deactivated.

PROGRAM

The **PROGRAM** Function allows you to relax while the unit varies the Intensity of the massage for you. There are three different massages to choose from. Press the **PROGRAM** Button once to select massage pattern #1, the corresponding LED will illuminate green. Press the **PROGRAM** Button a second time for massage pattern #2, the corresponding LED will illuminate red. Press the **PROGRAM** Button a third time for massage pattern #3, the corresponding LED will illuminate orange. (See Illustration E.)

To cancel the **PROGRAM** Function, press the **PROGRAM** Button a fourth time. The unit will revert to the default **LOW INTENSITY** setting.

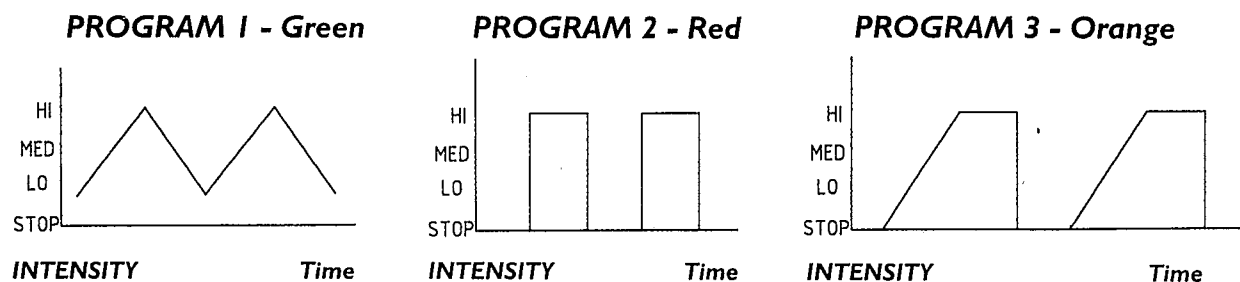


Illustration E - Massage Patterns

FEATURES (Continued)

HEAT

This Bath Spa Mat has two Heaters. One Heater automatically heats the bubbles, and a second Heater provides an extra burst of heat on command. To activate, simply press the HEAT Button after the Power ON or choosing the PROGRAM function. The amount of heat dispersed will vary with the INTENSITY of the bubbles, from LO to HI or OFF. To deactivate the HEAT Function, press the HEAT Button a second time.

NOTE: The HEAT Function will not heat the water, only the bubbles.

CLEAN

The CLEAN Function makes it easier to prepare the Unit for storage.

To use:

- 1. Be sure unit is off — the INTENSITY LED should not be illuminated.*
- 2. Without removing Mat, drain all the water from your bathtub.*
- 3. Let the Mat drain briefly over the side of the bathtub.*
- 4. Place the Mat back into the the tub, press the CLEAN Button. The CLEAN, 10 Minute Timer and LOW INTENSITY LED's will illuminate. Air will blow through the Mat at a high rate that will help flush out the excess water.*
- 5. When finished, press the POWER Button to deactivate the CLEAN Function.*

FEATURES (Continued)

FRAGRANCE

The Aromatherapy Chamber can be used to add fragrance to your experience. There are 2 kinds of Aroma Beads included with this unit.

- **Relaxing:** Purple Aroma Beads help to relax or body and mind.
- **Revitalizing:** Green Aroma Beads help awaken your senses.
 1. Remove Aromatherapy Beads from outer packaging and select desired aroma: Rejuvenating or Relaxing.
 2. Remove Aromatherapy Chamber from unit.
 3. Remove Aromatherapy Chamber Lid and pour desired amount of Aromatherapy Beads in Aromatherapy Chamber Base. Do not overfill or pour Beads through the hole in Aromatherapy Chamber Base. (See Illustration F.)
 4. Replace Lid on Aromatherapy Chamber Base and replace on unit. As soon as the unit has been powered ON, the aroma will be produced.

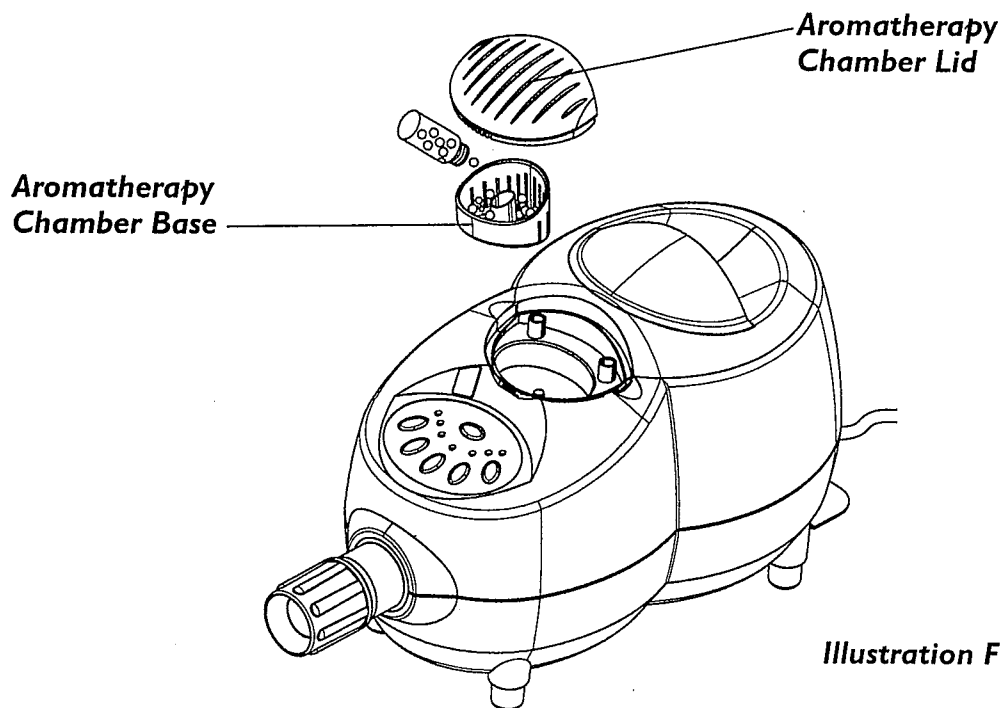


Illustration F

NOTE: After using, be sure to return Beads to their Vial for storage, closing tightly to preserve the scent.

NOTE: The Aromatherapy Chamber should always be in place while unit is active, even if Aromatherapy Chamber is empty.

NOTE: Do not fill the liquid aroma or essential oil into aroma container.

NOTES ON AROMATHERAPY BEADS

- *Keep Aromatherapy Beads out of the reach of children*
- *Do not take Aromatherapy Beads internally. In case of accidental ingestion, contact a physician immediately.*
- *Take care when handling Aromatherapy beads*
- *Do not allow Aromatherapy Beads to come into contact with eyes. If this occurs, flush out eyes with plenty of clean, fresh water and call a physician.*
- *Only use Aromatherapy Beads included in this package, or sold by the manufacturer of this appliance. Other Aromatherapy Beads may not be safe for use with this appliance.*
- *Some Aromatherapy Beads may cause an allergic reaction in certain people. If this occurs you should stop using the beads, and, if symptoms persist, consult a physician.*
- *Do not use Aromatherapy Beads in the presence of babies under six (6) months old.*
- *Do not use Aromatherapy Beads in the presence of pregnant women or persons with breathing difficulties without first consulting a physician.*

USER MAINTENANCE INSTRUCTIONS

The Control Unit contains no user serviceable parts. If damaged, refer to the warranty section of this manual.

The Remote Control has a 3V (Lithium CR2032) battery installed.

CLEANING AND DISINFECTING YOUR BATH SPA

- *Clean the Control Unit with a soft cloth. Clean the Bath Mat Pads with a mild detergent or soap. Cleaning is recommended after each use.*
- *Disinfect the Bath Spa periodically to keep it bacteria-free. With frequent use, disinfect weekly.*

STORAGE

Take the Mat out of the bathtub. To avoid damage, carefully loosen and remove the Suction Cups with your hands, before removing Mat. Do not fold the Suction Cups.

Store unit in its box, or in a clean, dry place. Make sure unit is unplugged after each use and before storing.

CAUTION: READ SAFETY RULES AND OPERATING INSTRUCTIONS CAREFULLY. THIS PRODUCT IS INTENDED FOR INDOOR USE ONLY.

LIMITED ONE YEAR WARRANTY

Warranty: This Relaxor® product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

Warranty Coverage: This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Implied Warranties: ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair: Should the appliance malfunction, you should first call toll-free 1 (800) 233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number BSM8RE when you call.

In-Warranty Service (USA): For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization 1 (800) 233-9054.

Out-of Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$ 10.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

For Products Purchased in the USA, but Used in Canada: You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

Risk During Shipment: We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

To return the appliance, ship to:

ATTN: Repair Center
Salton, Inc.
708 South Missouri Street
Macon, MO 63552

To contact us, please write to, call, or email:

Salton, Inc.
P.O. Box 1637
Columbia, MO 65205-1637
1-800-233-9054
E-mail: Salton@Saltonusa.com

Limitation of Remedies: No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and **in no event shall Salton be liable for any incidental or consequential damages, losses or expenses.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Legal Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For more information on Salton products: visit our website: www.salton-maxim.com

©2001 Salton, Inc. All rights reserved.

Made in China

P/N 60834

8/01