


# Relaxor<sup>®</sup>

## DEEP♦KNEAD<sup>™</sup>



**(((12)))Massaging Motor  
Seat Topper with Deep  
Kneading Shiatsu and  
Soothing Heat**

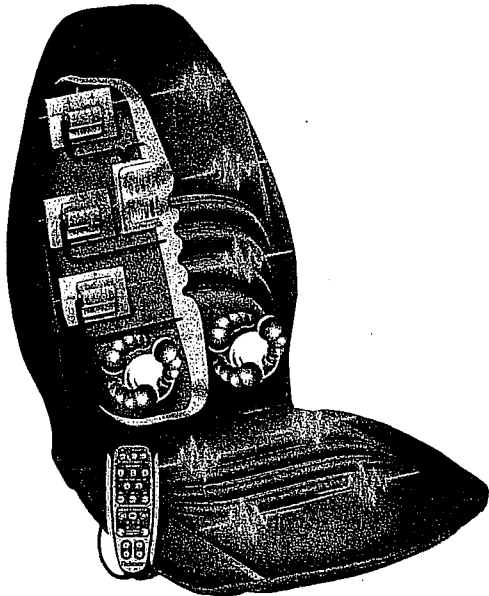

**Model  
1001**

**OWNERS MANUAL and  
OPERATING INSTRUCTIONS**

Dear Customer:

Welcome! You are now the proud owner of a **Relaxor** product.

Thank you for purchasing a **Relaxor** DEEP♦KNEAD<sup>™</sup> Seat Topper. In order to enhance your enjoyment and maximize the benefits of your new purchase, please take a few moments to read the following instructions.

This unique massage product is a scientifically designed electro-mechanical system with built-in Deep Kneading Shiatsu massagers and multiple pulsing transducers. It provides many customized settings allowing you to create your own personalized massage.

Total relaxation through finger-like pressure massage is now yours to command. With soothing heat, you have a winning combination for your comfort.


We know you will enjoy your new **Relaxor** massage product.

# Relaxor®


## FEATURES AND BENEFITS

### Deep Knead For Deep Relief

#### ENJOY THESE PRODUCT BENEFITS!

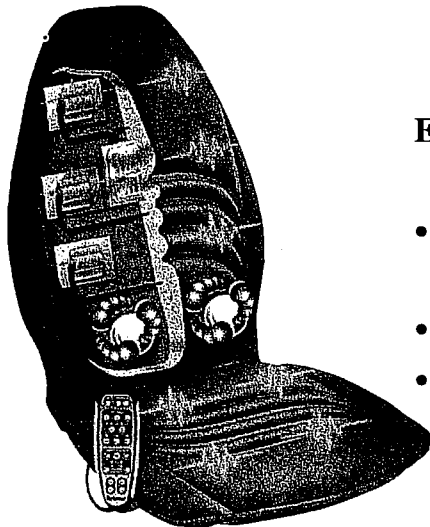

- Therapeutic soft tissue massage with Deep Kneading Shiatsu for that penetrating relief from everyday tension
  - Hundreds of customized settings for the ultimate massage
  - 12 Motors: 10 Soft Tissue Massage Motors  
2 Deep Kneading Shiatsu Motors
- Soothing heat in the upper/mid-back region for the ultimate massage
  - 5 different styles of massage allow you to personalize your experience
  - Variable speed massage cycle
  - Adjust intensity to choose your massage strength
  - Ergonomically designed for optimum support and comfort

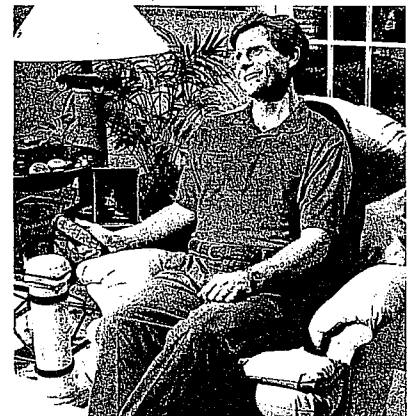

- Easy to operate state-of-the-art control wand
- Instantly converts for home, office, or auto use
- Lightweight, long lasting fine knit durable cover
- High quality flame retardant foam interior
- No assembly required - slips easily on and off most chairs and auto seats
- Handsome U.S. design and engineering


# Relaxor®

## HOW TO OPERATE YOUR DEEP♦KNEAD™ SYSTEM


### DEEP♦KNEAD™

Press the DK button to activate the Deep Kneading Shiatsu massage. Located in the lumbar area, it perfectly complements the 10 soft tissue massaging motors and is the ultimate for a complete massage.


The DEEP KNEAD massage feature operates independently of the main power button. Use it with or without the other 10 motor massage features and with or without heat.

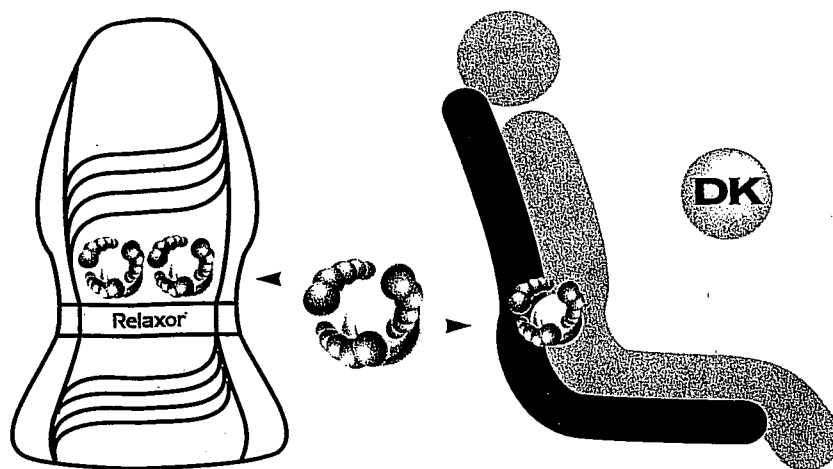

*Note: As an added benefit, the DEEP KNEAD™ feature has a built-in preset timer for 15 minutes of use with a Pressure Sensitive Activator built into the cushion. To activate, simply press DK button then lean against lumbar area of cushion (a) and Deep Kneading action begins. Lean forward and action stops (b). DEEP KNEAD™ shuts off after 15 minutes. To restart, simply press DK button again.*

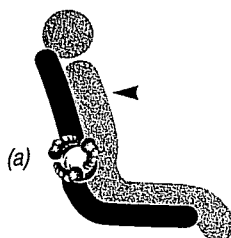

Lean back to start Deep Knead™ action.

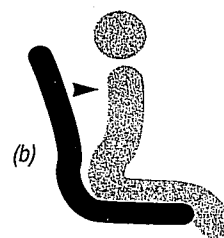

Lean forward to stop Deep Knead™ action.


### VARIATION THERAPY:

Two pre-set variations using the top four massaging motors in Zones 1 & 2. (Located in upper shoulder and mid-back)


*Note: Speed and Intensity are regulated by the SPEED and INTENSITY buttons (refer to SPEED and INTENSITY)*

### MASSAGE MOTOR ACTION:

Variation Therapy lights show activated motors

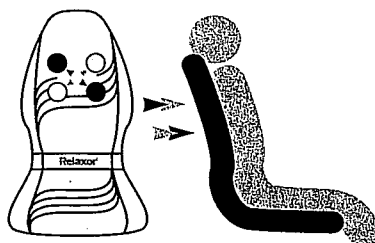

Alternates outside motors diagonally

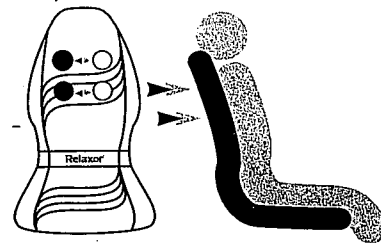

Alternates two left and two right motors

### INTENSITY:

- Controls strength of massage
- Press arrow keys for desired effect



### SPEED:

- Controls cycle speed of massaging motors in WAVE, PULSE or VARIATION THERAPY
- Press arrow keys for desired effect



# Relaxor®

## HOW TO OPERATE YOUR DEEP ♦ KNEAD™ SYSTEM

### POWER:




- Turn on: Press PWR button
- Turn off: Press PWR button again

### 15 and 30 minute timers:

- Press PWR button:

Green light = 15 minute timer

- Hold down PWR button: Amber light = 30 minute timer
- To reset after timer shuts off: Press the PWR button
- To reset timer while on: Press PWR button twice



### SOOTHING HEAT:

LO or HI

- Works independently of massage
- 30 minute timer
- To reset after timer shuts off: Press the Lo or Hi button
- To reset timer while on: turn HEAT off, then turn HEAT back on

*Note: Unit may be turned on by pressing any ZONE key (1-5) or VARIATION THERAPY key*

### (((12))) Motors

- 10 Soft Tissue Massaging Motors
- 2 Deep Knead Shiatsu Motors

### ZONES:

10 Soft Tissue Massaging Motors in 5 Zones

2 Motors - Upper Shoulder Area


2 Motors - Upper Back Area

2 Motors - Mid Back Area


2 Deep Knead Shiatsu Motors - Lumbar Area

2 Motors - 1 under each Upper Thigh

2 Motors - 1 under each Lower Thigh

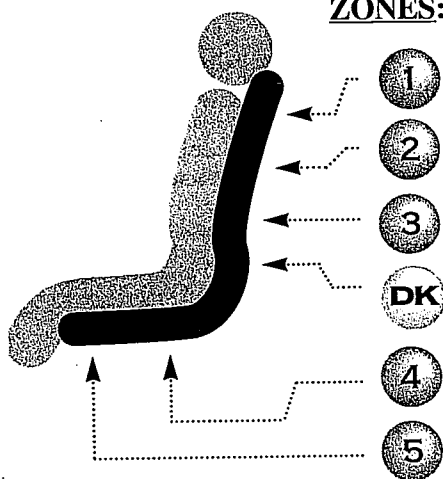


### WAVE

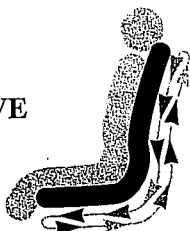

Massaging motors cycle down and up in a wave-like sensation

- Press WAVE
- Select any or all Zones (1-5)  
(To deactivate zone, re-press Zone Key (1-5))


### PULSE

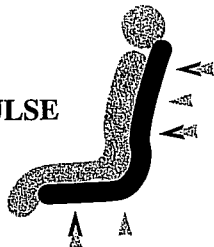

Massaging motors pulsate on and off

- Press PULSE
- Select any or all Zones (1-5)  
(To deactivate zone, re-press Zone Key (1-5))

### SELECT

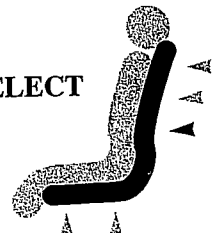

Isolates massage area

- Press SELECT
- Select any or all Zones (1-5)  
(To deactivate zone, re-press Zone Key (1-5))



# IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using the **DEEP♦KNEAD™** Seat Topper System

## DANGER!

### To reduce risk of electric shock:

1. Always unplug the product from the electrical outlet immediately after using and before cleaning.
2. Do not reach for a product that has fallen into water. Unplug immediately.
3. Do not use while bathing or in a shower.

## WARNING!

### To reduce risk of burns, fire, electric shock, or injury to persons:

1. Your DEEP♦KNEAD™ product should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
2. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate the DEEP♦KNEAD™ product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Contact your dealer for instructions on returning it for examination and repair.
4. Close supervision is necessary when this appliance is used by, on, or near children or disabled persons.
5. Do not use outdoors.
6. Keep the cord away from heated surfaces.
7. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Use heated surfaces carefully. May cause serious burns. Do not use heated surfaces over insensitive skin areas or in the presence of poor circulation.
9. If you are under a physician's care and/or a condition requiring the use of any medical device, please consult your health care provider prior to using this product.

## MAINTENANCE INSTRUCTIONS:

No user maintenance of this product is required. If the System does not function, be sure...

- (a) The TRANSFORMER is plugged into an electrical outlet.
- (b) The Transformer cord and COMMAND WAND cord are plugged into, and fully engaged, in their respective receptacles.

If there is a malfunction of any kind, contact your dealer for instructions on returning it for examination and repair.


OPERATE  
YOUR  
SYSTEM  
ACCORDING  
TO THIS  
MANUAL

USE ONLY  
THE POWER  
DEVICE  
SUPPLIED


# SAVE THESE INSTRUCTIONS!

# Relaxor®


## OTHER FINE PRODUCTS FROM THE LEADER IN RELAXATION

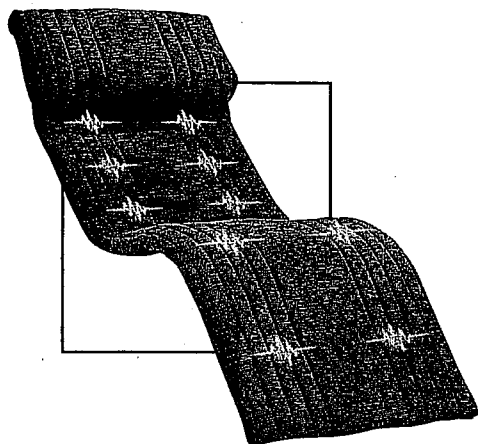

**#824 CONTOURCARESSTM**  
10 soft tissue massaging motors plus soothing heat. Contour pillow built in.

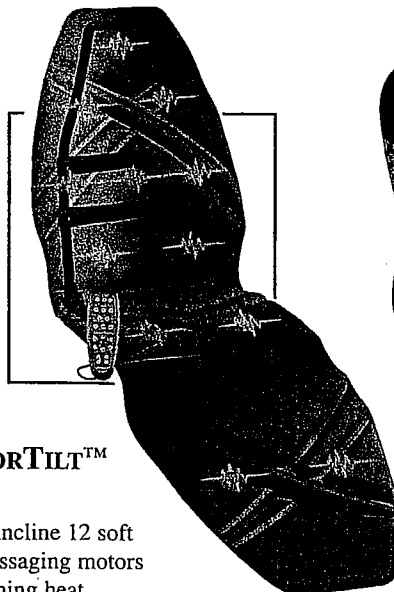



**#998 COMFORTILT™ PLUS**  
Variable incline 12 soft tissue massaging motors plus soothing heat. Use with or without frame.

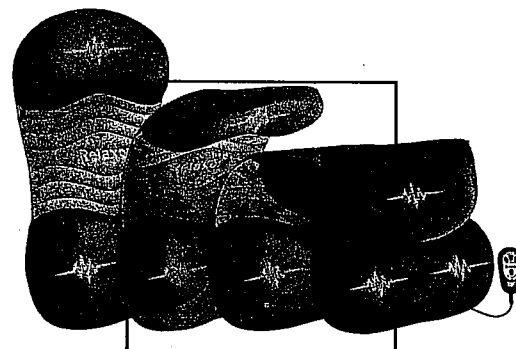

**#340 BACK2SHOULDERS™**  
Converts in seconds from back massager to neck and shoulder massager. 3 motors, 18 customized settings and soothing heat. Great for home, office and auto.

**#280 & 281 CALMING POOLS™**

The "Calming Pool" is a handcrafted water fountain designed to capture the elements of nature by combining water, tropical plant and assorted rocks and stones. The soothing sound of flowing water brings a sense of peace and tranquility, while relieving stress and tension.

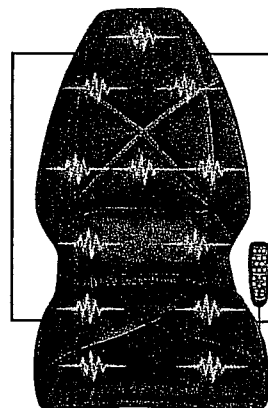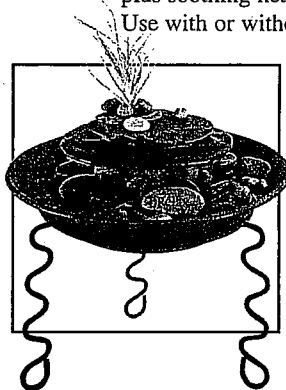

**#964 RELAXOR® MASSAGING SEAT TOPPER**  
12 Motor Massage Seat Topper with Soothing Heat. Features dozens of settings for an all over massage. Great for home, office and auto.

# Relaxor®

The Leader in Relaxation™

## Relax and Enjoy!

### Limited One Year Warranty

If your DEEP•KNEAD™ SYSTEM does not operate properly, or you need assistance for any reason, call:

Customer Service - JB Research, Inc.  
Los Angeles Corporate Office • Bellflower, CA

**1-800-RELAXOR**

Outside U.S. write to:

Customer Service

9062 Rosecrans Ave. Bellflower, CA 90706

PATENTS PENDING



#15129

899246-01