


# **BODY COMFORT** by Relaxor

**DEEP◆KNEAD™ ORBITOR™**

**((6)) Massaging Motor  
Seat Topper with Deep  
Knead™ Orbiting Shiatsu  
and Soothing Heat**

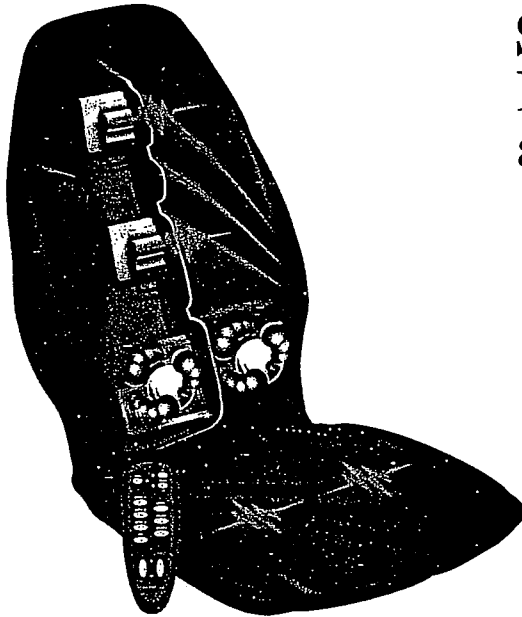

**Model  
1050**

**OWNERS MANUAL and  
OPERATING INSTRUCTIONS**

Dear Customer:

Welcome! You are now the proud owner of a **BODY COMFORT** product.

Thank you for purchasing a **BODY COMFORT DEEP◆KNEAD™ ORBITOR™** Seat Topper. In order to enhance your enjoyment and maximize the benefits of your new purchase, please take a few moments to read the following instructions.

This unique massage product is a scientifically designed electro-mechanical system with built-in Deep Knead™ Orbiting Shiatsu massagers and multiple pulsing transducers. It provides many customized settings allowing you to create your own personalized massage.


Total relaxation through finger-like pressure massage is now yours to command. With soothing heat, you have a winning combination for your comfort.

We know you will enjoy your new **BODY COMFORT** massage product.

**BODY COMFORT™**  
by Relaxor®

## FEATURES AND BENEFITS

### Deep Knead™ For Deep Relief

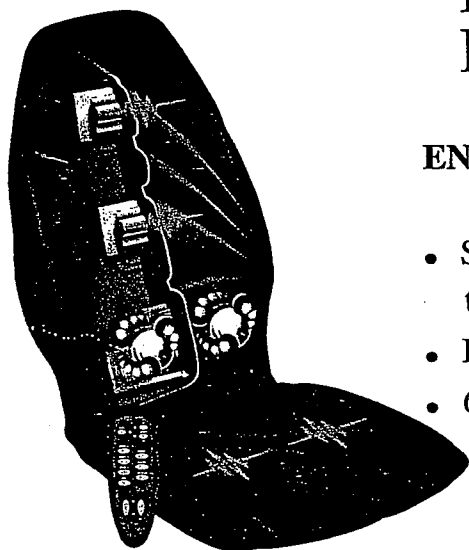

#### ENJOY THESE PRODUCT BENEFITS!

- Soothing massage with Deep Knead™ Orbiting™ Shiatsu for that penetrating relief from everyday tension
- Dozens of customized settings for the ultimate massage
- 6 Motors: 4 Massage Motors  
2 Deep Knead™ Orbiting™ Shiatsu Motors

- Soothing heat in the lumbar area for the ultimate comfort
- 3 different styles of massage allow you to personalize your experience
- Variable speed massage cycle
- Adjustable intensity to choose your massage strength
- Ergonomically designed for optimum support and comfort
- Easy to operate state-of-the-art control wand




- Instantly converts for home, office, or auto use
- Lightweight, long lasting fine knit durable cover
- 15/30 minute massage shut-off timer
  - Ⓚ DEEP KNEAD™ has a 15 minute shut-off timer
- High quality flame retardant foam interior
- No assembly required - slips easily on and off most chairs and auto seats
- Handsome U.S. design and engineering

# BODY COMFORT™ by Relaxor®

# HOW TO OPERATE YOUR DEEP♦KNEAD™ ORBITOR™ SYSTEM

## POWER:


- Turn on: Press PWR button
- Turn off: Press PWR button again
- 15 and 30 minute timers:
  - Press PWR button:
    - Green light = 15 minute timer
  - Hold down PWR button:
    - Amber light = 30 minute timer
  - To reset after timer shuts off: Press the PWR button
  - To reset timer while on: Press PWR button twice



*Note: Unit may be turned on by pressing any ZONE key (1-3)*


## SOOTHING HEAT:

- LO or HI
- Works independently of massage
- 30 minute timer
- To reset after timer shuts off: Press the LO or HI button
- To reset timer while on: turn HEAT off, then turn HEAT back on

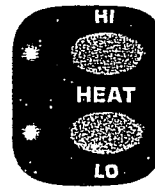

- (((6))) Motors**
- 4 Massaging Motors
  - 2 Deep Knead™ Orbiting Shiatsu Motors


## ZONES:

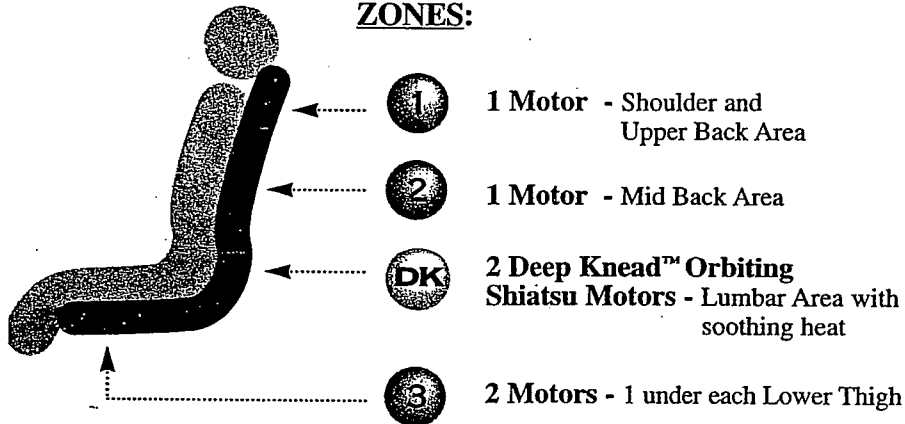

## 3 PROGRAMMABLE KEYS

*Note: Speed and Intensity are regulated by the SPEED and INTENSITY buttons (refer to SPEED and INTENSITY)*


### WAVE

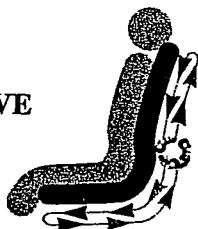

**Massaging motors cycle down and up in a wave-like sensation**

- Press WAVE
- Select any or all Zones (1-3)  
(To deactivate zone, re-press Zone Key (1-3))


### PULSE

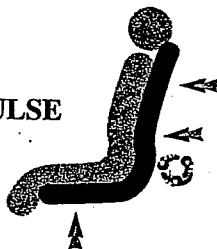

**Massaging motors pulsate on and off**


- Press PULSE
- Select any or all Zones (1-3)  
(To deactivate zone, re-press Zone Key (1-3))

### SELECT

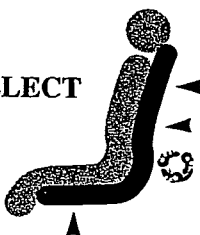

**Isolates massage area**

- Press SELECT
- Select any or all Zones (1-3)  
(To deactivate zone, re-press Zone Key (1-3))

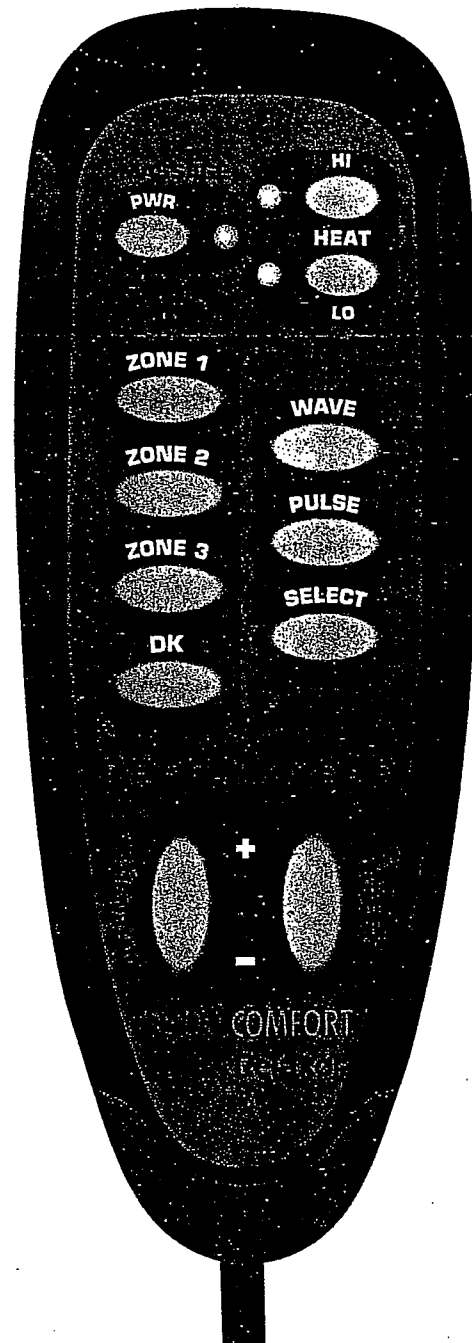


**BODY COMFORT™**  
by **Relaxor®**

# HOW TO OPERATE YOUR DEEP♦KNEAD™ SYSTEM


## DEEP♦KNEAD™

Press the DK button to activate the Deep Knead™ Orbiting Shiatsu massage. Located in the lumbar area, it perfectly complements the 4 massaging motors and is the ultimate for a complete massage.


The DEEP KNEAD™ massage feature operates independently of the main power button. Use it with or without the other 4 motor massage features and with or without heat.

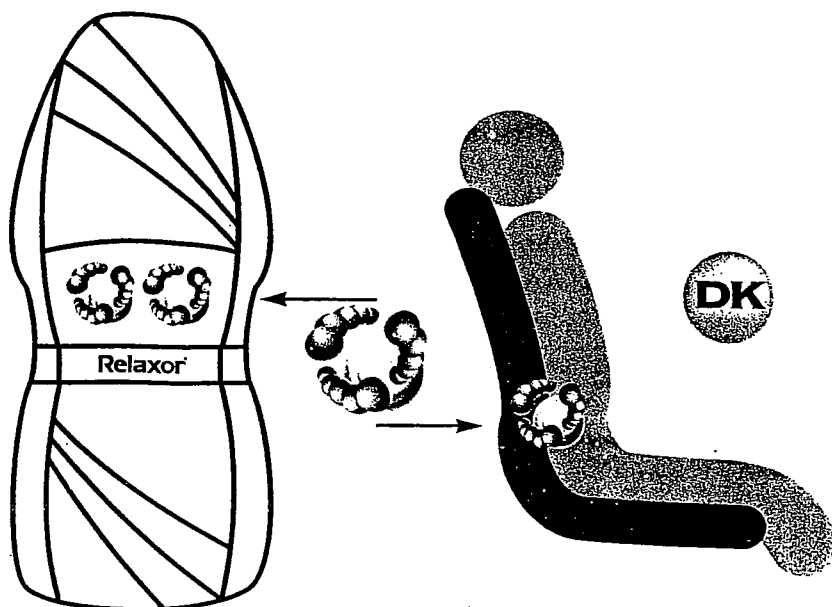

*Note: As an added benefit, the DEEP KNEAD™ feature has a built-in preset timer for 15 minutes of use with a Pressure Sensitive Activator built into the cushion. To activate, simply press DK button then lean against lumbar area of cushion (a) and Deep Kneading action begins. Lean forward and action stops (b). DEEP KNEAD™ shuts off after 15 minutes. To restart, simply press DK button again.*

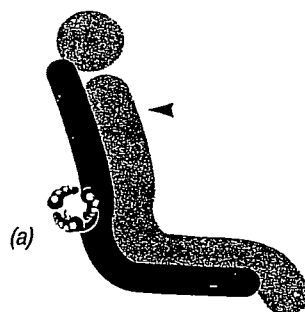


Lean back to start Deep Knead™ action.

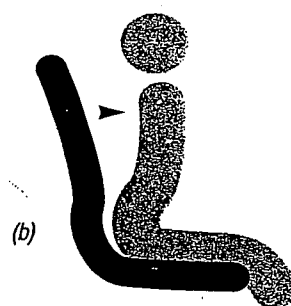

Deep Knead™ stops when leaning forward.

### INTENSITY:

- Controls strength of massage
- Press + / - keys for desired effect

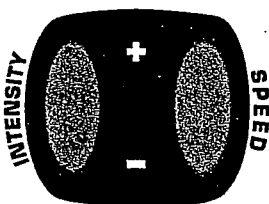

### SPEED:

- Controls cycle speed of massaging motors in WAVE and PULSE
- Press + / - keys for desired effect

# IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using the **BODYCOMFORT DEEP♦KNEAD™ ORBITOR™** Seat Topper System

## DANGER!

### To reduce risk of electric shock:

1. Always unplug the product from the electrical outlet immediately after using and before cleaning.
2. Do not reach for a product that has fallen into water. Unplug immediately.
3. Do not use while bathing or in a shower.

## WARNING!

### To reduce risk of burns, fire, electric shock, or injury to persons:

1. Your **BODYCOMFORT DEEP♦KNEAD™ ORBITOR™** product should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
2. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate the **BODYCOMFORT DEEP♦KNEAD™ ORBITOR™** product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Contact your dealer for instructions on returning it for examination and repair.
4. Close supervision is necessary when this appliance is used by, on, or near children or disabled persons.
5. Do not use outdoors.
6. Keep the cord away from heated surfaces.
7. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Use heated surfaces carefully. May cause serious burns. Do not use heated surfaces over insensitive skin areas or in the presence of poor circulation.
9. If you are under a physician's care and/or have a condition requiring the use of any medical device, please consult your health care provider prior to using this product.

## MAINTENANCE INSTRUCTIONS:

No user maintenance of this product is required. If the System does not function, be sure...


- (a) The TRANSFORMER is plugged into an electrical outlet.
- (b) The Transformer cord and COMMAND WAND cord are plugged into, and fully engaged, in their respective receptacles.

If there is a malfunction of any kind, contact your dealer for instructions on returning it for examination and repair.

# SAVE THESE INSTRUCTIONS!

**BODY COMFORT™**  
by Relaxor®

**OTHER FINE PRODUCTS FROM  
THE LEADER IN RELAXATION**


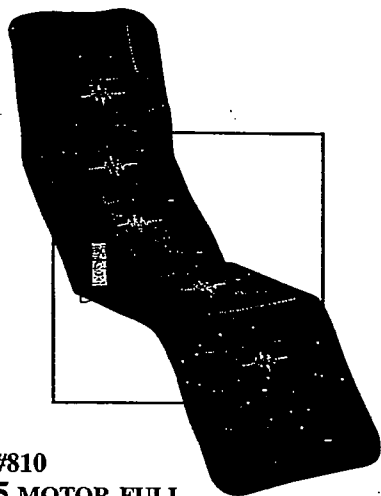


**#810**  
**5 MOTOR FULL**  
**BODY MASSAGING LOUNGER**  
**TOPPER WITH SOOTHING HEAT**

14 customized settings to create your personalized massage. Great for recliner, bed, or sofa. AC adaptor included.


**#924**  
**5 MOTOR MASSAGING**  
**SEAT TOPPER WITH**  
**SOOTHING HEAT**

Adds massage with soothing heat to any chair. 14 customized settings to create your personalized massage. AC and auto adaptor included. Great for home, office, and auto.

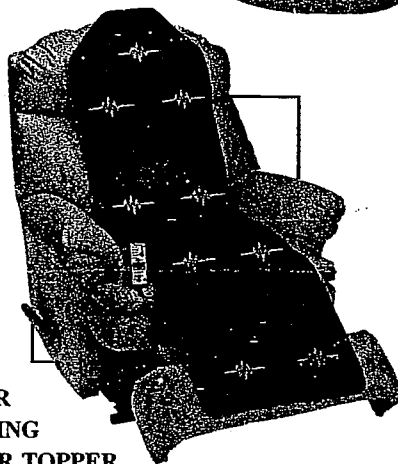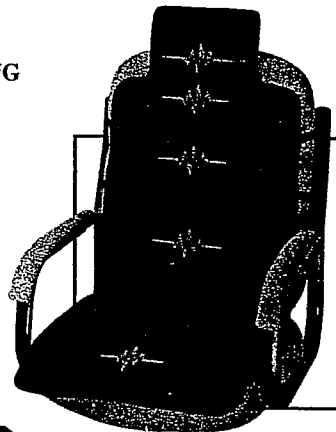

**#962**  
**9 MOTOR**  
**MASSAGING**  
**LOUNGER TOPPER**  
**WITH SOOTHING HEAT**

15 customized settings for a personal massage. Great for sofa, bed, lounge and recliner. AC adaptor included.

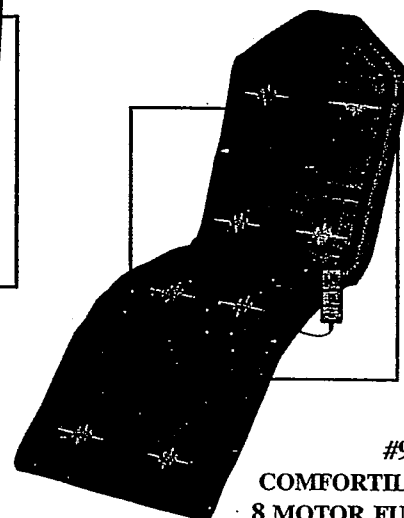

**#997**  
**COMFORTILT™**  
**8 MOTOR FULL**  
**BODY MASSAGE CUSHION**  
**WITH SOOTHING HEAT**

Multi-comfort adjustable angles and 8 massaging motors with soothing heat for an ideal massage. 15 customized settings. Removable frame makes it perfect for bed, sofa, or lounge. AC adaptor included.

**BODY COMFORT™** by Relaxor®  
*The Leader in Relaxation™*

***Relax  
and  
Enjoy!***

### Limited One Year Warranty

If your DEEP•KNEAD™ ORBITOR™ SYSTEM does not operate properly, or you need assistance for any reason, call:

Customer Service - JB Research, Inc.  
Los Angeles Corporate Office • Bellflower, CA

**1-800-RELAXOR**

Outside U.S. write to:  
Customer Service

9062 Rosecrans Ave. Bellflower, CA 90706

© Copyright 1998 JB Research, Inc.

PATENTS PENDING



#15146