


Relaxor®

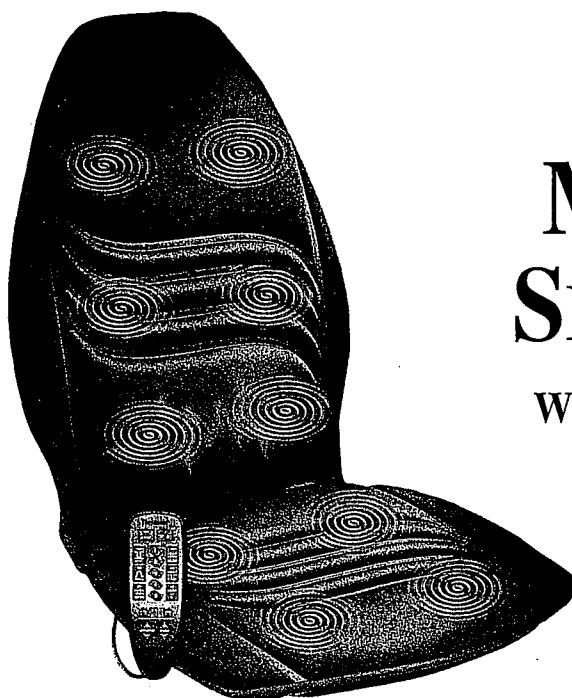

10 MOTOR
**MASSAGING
SEAT TOPPER**
WITH SOOTHING HEAT

**Model
994**

**OWNERS MANUAL and
OPERATING INSTRUCTIONS**

Dear Customer:

Thank you for purchasing the **Relaxor** 10-motor massaging seat topper with soothing heat.

This massaging product, like our other fine products, is engineered for quality, comfort and safety. It is ergonomically designed for maximum support and provides many customized settings, allowing you to create your own personalized massage.

In order to enhance your enjoyment and maximize the benefits of your new purchase, please take a few moments to read the following instructions.

Enjoy these Relaxing Benefits!

- Adds massage with soothing heat to any chair
- 10 massaging motors in 5 strategically placed zones:
 - Zone 1: (2) motors in upper back & shoulder area
 - Zone 2: (2) motors in mid back area
 - Zone 3: (2) motors in lower back/lumber area with soothing heat
 - Zone 4: (2) motors - one under each upper thigh
 - Zone 5: (2) motors - one under each lower thigh
- Membrane microprocessor controlled wand
- Dozens of programmable features
- 7 different styles of massage
 - Wave - "up and down" sensation (any or all areas)
 - Swell - For a gradual rise and decline of massage intensity
 - Select - Motors focus on specific areas
 - Pulse - Gentle throbbing
 - Tapping - Tapping sensation
 - Rhythm - Combination of tapping and continuous massage
 - Variation Therapy - Preset massage action for the top two zones
- Adjustable intensity to choose your massage strength
- Variable speed massage cycle
- 15/30 minute shut-off timer
- Durable high quality foam
- Low voltage motors enhance safety
- Instantly converts for home, office or auto use
- AC and auto adaptors included



Relaxor®

How To Operate Your 10 Motor Massaging Seat Topper with Soothing Heating

POWER:

- Turn on: Press PWR button
- Turn off: Press PWR button again
- 15 and 30 minute timers:**
 - Press PWR button:
 - Green light = 15 minute timer
 - Hold down PWR button:
 - Amber light = 30 minute timer
 - To reset after timer shuts off: Press the PWR button
 - To reset timer while on: Press PWR button twice



SOOTHING HEAT:


LO or HI

- Works independently of massage
- 30 minute timer
- To reset after timer shuts off: Press the LO or HI button
- To reset timer while on: turn HEAT off, then turn HEAT back on



((10)) Motors in 5 strategic zones


ZONES:

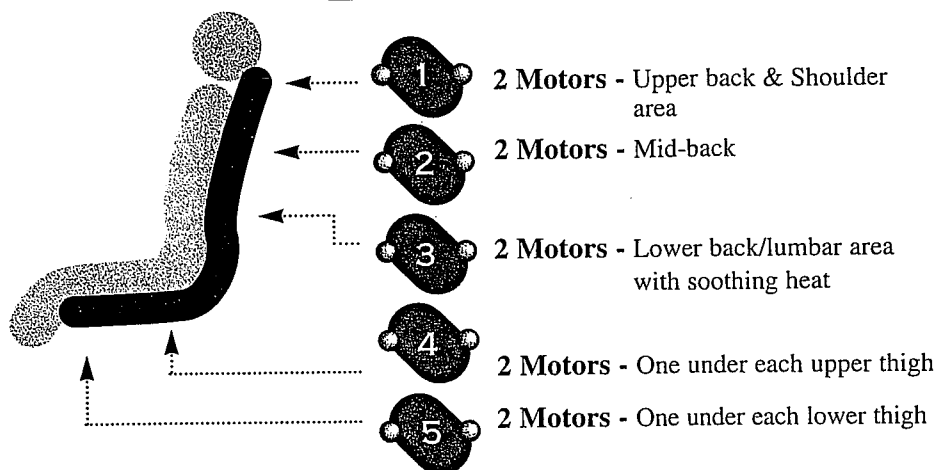

7 Different Styles of Massage

Note: Speed and Intensity are regulated by the SPEED and INTENSITY buttons (refer to SPEED and INTENSITY)


WAVE

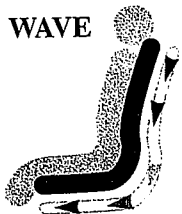

Massaging motors cycle down and up in a wave-like sensation

- Press WAVE
- Select any or all Zones (1-5)
(To deactivate zone, re-press Zone Key (1-5))


PULSE

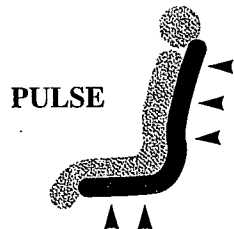

Massaging motors pulsate on and off


- Press PULSE
- Select any or all Zones (1-5)
(To deactivate zone, re-press Zone Key (1-5))

SELECT

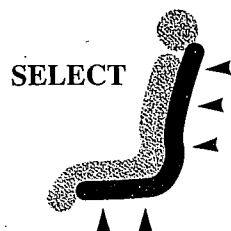

Isolates massage area

- Press SELECT
- Select any or all Zones (1-5)
(To deactivate zone, re-press Zone Key (1-5))

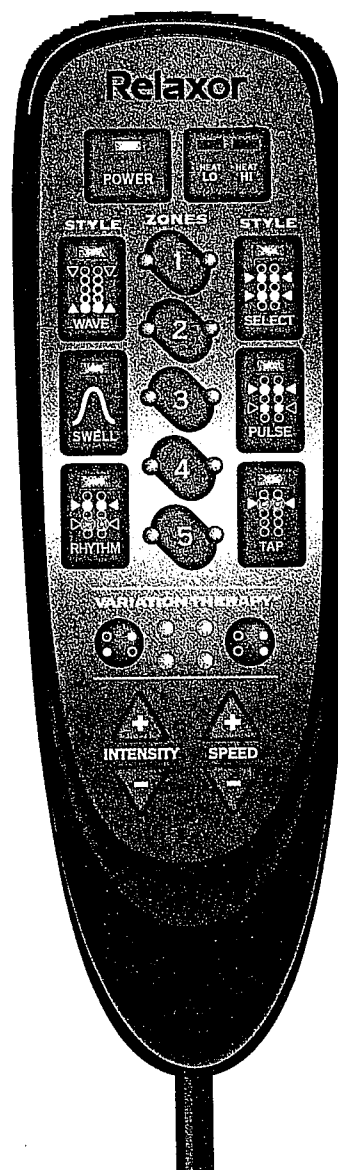

Relaxor®

How To Operate Your 10 Motor Massaging Seat Topper with Soothing Heat

SWELL



Massaging motors cycle up and down in intensity

- Press SWELL
- Select any or all zones (1-5)
(To deactivate zone, re-press Zone Key (1-5))
- To adjust the peak intensity of the SWELL feature, use the INTENSITY + / - buttons
- To adjust the cycle time of the SWELL feature, use the SPEED + / - buttons

TAPPING



Massaging motors are in tapping mode

- Press TAP
- Select any or all zones (1-5)
(To deactivate zone, re-press Zone Key (1-5))
- To adjust the speed of the TAPPING, use the SPEED + / - buttons
- To adjust the intensity of the TAPPING, use the INTENSITY + / - buttons

RHYTHM



Massaging motors will alternate in tapping and select continuous mode

- Press RHYTHM
- Select any or all zones (1-5)
(To deactivate zone, re-press Zone Key (1-5))
- To change the duration of the RHYTHM Mode, use the SPEED + / - buttons
- To adjust the intensity of the RHYTHM, use the INTENSITY + / - buttons


VARIATION THERAPY:

Two pre-set variations using the top four massaging motors in Zones 2 & 3.
(Located in shoulder/upper back and lower back areas)


Note: Speed and Intensity are regulated by the SPEED and INTENSITY buttons (refer to SPEED and INTENSITY)

MASSAGE MOTOR ACTION:

Variation Therapy lights show activated motors

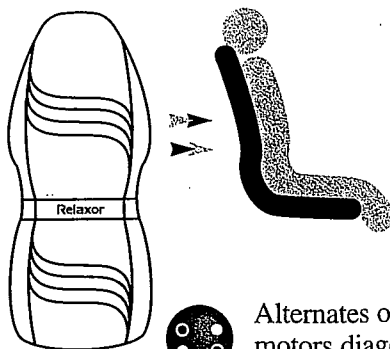

Alternates outside motors diagonally

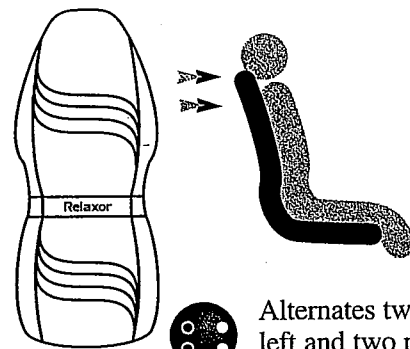

Alternates two left and two right motors

INTENSITY:

- Controls strength of massage
- Press + / - keys for desired effect



SPEED:

- Controls cycle speed of massaging motors in WAVE, PULSE, SWELL, RHYTHM, TAP, or VARIATION THERAPY
- SPEED button does not apply in SELECT (continuous) mode
- Press + / - keys for desired effect



IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using the **Relaxor** 10 Motor Massaging Seat Topper with Soothing Heat

DANGER!

To reduce risk of electric shock:

1. Always unplug the product from the electrical outlet immediately after using and before cleaning.
2. Do not reach for a product that has fallen into water. Unplug immediately.
3. Do not use while bathing or in a shower.

WARNING!

To reduce risk of burns, fire, electric shock, or injury to persons:

1. Your Relaxor product should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
2. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate the Relaxor product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Contact your dealer for instructions on returning it for examination and repair.
4. Close supervision is necessary when this appliance is used by, on, or near children or disabled persons.
5. Do not use outdoors.
6. Keep the cord away from heated surfaces.
7. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Use heated surfaces carefully. May cause serious burns. Do not use heated surfaces over insensitive skin areas or in the presence of poor circulation.
9. If you are under a physician's care and/or have a condition requiring the use of any medical device, please consult your health care provider prior to using this product.

MAINTENANCE AND CARE INSTRUCTIONS:

No user maintenance of this product is required. If the System does not function, check to be sure...

- (a) The TRANSFORMER is plugged into an electrical outlet.
- (b) The Transformer cord and COMMAND WAND cord are plugged into, and fully engaged, in their respective receptacles.

If there is a malfunction of any kind, contact your dealer for instructions on returning it for examination and repair.

How To Clean:

You may clean the seat topper with a damp cloth and warm water.

DO NOT SATURATE. Allow adequate time to dry.


SAVE THESE INSTRUCTIONS!

OPERATE
YOUR
SYSTEM
ACCORDING
TO THIS
MANUAL

USE ONLY
THE POWER
DEVICE
SUPPLIED


Relaxor®

OTHER FINE PRODUCTS FROM THE LEADER IN RELAXATION

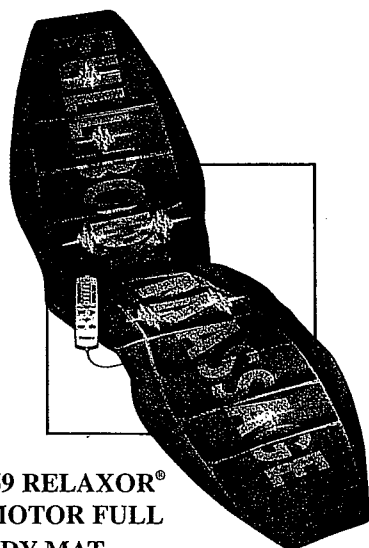


**#969 RELAXOR®
7 MOTOR FULL
BODY MAT**

Enjoy the penetrating caresses of a relaxing massage with soothing heat and the convenience of portability.

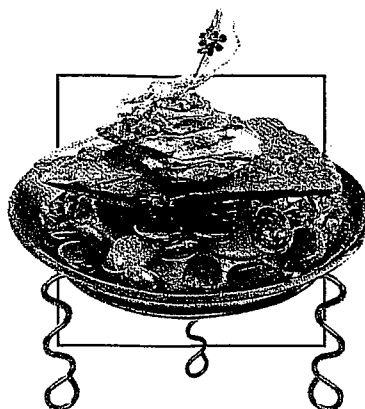


#280 CALMING POOL

Designed to capture the elements of nature by combining water, assorted stones and decorative driftwood to complement any home or office environment. AC powered.

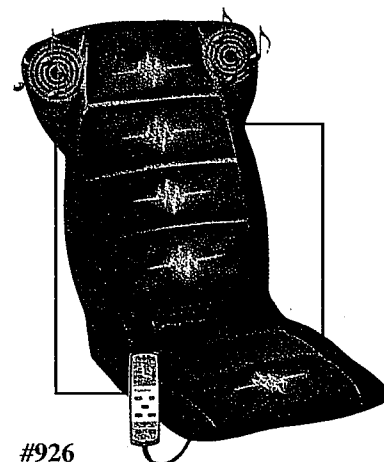

**#926
RELAXOR® SEAT TOPPER
WITH NATURE SOUNDS**

5-Motor Massaging Seat Topper with built-in stereo speakers and Nature Sounds. AC and auto adaptor included for listening in the office, home or auto.

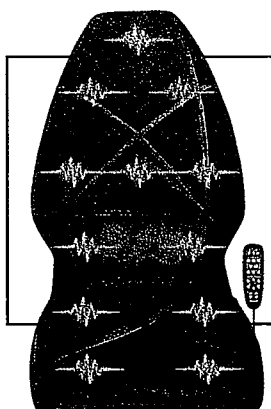


**#964 RELAXOR®
MASSAGING SEAT
TOPPER**

12 Motor Massage Seat Topper with Soothing Heat. Features dozens of settings for an all over massage. Great for home, office and auto.

**# 722
STEREO SOUND THERAPY
WITH ALARM CLOCK**

12 soothing environmental sounds to promote rest and relaxation. Full-featured clock and headphone outlet. Customize by mixing any two sounds. Battery and AC powered.

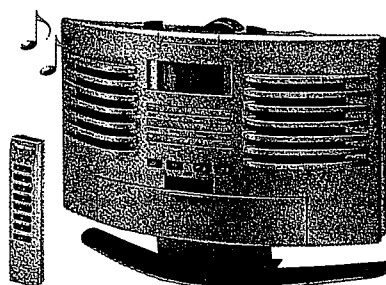

Relaxor®

The Leader in Relaxation™

Relax and Enjoy!

15180

Limited 3 Year Warranty

If your 10 MOTOR MASSAGING SEAT TOPPER does not operate properly, or you need assistance for any reason, call:

Customer Service - JB Research, Inc.
Los Angeles Corporate Office • Bellflower, CA
1-800-RELAXOR

Outside U.S. write to:
Customer Service
9062 Rosecrans Ave. Bellflower, CA 90706
© Copyright 1999 JB Research, Inc.
PATENTS PENDING



Transformer